

# **Table of Contents**

Welcom	ne to VisualCAD!	11
	1 Features Overview	11
2	2 Screen Layout	14
;	3 Quick Access Toolbar	15
4	4 Default Shortcut Keys	16
	5 Options	18
	System	20
	Display	24
	Color	
	Grid	
	Lighting	
	Dimension  Tolerance and Units	
	6 View Toolbar	
	3D Mouse	
•	7 Customize VisualCAD	42
	Customize Quick Access Toolbar	42
	Minimize Ribbon Bar	46
	Preset <alt> Accelerator Keys</alt>	46
	Customize Dialog	
	Customize the Keyboard	
	Styles Menu	55
Quick S	Start	60
Resour	ce Guide	61
VisualC	AD Menu	62
	1 New	63
2	2 Open	63
;	3 Browse	65
	4 Import	65
Į.	5 Save	68
(	6 Save As	68
•	7 Save As Template	69
;	8 Export	69
,	9 Print Menu	71
	Print	73
	Print Preview	
	Print Setup	75

	10	Options	76
		System	77
		Display	
		Color	
		Grid	
		Lighting	
		Dimension	94
		Tol. & Units	95
	11	Help & Info Menu	96
		Help Topics	
		Check for Updates	
		Go To Website	
		About VisualCAD	
	12	Exit	100
The	Rihh	oon Bar	101
1110			
	1		
		File	
		Open	
		Brow se	
		Import	
		Save	
		Save As	
		Save As Template	
		Export	
		Export Selected	
		Print Preview	
		Print	
		Plugins	
		Application Plug-ins	
		Translator Plug-ins	
		Options	
		System	118
		Display	
		Color	127
		Grid	128
		Lighting	131
		Dimension	134
		Tol. & Units	135
	2	Display	136
		View Modify	137
		Dynamic Pan View	137
		Dynamic Rotate View	138
		Dynamic Zoom	
		Fit View	
		Zoom Out	
		Zoom ln	
		Zoom Box	139
		Orient	
		Top View	
		Bottom View	140

	Front View	140
	Back View	140
	Left View	140
	Right View	141
	lso View 1-4	141
	Modes	143
	Perspective / Parallel	144
	Toggle Shading + Edges	145
	Shaded Display	145
	Wireframe Display	146
	Hidden Line Display	147
	Ghosted Display	147
	Visibility	148
	Hide/Show Grid	148
	Hide/Show WCS	148
	Viewport	149
	View port Layouts	149
	View port Menu	150
	Split View port	151
	Delete View port	
	Rename View port	
	Save View port	
	Load View port	
3	Modeling Aids	153
	Clipboard	
	Cut Selection	
	Copy Selection	
	Paste Selection	
	Selections	
	Select Menu	
	Select Points	
	Select Lines/Polylines	157
	Select Arcs/Circles	
	Select Arcs/Circles	
	Select Nurbs Curves	
	Select Polycurves	
	Select Point Clouds	
	Select Shells	
	Select Meshes	
	Select Dimensions	
	Select Open Curves	
	Select All	161
	Select None	162
	Invert Selections	162
	Select Previous	162
	Select Last	162
	Select Duplicated	162
	Select by Name	
	Select By Color	
	Select By Type	
	Select By Layer	
	Selection Mask	165
	Other Selection Techniques	
	Select Chain	

	Highlights	167
	Multi-Selections	168
	from Solid	169
	Commands	169
	Undo	170
	Redo	170
	Undo Multiple	170
	Redo Multiple	171
	Command Recall	172
	Continuous Command Recall	172
	Objects	172
	Lock Selection	
	Unlock All	173
	Hide Selection	173
	Hide Non-Selected	173
	Show All	174
	C-Plane	174
	Set to View	175
	Set to Top View	175
	Set to Bottom View	
	Set to Front View	
	Set to Back View	
	Set to Left View	
	Set to Right View	
	Set Origin	
	Set ⊟evation	
	Rotate	
	Set by 3 Pts	
	C-Plane to 3D Face	
	C-Plane to Planar Curve	
	Set by X Axis	
	Set to WCS	
	Save	
	Load	
	Background Image	
	Place Image	
	Move Image	
	•	
	Scale Image	
	Gray Scale Image	
	Image Transparency	
	Delete Image	
4	-	
4	Curve Modeling	190
	Curves	
	Point	
	Point, Mid	193
	Point, Center	
	Point, Grid	
	Point, Polar Grid	197
	Point, On Curve	198
	Line	199
	Rectangle, 2 Points	
	Rectangle, Center	
	Rectangle, 2 Points 2	203

	Rectangle, 3 Points	205
	Rectangle, Vertical	206
	Polyline	208
	Rounded Rectangle	210
	Line at Angle	212
	Line, from Mid-Point	213
	Line, Normal to	214
	Line, Normal to 2	215
	Line, Normal & Tangent	217
	Line, Tangent to	
	Line, Tangent to 2	
	Circle, Center, On Pt	
	Circle, Start, Diameter Pt	
	Circle, 3 Pts	
	Circle, Tangent to 3	
	Arc, Center, Start, Angle Pts	
	Arc, 3 Pts	
	Arc, Start, End, On	
	Ellipse, Center, Diameter, End Pt.	
	Ellipse, Diameter, End Pt	
	Ellipse, Foci.	
	Nurbs Curve	
	Text Curves	
	Text on Curve	
	Curve, Spiral	
	Curve, Helix	
	Curve, Flat Area	
	Curve, All Flat Areas	
	Silhouette Curves	
	Curve, Surface Boundary	
	Curve, Bounding Rect	245
	Section Curves	246
	Extract Curve	247
Edit	t Curves	248
	Fillet	249
	Offset	251
	Trim	252
	Extend	253
	Merge	253
	Change Start	
	Boolean	255
	Split by Curve	
	Close Curve	
	Chamfer	
	Extend by Dist	
	Reverse	
	Auto Fillet	
	Arc Fit	
	Smooth	
	Project to CPlane	
	Chain	
	Split	
	Break	
	Explode	272

	Reduce	272
	Wrap	273
5	Surface Modeling	276
_	Surfaces	
	Rectangular Plane	
	Plane from Curves.	
	Surface by 4	
	Surface by 4	
	Surface of Extrusion	
	Surface of Revolution.	
	Bi-linear Surface from 4 Points	
	Parting Plane	
	Edit Surfaces	
	Trim	
	Delete Holes	
	Project Curves	
	Reverse Normals	
_	Wrap	
6	Solid Modeling	294
	Solid Modeling	295
	Solid Box	296
	Solid Sphere	297
	Solid Cylinder	299
	Solid Cone	300
	Solid Torus	302
	Solid Extrusion	304
	Solid Revolve	305
	Solid Rectangular Tube	306
	Solid Circular Tube	308
	Solid Bounding Box	309
	Edit Solids	311
	Unify Normals	311
	Explode	312
	Stitch	313
7	Mesh Modeling	315
	Meshes	316
	Box	
	Sphere	
	Cylinder	
	Cone	
	Torus	
	Rectangular Tube	
	Circular Tube	
	Extrude	
	Revolve	
	Bounding Box	
	Edit Meshes	
	Unite	
	Subtract	
	Intersect	
8	Dimensions	
0		
	Linear Dimensions	
	Horizontal Dimension	334

		Vertical Dimension	337
		Oblique Dimension	339
		Radial Dimensions	341
		Arc/Circle Diameter	
		Arc/Circle Radius	
		3 Pt Circle Dia	
		3 Pt Circle Rad	
		3 Pt Arc Diameter	
		3 Pt Arc Radius	
		Angular Dimensions	
		Angle	
		3 Pt Angle	
		Annotations	
		Leader Line	
		Annotation	
		Dot Annotation	
	9	Analyze	360
		Measure	
		Vertex	361
		Distance	361
		3 Vertex Diameter	362
		Arc Diameter	364
		Angle	364
		Analyze	366
		Part Info	366
		Bounding Box	368
		Part Center	
		Show Surface Normals	369
	10	Transform	370
		Move by Mouse	
		Rotate 2D	
		Rotate 3D	
		Scale	
		Rectangular Scale	
		Move	
		Rotate	383
		Part Orient	
		Orient by 3 Pts	386
		Scale	
		Mirror	389
		Array	391
		Polar Array	392
		Along Path	394
		Graphical Manipulator	397
	11	Print Preview	403
Status	T	oolbar	404
	1	Coordinate input	
	2	Current Position	406
	3	Part Units	406
	4	Object Snap Control	407

		Grid Snap	407
		Ortho Snap	408
		Origin Point Snap	408
		End Point Snap	408
		Near Point Snap	409
		Mid Point Snap	409
		Center Point Snap	409
		Quad Point Snap	409
		Intersection Point Snap	410
		Vertex Point Snap	410
		Project to C-Plane Snap	410
	5	Visual Aids	411
	6	Properties	
		Edit Mode	
	7	Layer Manager	
	•		
		Layer Visibility	
		Lock Layer	
		New Layer	
		Delete Layer	421
		Duplicate Layer	421
		Duplicate Layer and Objects	421
		Reorder Layers	421
	8	Background Properties	422
Exerci	Se		423
_X0.0.			•
	1	#1: VisualCAD Preferences	423
		Accessing the Online Help	423
		Set the Display Style	423
		Set the Units to Inches	424
		Set Systems Options	424
		Set Systems Options	429
		Set Systems Options	429 431
		Set Systems Options Set to Quad Viewports The Quick Access Toolbar	
	2	Set Systems Options  Set to Quad Viewports  The Quick Access Toolbar  Viewing the Command Prompts	
	2	Set Systems Options	
	2	Set Systems Options Set to Quad Viewports The Quick Access Toolbar Viewing the Command Prompts The Status Bar #2: 2D Drawing & Dimensioning. Create Layers	
	2	Set Systems Options Set to Quad Viewports The Quick Access Toolbar Viewing the Command Prompts The Status Bar #2: 2D Drawing & Dimensioning. Create Layers Curve Drawing	
	2	Set Systems Options Set to Quad Viewports The Quick Access Toolbar Viewing the Command Prompts The Status Bar #2: 2D Drawing & Dimensioning. Create Layers Curve Drawing Using Visual Aids	
	2	Set Systems Options Set to Quad Viewports The Quick Access Toolbar Viewing the Command Prompts The Status Bar #2: 2D Drawing & Dimensioning.  Create Layers Curve Drawing Using Visual Aids More Drawing Tools	
		Set Systems Options Set to Quad Viewports The Quick Access Toolbar Viewing the Command Prompts The Status Bar #2: 2D Drawing & Dimensioning. Create Layers Curve Drawing Using Visual Aids More Drawing Tools Dimensioning	
	2	Set Systems Options Set to Quad Viewports The Quick Access Toolbar Viewing the Command Prompts The Status Bar #2: 2D Drawing & Dimensioning.  Create Layers Curve Drawing Using Visual Aids More Drawing Tools Dimensioning #3: Model a Spanner Plate	
		Set Systems Options Set to Quad Viewports The Quick Access Toolbar Viewing the Command Prompts The Status Bar #2: 2D Drawing & Dimensioning.  Create Layers Curve Drawing Using Visual Aids More Drawing Tools Dimensioning #3: Model a Spanner Plate Set to the Top View	
		Set Systems Options Set to Quad Viewports The Quick Access Toolbar Viewing the Command Prompts The Status Bar #2: 2D Drawing & Dimensioning.  Create Layers Curve Drawing Using Visual Aids More Drawing Tools Dimensioning #3: Model a Spanner Plate Set to the Top View Create Reference Points	
		Set Systems Options Set to Quad Viewports The Quick Access Toolbar Viewing the Command Prompts The Status Bar #2: 2D Drawing & Dimensioning. Create Layers Curve Drawing Using Visual Aids More Drawing Tools Dimensioning #3: Model a Spanner Plate Set to the Top View Create Reference Points Create Inner Cutouts	
		Set Systems Options Set to Quad Viewports The Quick Access Toolbar Viewing the Command Prompts The Status Bar  #2: 2D Drawing & Dimensioning.  Create Layers Curve Drawing Using Visual Aids More Drawing Tools Dimensioning  #3: Model a Spanner Plate Set to the Top View Create Reference Points Create Inner Cutouts Trim Curves	429 431 432 433 434 435 437 443 445 459 459 460 463
		Set to Quad Viewports The Quick Access Toolbar Viewing the Command Prompts The Status Bar  #2: 2D Drawing & Dimensioning.  Create Layers Curve Drawing Using Visual Aids More Drawing Tools Dimensioning  #3: Model a Spanner Plate Set to the Top View Create Reference Points Create Inner Cutouts Trim Curves Offset, Extend & Trim Curves	429 431 432 433 434 435 437 443 445 459 459 460 463
		Set Systems Options Set to Quad Viewports The Quick Access Toolbar Viewing the Command Prompts The Status Bar #2: 2D Drawing & Dimensioning. Create Layers Curve Drawing Using Visual Aids More Drawing Tools Dimensioning #3: Model a Spanner Plate Set to the Top View Create Reference Points Create Inner Cutouts Trim Curves Offset, Extend & Trim Curves Fillet Curves	429 431 432 433 434 435 437 443 445 459 459 460 463
		Set Systems Options Set to Quad Viewports The Quick Access Toolbar Viewing the Command Prompts The Status Bar #2: 2D Drawing & Dimensioning.  Create Layers Curve Drawing Using Visual Aids More Drawing Tools Dimensioning #3: Model a Spanner Plate Set to the Top View Create Reference Points Create Inner Cutouts Trim Curves Offset, Extend & Trim Curves Fillet Curves Mirror Curves	429 431 432 433 434 435 437 443 445 459 459 460 463 464 469 474
		Set Systems Options Set to Quad Viewports The Quick Access Toolbar Viewing the Command Prompts The Status Bar #2: 2D Drawing & Dimensioning.  Create Layers Curve Drawing Using Visual Aids More Drawing Tools Dimensioning #3: Model a Spanner Plate Set to the Top View Create Reference Points Create Inner Cutouts Trim Curves Offset, Extend & Trim Curves Fillet Curves Mirror Curves Merge Curves	429 431 432 433 434 435 437 443 445 459 459 460 463 464 469 474
	3	Set Systems Options Set to Quad Viewports The Quick Access Toolbar Viewing the Command Prompts The Status Bar #2: 2D Drawing & Dimensioning.  Create Layers Curve Drawing Using Visual Aids More Drawing Tools Dimensioning #3: Model a Spanner Plate Set to the Top View Create Reference Points Create Inner Cutouts Trim Curves Offset, Extend & Trim Curves Fillet Curves Mirror Curves	429 431 432 433 434 435 437 443 445 452 458 459 460 463 464 469 474

	Index	621
Find Mo	re Resources	620
	Orient the Part	609
	Other C-Plane Commands	607
	Text on a Part Face	
	Orient the C-Plane	
8	#8: Using Construction Planes	
	Create the Stock Boundary	
	Create Offset Curves	
	Create & Trim Section Curves	
	Additional Spheres	
	Polar Array the Pedal	
	Model & Scale the Pedal	
	Model & Scale the Body	
	Create new Layers	
,	•	
7	#7: Model a Daisy Decor	
	Modify the Top Access Create Section Curves	
	Model the Mounting Holes	
	Model the Top Access	
	Model the Front Access	
	Model the Body	
6	#6: Model a Connector Block	
•	Create Section Curves	
	Change Geometry Layer	
	Extrude Ejector Pin Holes	
	Extrude the Connection Wall	
	Extrude the Connection Bar	
	Revolve the Center Bosses	
	Extrude the Lower Pocket	
	Extrude the Upper Pocket	50
	Extrude the Flange	50 <sup>2</sup>
	Extrude the Body	498
5	#5: Model a Mold Insert	497
	Edit Geometry Properties	49
	Create a New Layer	493
	Model the Tube	487
	Extrude the Base Plate	48
	Draw the Base Plate Profile	48′

### Welcome to VisualCAD!



# VisualCAD 2025

Prefer Printed Documentation? Click Here!

What's New | Quick Start Play List

VisualCAD is a CAD platform that can be used to design a part file. A detailed description of the product features, User Interface, File Translators, CAD Features, Selection and Transformation tools is described in the sections below.



The VisualCAD Screen Layout

**VisualCAD Features Overview** 

**Default Shortcut Keys** 

**Customize VisualCAD Display** 

### 1.1 Features Overview

Here is an overview of the features you will find in VisualCAD:

### General Features

- Ribbon-based menu interface
- Multiple viewport layouts.
- Create, Split, Save, Load and Delete Viewports
- Large display icons for context sensitive toolbars
- Rearrange and dock multiple toolbars inside each other
- (lockable Toolbars Command Bar, Layer Manager, Property Page, Plug-in browsers - MOPS Browser, Machining Objects Browser)
- Auto Hide control for all lockable toolbars
- Print Preview and File > Print

- File > Open ... (Browse for VisualCAD part files)
- Translators include:

```
VisualCAD Part Files (*.vcp)
VisualMILL Part Files (*.vmp)
VisualTurn Part Files (*.vct)
3D Studio Files (*.3ds)
Adobe Illustrator Files (*.ai)
AMF Files (*.amf)
AutoCAD (*.dxf;*.dwg)
IGES Files (*.igs;*.iges)
LightWave Files (*.lwo)
MecSoft Region Files (*.mrg)
OBJ Files (*.obj)
Parasolid Files (*.x_t;*.x_b)
Point Cloud Files (*.cvs;*.txt;*.asc)
RAW Triangle Files (*.raw)
RHINO 3DM Files (*.3dm)
SAT Files (*.sat)
SketchUP Files (*.skp)
SLC Files (*.slc)
STEP Files (*.stp;*.step)
Stereo-lithography files (*.sla;*.stl)
Universal 3D Files (*.u3d)
VRML Files (*.wrl)
```

- Save and load C-planes
- Construction Plane (C-Plane) tools C-Plane to a 3D Face, C-Plane by X-axis, WCS and more.
- Supports 3D mouse devices from 3Dconnexion
- Auto file save with an option to set the time interval for auto save
- Recovery of file in the event of application crash
- Dynamic view rotates with animation
- Save Viewport layout in the part file
- Assign hot keys for CAD tools on ribbon bar
- Crash Recovery support

### Selection Tools

- Selections made easy. Users can select by dragging a window across the geometry in any of the viewports
- Select by Layer, Color, Type and Name

- Invert Selection
- Select Last Created and Previous
- Select by geometry types (Points, Lines/Polylines, Arcs/Circles, Polycurves, Dimensions, Surfaces)
- Rectangular Select
- Selection Mask To select only certain types of geometries from the viewport
- Selection command to select duplicate objects

### Transformation Tools

- Dynamic Move, Rotate
- Array Geometry Rectangular and Polar
- Scaling part geometry on units change
- Graphical transformation of objects using Graphical Manipulator
- Allow graphical scaling of geometry.
- Scaling using fit to rectangle

### CAD Tools

- Coordinate input for geometry creation in World and Construction planes
- Create Points, Lines, Arcs, Curves and curve editing tools
- Point cloud objects
- Create NURBS curves
- Create Text and Text on a Curve
- Curve creation visual aids
- Curve editing tools
- Surface creation tools.
- Surface Edit Tools (Trim, Project curves to surface, Wrap, Reverse Normal, Unify Normals, Explode)
- Mesh creation Tools (box, sphere, cylinder, cone, tubes, extrude, revolve)
- Mesh Boolean Tools (Unite, Subtract and Intersect)
- Solid creation tools (box, sphere, cylinder cone, torus, extrude, revolve, rectangular/circular tube)
- Solid editing tools (Unify Normals, Explode, Stitch)

- Curve extraction tools Flat area regions, Create Surface Boundary and section curves.
- Dimensioning tools (Horizontal, Vertical, Oblique, Radius, Diameter, Angular, Leader and Annotation text)
- Delete holes/cap holes
- Tool to detect open loops in curve
- Multiple line text input in create Text dialog
- Spell check in text edit box
- Project to C-plane
- Auto Fillet
- Creation of boundary curve when a topologically connected set of surfaces are selected
- Extend Curve using a distance
- Arc fits on a poly-line
- Corner rounding of a poly-line
- Create silhouette curve around a part or selected geometries parallel to the cplane
- Lock layers in layer manager
- Copy one layer to another including all geometry
- Reorder layers
- Hide and un hide objects using Ctrl H and Ctrl Alt H
- Lock and unlock objects using Ctrl L and Ctrl Alt L

# Related Topics

Welcome to VisualCAD


The VisualCAD Screen Layout

**Default Shortcut Keys** 

**Customize VisualCAD Display** 

## 1.2 Screen Layout

The VisualCAD screen layout is shown below. For high resolution displays (4K) the icons are automatically scaled to match the screen resolution.

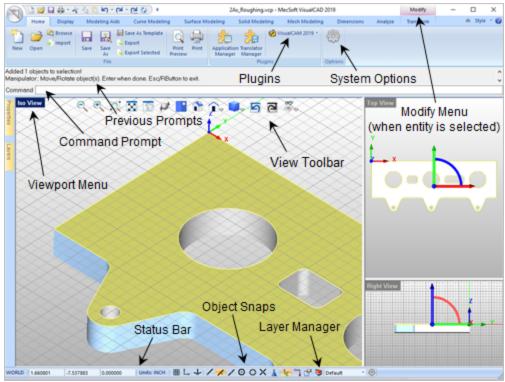

VisualCAD Screen Layout

### Related Topics

Welcome to VisualCAD


**VisualCAD Features Overview** 

**Default Shortcut Keys** 

**Customize VisualCAD Display** 


### 1.3 Quick Access Toolbar

The Quick Access Toolbar is located at the top of the VisualCAD display. It contains commands that you use on a regular basis. You can add and remove commands to the toolbar to suite your drawing needs.

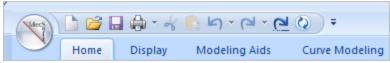

The Quick Access Toolbar

Quick Access Toolbar's Default Commands

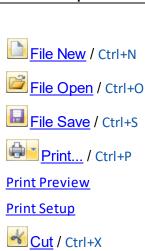







<u>Undo Multiple</u>

Redo / Ctrl+Y

Redo Multiple

**Command Recall** 

Toggle Continuous Command Recall

<u>Customize the Quick Access Toolbar</u>

## Related Topics

**Customize Quick Access Toolbar** 

**VisualCAD Features Overview** 

**Default Shortcut Keys** 

Preset < Alt > Accelerator Keys

**Customize VisualCAD Display** 

### 1.4 Default Shortcut Keys

VisualCAD installs with the following keyboard shortcuts preset. You can customize your keyboard to quickly execute many other VisualCAD commands using the <a href="Customize Quick Access">Customize Quick Access</a> <a href="Toolbar">Toolbar</a> and <a href="Customize Keyboard">Customize Keyboard</a> dialogs.

Default Keyboard Shortcuts



## Related Topics

**Customize Quick Access Toolbar** 

**Customize Keyboard** 

**Customize the Display** 

Preset < Alt> Accelerator Keys


### The VisualCAD Screen Layout

## 1.5 Options



The Home Ribbon Bar contains the Options pane. Selecting the icon will display the Options dialog shown below. This dialog allows you to set global parameters which include <a href="System">System</a>, <a href="Display">Display</a>, <a href="Color">Color</a>, <a href="Grid">Grid</a>, <a href="Lighting">Lighting</a>, <a href="Dimension">Dimension</a>, <a href="Tolerance">Tolerance</a> and <a href="Units">Units</a> preferences. This dialog can also be accessed from the <a href="Status Toolbar">Status Toolbar</a>.

Dialog Box: Options

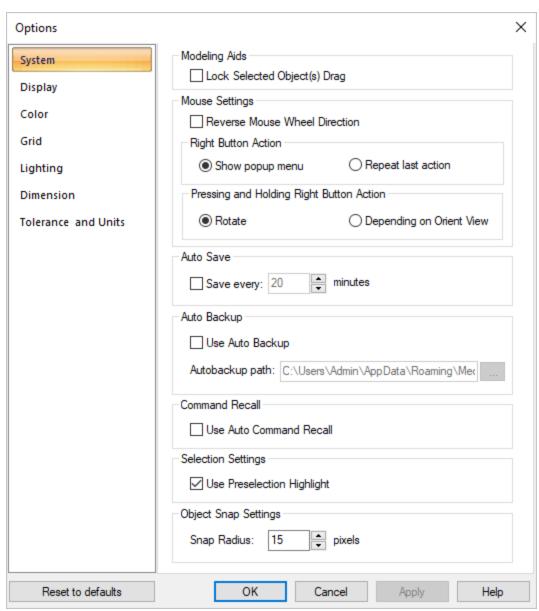

Dialog Box: Options

## Related Topics

**System** 

**Display** 

Color

Grid

Lighting

**Dimension** 

**Tolerance and Units** 


#### **Home Ribbon Bar**

### 1.5.1 **System**



Allows user to set preferences for modeling aids, mouse settings, auto save and command recall.

Dialog Box: Options > System

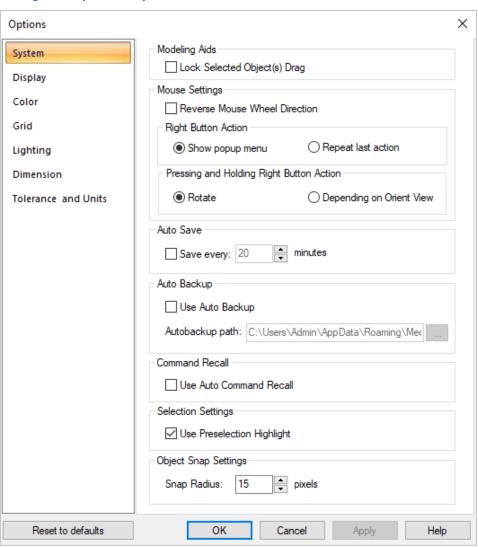

Dialog Box: Options > System

# Lock Selected Object(s) Drag

If the box is not checked, you can select a geometry object and drag it around the C-Plane. When the box is checked, the objects cannot be dragged.

### Mouse Settings


The following Mouse options are supported:


# Reverse Mouse Wheel Direction

Reverses the direction of view zooming when using the mouse wheel.

# Right Button Action

When Show pop-up menu is selected, performing a right mouse button click in the view port displays the commands in the pop-up menu.

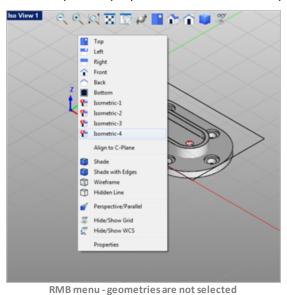

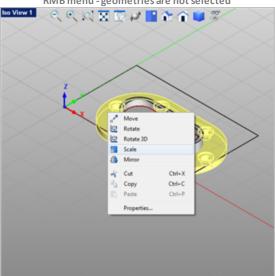

RMB menu - geometries are selected

When Repeat last action is selected, this recalls the previous command.

Pressing and Holding Right Button Action

This option tells VisualCAD what to do when the right mouse button is pressed and held.

#### Rotate

When selected, pressing and holding down the right mouse button from all views performs a Rotate on the display.

#### Depending on Orient View

When depending on orient view is selected, pressing & holding down the right mouse button from Top, Front, Right, Left, Back, Bottom views does a <u>Dynamic Pan</u> of the geometries instead of rotate. For Iso views (Iso1,2,3 & 4) it performs a <u>Rotate</u> when pressing and holding down right mouse button down.

### **AutoSave**

The AutoSave function can be used to automatically save your active part file at user-specified time intervals. AutoSave always saves to the current file name. This saved file is removed when you successfully close your model.

NOTE: Once you activate AutoSave, you will need to Exit VisualCAD and then launch VisualCAD again before AutoSave will begin saving your part files!


Under the AutoSave function, check the box next to 'Save every xx minutes' to activate the AutoSave function. The time interval can be entered in minutes.

AutoSave saves the file under:

<a href="mailto:APPDATA"><a href="mailt

# Opening an Older Version \*.vcp File

Opening an older version vcp file, displays the following dialog allowing you the opportunity to save the file to the current version.

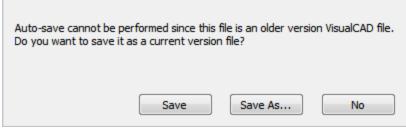

AutoSave Message

When does AutoSave Prompt me to Save a File?

Under the following conditions VisualCAD will prompt you to save your file:

- 1. When you have opened a non-native VisualCAD file.
- 2. When you have imported a file.
- 3. When you have created a new part and has not saved the file yet.

# When is the AutoSave File Deleted?

Auto save file is deleted under the following scenarios:

- 1. When the application closes normally.
- 2. When you close the file either explicitly or by opening another file.
- 3. When you select not to recover an AutoSave file that was detected on startup

## File Recovery


In the event of a computer crash or if VisualCAD is terminated abruptly by ending the process from task manager, VisualCAD will recover your file if AutoSave was active and your part file was automatically saved at least once.

If an AutoSave file has been created prior to the crash or termination, VisualCAD will detect the file located in the AutoSave folder the next time it is loaded. You are then prompted with the following dialog:



AutoSave Message

Selecting Yes, displays the following dialog, prompting you to save your file:

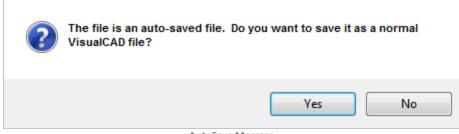

AutoSave Message

! This is the only opportunity to recover the part file. If you choose not to recover it, the AutoSave file will be removed.

### Use Auto Backup

Use this option to back up your VisualCAD files automatically. You can change the Auto Backup Path destination directory by selecting the 'browse' button.

If you have the check box checked, then the file is saved ONCE (as soon as the file is loaded) to the Auto Backup path with the same name as the original path file. This file is not deleted on exit so it can be recovered later if necessary. By default the check box to Auto Backup is unchecked.

## Use Auto Command Recall

When this option is selected, VisualCAD automatically repeats the last command without having to go back & reselect the command from the toolbar or use the right mouse button click or enter option to repeat the previous command.

# Use Preselection Highlight

When this option is selected, VisualCAD automatically highlights selections as the cursor moves over them. See <a href="Pre-Selection Highlight">Pre-Selection Highlight</a> for more information.

# Object Snap Settings


You can control the pixel radius of the object snaps located on the <u>Status Toolbar</u>. Enter the Snap Radius desired.

Related Topics
Options

### 1.5.2 Display

Controls how geometry is displayed. Select from the following:

Dialog Box: Options > Display

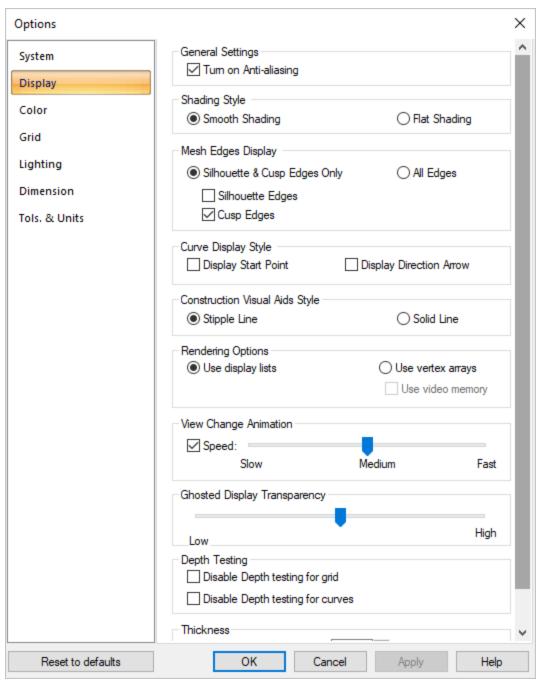

Dialog Box: Options > Display


## General Settings

#### Turn on Anti-aliasing

A method of smoothing the jagged edges along the lines and curves of text or graphics. Aliasing is caused by limited display resolution. Selecting this option turns on Anti-aliasing.

Shading Style

This controls how smooth surfaces are shaded.

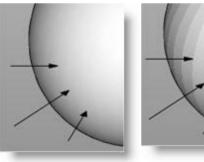


**Smooth Shading** 

Flat Shading

The pictures demonstrate the difference between smooth and flat shading. The left picture smoothly changes the amount of shading as the surface curves. The right picture just displays the shading for a flat facet on the surface. Since all surfaces (including smooth ones) are internally represented as flat facets, flat shading can affect any surface. The default is smooth shading.

# Mesh Edges Display Style

This changes how smooth surfaces are displayed. Since all surfaces are internally represented as flat facets, these facets join up along edges. On smooth surfaces, these edges are not sharp and are not normally displayed. An example of a sharp edge is the edge of a cube.

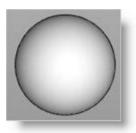




The pictures demonstrate the difference between silhouette & cusp edges only and all edge display. The left picture displays only sharp edges (there are none on a sphere); meanwhile, the right picture displays all the edges. The default is Silhouette & Cusp Edges Only. When selected, this allows you to select Silhouette Edges, Cusp Edges or All Edges to display.

# Curve Display Style


This provides an option to turn on or off display of curve start point and direction arrow.

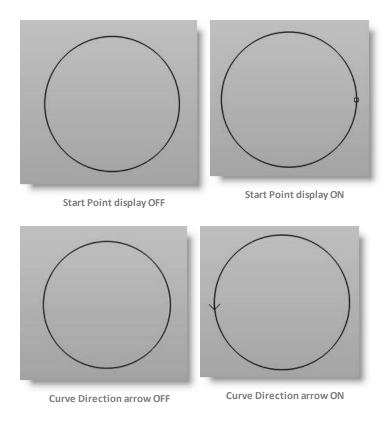


Selecting Start Point and Curve Direction arrow display under options displays both start point and curve direction arrow.

# Construction Visual Aids Style

This provides an option to choose the display style between Stipple line and Solid line for visual aids when the Visual Aids is set to active under the status bar.

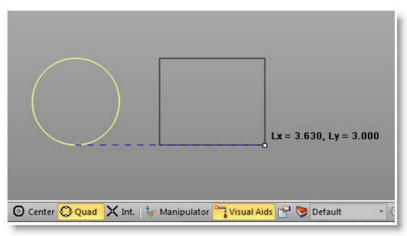

Stipple line display

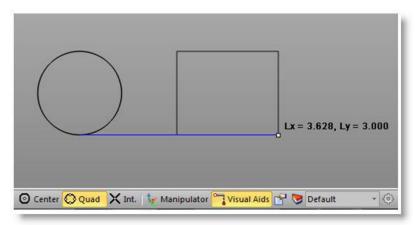

Solid line display

### Rendering Options

This can be set to Use Display Lists or Vertex Arrays. The Vertex Arrays option also provides the option to Use Video Memory from the video card that is installed on the computer. The speed and performance varies depending on the operating system type and video card installed.

# View Change Animation

Whenever the view orientation is changed within the active viewport, VisualCAD can make that orientation change instantly or through smooth animation. If animation is used, the speed of the animation can be set.

Under the View Change Animation function, check the box next to Speed to activate the animation. The animation speed can be controlled using the slider bar.

# Ghosted Display Transparency

Whenever the view mode is set to <u>Ghosted Display</u>, you can use this slider to control the transparency level of the hidden (ghosted) geometry.

## Depth Testing

These options allow you to fully display certain objects regardless of the view mode. For example, checking the box to Disable Depth Testing for curves, will display all curves even if the view is set to shaded model. You can also Disable Depth testing for grid. If enabled, the grid lines will always display.

## **Thickness**

Use this parameter to set the display line thickness for all wireframe geometry. Set this to 1 for the default line thickness. Higher for thicker lines.


## Related Topics

#### **Options**

#### 1.5.3 Color

The default colors are set using this dialog.

## Dialog Box: Options > Color

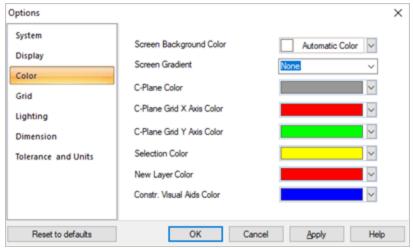

Dialog Box: Options > Color

#### • Screen Background Color

This allows user to set the viewport background color. This is the color displayed when no objects are at that position.

#### • Screen Gradient

This is a smooth change of lighting. The direction specified is the lighter side. It starts slightly darker on the opposite side of the screen and gradually gets lighter until it reaches the specified side.

#### • C-Plane Color

This changes the color of the construction plane grid.

#### C-Plane Grid X Axis Color

This changes the horizontal axis line of the construction plane.

#### • C-Plane Grid Y Axis Color

This changes the vertical axis line of the construction plane.

#### Selection Color

This is the highlight color of objects that have been selected.

#### New Layer Color

This is the default color of objects created on new (not Default) layers.

Constr. Visual Aids Color

This is the default color of construction aids when Visual Aids is set to active in the status bar.


Related Topics

**Options** 

### 1.5.4 Grid

This controls how the construction plane grid is displayed.

## Dialog Box: Options > Grid

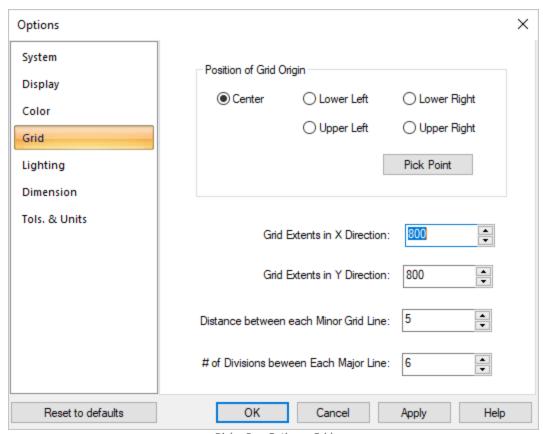

Dialog Box: Options > Grid


## Position of Grid Origin

These options will control where the grid is positioned relative to the World Coordinate System (WCS).

The grid orientation also carries over to whichever view is active, making construction easier.

#### Center


Move the center of the grid to the WCS.

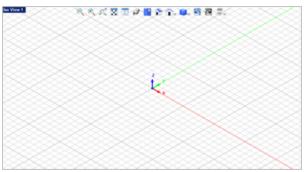

Move the center of the grid to the WCS.

### **Lower Left**


Move the lower left corner of the grid to the WCS.

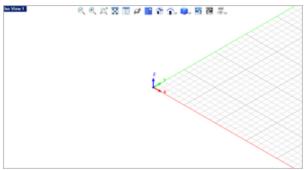

Move the lower left corner of the grid to the WCS.

### **Lower Right**


Move the lower right corner of the grid to the WCS.

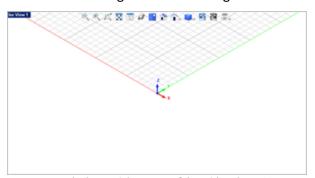

Move the lower right corner of the grid to the WCS.

### **Upper Left**


Move the upper left corner of the grid to the WCS.

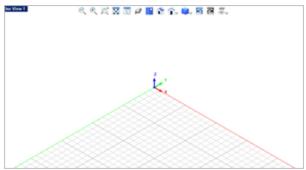

Move the upper left corner of the grid to the WCS.

### **Upper Right**

Move the upper right corner of the grid to the WCS.

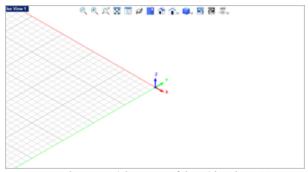


Move the upper right corner of the grid to the WCS.

### **Pick**

Use the button to pick a point on the screen and the origin of the grid will move to this location.

#### Notes:

- The point you pick is always on the default XY plane.
- If you use the Upper/Lower options above after using this Pick option, the offset distance between the WCS and the new origin of the grid remains in effect.

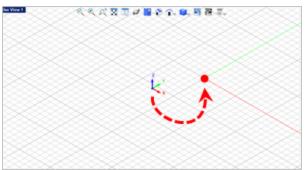

Move the the origin of the grid to this location.

# Other Grid Options

#### **Grid Extents in X Direction**


This controls how many major divisions are displayed along the X axis direction.

#### **Grid Extents in Y Direction**

This controls how many major divisions are displayed along the Y axis direction.

#### Distance between each Minor Grid Line


This controls the distance between each minor grid line.

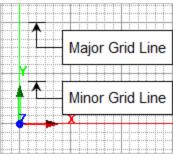

Major/Minor Grid Lines

#### # of Divisions between Each Major Line

This controls the distance between each major grid line. the number of minor rid line multiplied by the number of major grid lines will determine the overall extent of the grid.

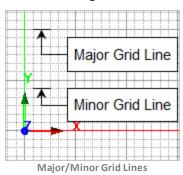


Related Topics
Options

### 1.5.5 Lighting


This controls the characteristics of lighting for the model.



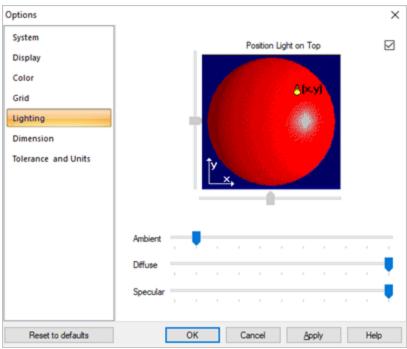

Dialog Box: Options > Lighting

There are three types of lighting: ambient, diffuse, and specular.

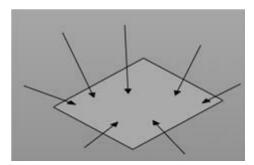


### Position Light on Top

The scene has a single light source and there are controls for setting its position. Not all lighting in the model comes directly from that one source; there is some ambient light coming in from all over. The **Position Light on Top** checkbox must be unchecked to be able to move the light source.


# **Ambient**

**Ambient** light comes in from all different directions equally. Light sources have no effect on ambient light. Shadows don't appear with only ambient light.

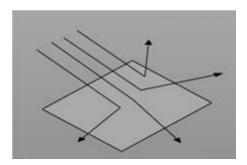


### Diffuse

**Diffuse** light comes from a single source but is scattered in all directions. Shadows appear, but there are no "shiny" spots.

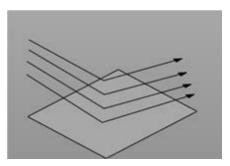


# Specular Specular


**Specular** light comes from a single source and is scattered in a single direction. It is reflective light. Shiny metal objects demonstrate good specular reflection. Shading is not a significant consideration with specular light.

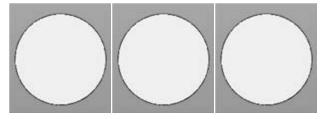

The three pictures above demonstrate ambient light as the light source moves from left to right. There is no effect since ambient light comes from all sides equally.

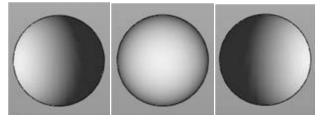

The pictures above show the effects of the motion of the light source using only diffuse lighting. There are no "shiny" spots but yet there is a direction from the light.

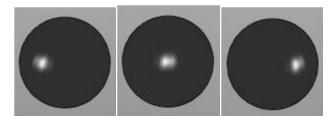


The last set of pictures uses only specular lighting. As the light source moves from left to right, the "shiny" spot follows it. However, there is nothing else lit up, so the effect is not just reflective metal.

Related Topics
Options

### 1.5.6 Dimension

This controls the appearance of dimensioning labels, arrows, and leader lines.

## Dialog Box: Options > Dimension

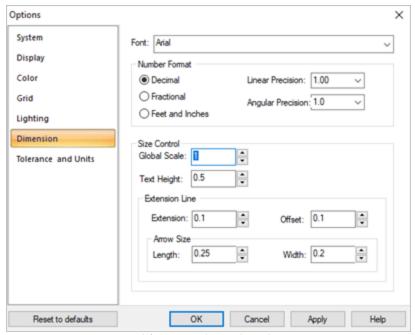


Dialog Box: Options > Dimension

Related Topics
Options

#### 1.5.7 Tolerance and Units

This controls the accuracy of the model and part units.

### Dialog Box: Options > Tolerance and Units

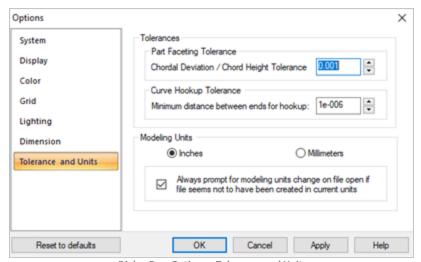

Dialog Box: Options > Tolerance and Units

#### Tolerances


This controls the accuracy of the models. Smaller tolerance numbers often result in significantly big files and slower processing time but are more accurate.


The tolerances are set in a dialog.

# Part Faceting Tolerance

#### Chordal Deviation/Chord Height Tolerance

The chord height tolerance is used in commands that require approximation of smooth curves and surfaces.

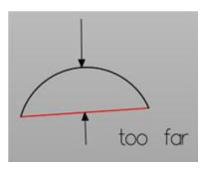

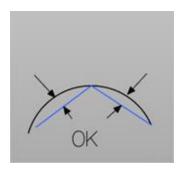

Curve Hookup Tolerance

This specifies maximum separation between the endpoints of different curves when joining them into a single curve.

### **Units**

This converts units from inches to millimeters or from millimeters to inches. If there are existing objects, a dialog will appear confirming if you really want to convert the units.



The objects remain the original size but the coordinate values change.

You can check the box to always prompt you to change the units when files are opened if they appear not to be in the correct units. For example, if the system sees a coordinate value that is quite large such as 500.5, then this dialog will display giving you the opportunity to change the units to Millimeters.


Related Topics
Options

#### 1.6 View Toolbar

The View Toolbar contains easily accessible commands that control the appearance of the currently active view. This includes motion of the camera as well as how objects are displayed. When a view change is invoked from the View Toolbar toolbar, the existing view magnification factor is maintained. The View Toolbar is displayed in the currently active Viewport.



The View Toolbar Displayed in the Active Viewport

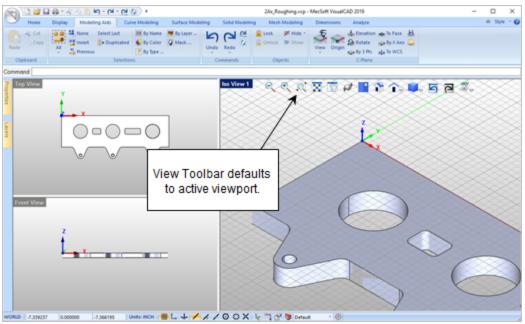

View Toolbar Displays in the Active Viewport by Default

### The View Toolbar Commands

Icon	Command/Menu	Command
9	Zoom Out	
•	Zoom In	
Q	Zoom Box	
X	<u>Fit View</u>	_
E.	<u>Dynamic Pan</u>	
ۻ	<u>Dynamic Rotate</u>	
	<u>Top View</u>	
	<u>Iso View</u>	

	Top View	<u>Top View</u>
	Front View	Front View
	Back View	Back View
	Left View	<u>Left View</u>
	Right View  Bottom View	Right View
	Isometric-1	Bottom View
	Isometric-2	
	Isometric-3	Isometric-1,2,3,4
	P Isometric-4	
	View Menu	
	Shaded Display	Shaded Display
	Toggle Shading+Edges	Toggle Shaded+Edges
	Wireframe Display	Wireframe Display
	Toggle Hidden Line	Toggle Hidden Lines
	Ghosted Display	Ghosted Display
	Parallel Projection  Display Menu	Toggle Parallel/Perspective Projection
	Previous View	These are Undo/Redo View
	Next View	commands.
<b>00</b> 0 □	Hide / Show Grid	Hide/Show Grid
	Hide / Show WCS Show/Hide Menu	Hide/Show WCS
	l .	I .

Related Topics

**Zoom Out** 

Zoom In

**Zoom Box** 

Fit View

**Dynamic Pan View** 

**Dynamic Rotate View** 

**Top View** 

**Iso View** 

**Front View** 

**Back View** 

**Left View** 

Right View

**Bottom View** 

**Shaded Display** 

Toggle Shading + Edges

Wireframe Display

Hidden Line Display

**Ghosted Display** 

Toggle Parallel/Perspective Projection

Hide/Show Grid

**Hide/Show WCS** 

#### 1.6.1 3D Mouse




VisualCAD supports 3D devices from 3Dconnexion®. It can be customized in the 3Dconnexion® Properties dialog by selecting the Button Configuration tab. Button configurations can be set for either the Left mouse button, the Right mouse button, or both and other buttons depending on the type of 3D device you are using.

Related Topics
View Tool Bar

#### 1.7 Customize VisualCAD

The VisualCAD display can be easily customized to suit your drawing needs.

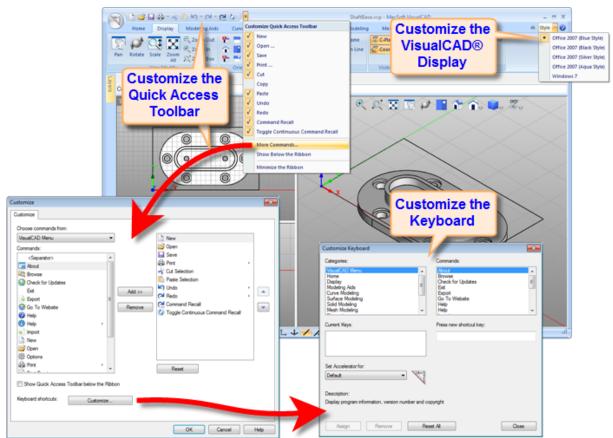

Customize VisualCAD®

### Related Topics

**Customize Quick Access Toolbar** 

Minimize Ribbon Bar

Preset < Alt> Accelerator Keys

**Customize Dialog** 

**Customize the Keyboard** 

Styles Menu


#### 1.7.1 Customize Quick Access Toolbar



You can add/remove commands to the Quick Access Toolbar and perform other User Interface customization from the Customize Quick Access Toolbar menu.

### Menu: Customize Quick Access Toolbar


Select the indicator to the right of the Quick Access Toolbar to display the menu:

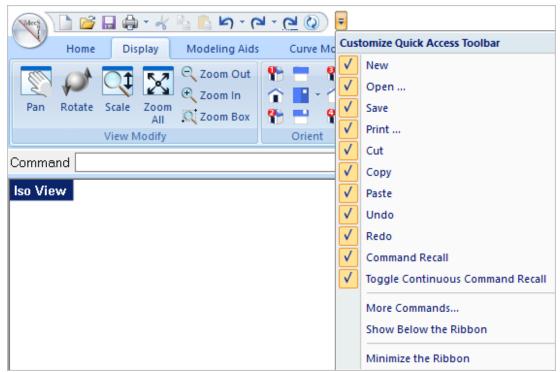

Displaying the Quick Access Toolbar Manu

# Quickly Turn Commands On/Off

Select a command from the menu to "uncheck" it and remove it from the Quick Access Toolbar. Selecting it again will add it back to the toolbar.

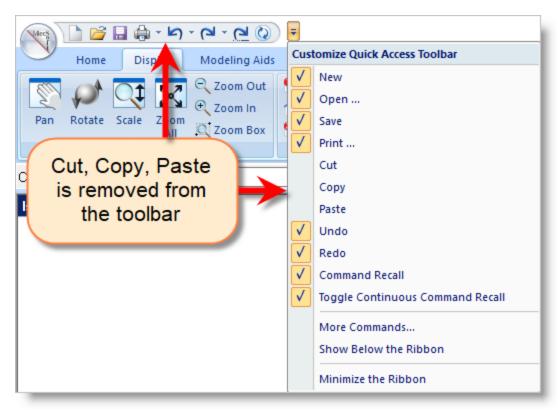


Quickly Turn Commands On/Off from the Quick Access Toolbar

#### ☐ More Commands...

You can add more commands to the toolbar by selecting More Commands ... from the Quick Access Toolbar Menu. This will display the <u>Customize</u> dialog. From this dialog you can also <u>Customize</u> the <u>Keyboard</u>.

### Show below the Ribbon


You can move the Quick Access Toolbar to reside below the Ribbon bar by selecting Show Below Ribbon from the Customize Quick Access Toolbar menu. You can also do this by selecting appropriate check box in the <u>Customize</u> dialog.

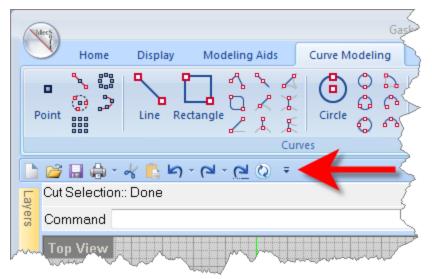

Show the Quick Access Toolbat below the Ribbon Bar

# Minimize the Ribbon Bar

You can minimize the Ribbon Bar by selecting Minimize the Ribbon from the Customize Quick Access Toolbar menu. You can then select one of the tabs to show the Ribbon Bar as needed.

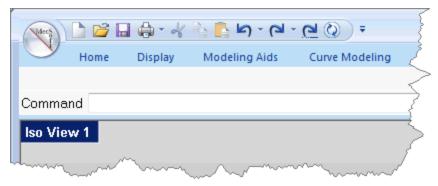

The Ribbon Bar is shown Minimized

### Related Topics

**Customize VisualCAD** 

**Customize Quick Access Toolbar** 

Preset < Alt > Accelerator Keys


**Customize Dialog** 

Customize the Keyboard

Styles Menu

#### 1.7.2 Minimize Ribbon Bar

You can minimize the Ribbon Bar by selecting Minimize the Ribbon from the Customize Quick Access Toolbar menu. You can then select one of the tabs to show the Ribbon Bar as needed.

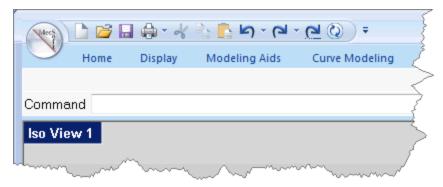

The Ribbon Bar is shown Minimized

### Related Topics

**Customize VisualCAD** 

Customize Quick Access Toolbar

Preset < Alt> Accelerator Keys

**Customize Dialog** 

Customize the Keyboard

Styles Menu

#### 1.7.3 Preset <Alt> Accelerator Keys

VisualCAD installs with Preset <Alt> Key combinations that you can use to quickly execute the various commands located on each Ribbon Bar. Refer to topic below for more information.

### **□** Using the Preset <Alt> Keys

- Press the <Alt> key on your keyboard and VisualCAD will display (and activate)
   <Alt> key assignments for the VisualCAD Menu, Quick Access Toolbar and each
   Ribbon Bar.
- 2. With the <Alt> key pressed, you can then press one of the assigned keys to execute the command or display the menu or Ribbon Bar.
- 3. To display (and activate) the <Alt> keys assigned to commands on one of the Ribbon Bars, first press the <Alt> key combination for the desired Ribbon Bar and then with the <Alt> key still pressed, press the key assigned to the desired command.

4. For example, to execute the Single Line command, press <Alt+C> to display the Curve Modeling Ribbon Bar and then press <LS> with the <Alt> key still pressed.

The preset <Alt> key assignments for each menu and command are shown below.

# Preset <Alt> Keys: Menus

The following preset <Alt> Accelerator key combinations are assigned to commands on the VisualCAD Menu, Quick Access Toolbar and Ribbon Bars as shown below. These can be displayed in VisualCAD by pressing the <Alt> key.


For example, pressing <Alt+A> will automatically display the Modeling Aids Ribbon Bar.



Preset <Alt> Keys: Menus

### Preset <Alt> Keys: Home Ribbon Bar

The following preset <Alt> Accelerator key combinations are assigned to commands on the Home Ribbon Bar.

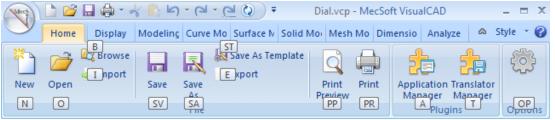

Preset <Alt> Keys: Home Ribbon Bar

### Preset <Alt> Keys: Display Ribbon Bar

The following preset <Alt> Accelerator key combinations are assigned to commands on the Display Ribbon Bar.



Preset < Alt> Keys: Display Ribbon Bar

# Preset <Alt> Keys: Modeling Aids Ribbon Bar


The following preset <Alt> Accelerator key combinations are assigned to commands on the Modeling Aids Ribbon Bar.



Preset < Alt> Keys: Modeling Aids Ribbon Bar

# Preset <Alt> Keys: Curve Modeling Ribbon Bar


The following preset <Alt> Accelerator key combinations are assigned to commands on the Curve Modeling Ribbon Bar.

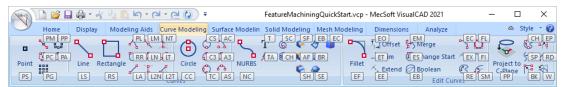

Preset < Alt> Keys: Curve Modeling Ribbon Bar

# Preset <Alt> Keys: Surface Modeling Ribbon Bar


The following preset <Alt> Accelerator key combinations are assigned to commands on the Surface Modeling Ribbon Bar.

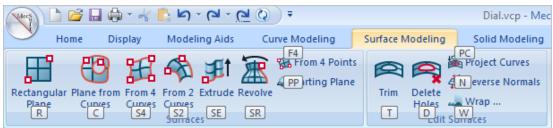

Preset <Alt> Keys: Surface Modeling Ribbon Bar

# Preset <Alt> Keys: Solid Modeling Ribbon Bar


The following preset <Alt> Accelerator key combinations are assigned to commands on the Solid Modeling Ribbon Bar.

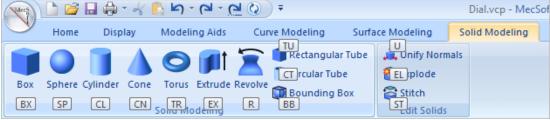

Preset <Alt> Keys: Solid Modeling Ribbon Bar

# Preset <Alt> Keys: Mesh Modeling Ribbon Bar

The following preset <Alt> Accelerator key combinations are assigned to commands on the Mesh Modeling Ribbon Bar.

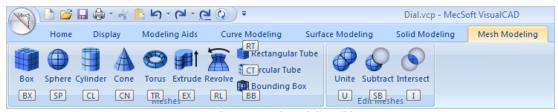

Preset <Alt> Keys: Mesh Modeling Ribbon Bar

# Preset <Alt> Keys: Dimensions Ribbon Bar


The following preset <Alt> Accelerator key combinations are assigned to commands on the Dimensions Ribbon Bar.



Preset <Alt> Keys: Dimensions Modeling Ribbon Bar

# Preset <Alt> Keys: Analyze Ribbon Bar


The following preset <Alt> Accelerator key combinations are assigned to commands on the Analyze Ribbon Bar.

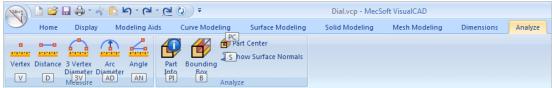

Preset <Alt> Keys: Analyze Ribbon Bar

# Preset <Alt> Keys: Transform Ribbon Bar

The following preset <Alt> Accelerator key combinations are assigned to commands on the Transform Ribbon Bar.

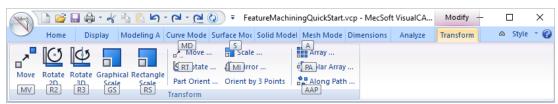

Preset < Alt > Keys: Transform Ribbon Bar

### Related Topics

**Customize VisualCAD** 

**Customize Quick Access Toolbar** 

Minimize Ribbon Bar

**Customize Dialog** 

Customize the Keyboard


Styles Menu

#### 1.7.4 Customize Dialog

The Customize dialog shown below allows you to add new command icons to the <u>Quick Access</u> <u>Toolbar</u>. From this dialog you can also <u>Customize the Keyboard</u> to execute VisualCAD commands quickly. Refer to the following topics for information.

# Dialog Box: Customize

In the dialog shown below, the command icons currently assigned to the <u>Quick Access</u> <u>Toolbar</u> are listed on the right. The command icons from the <u>VisualCAD Menu</u> and each <u>Ribbon bar</u> are shown on the left.

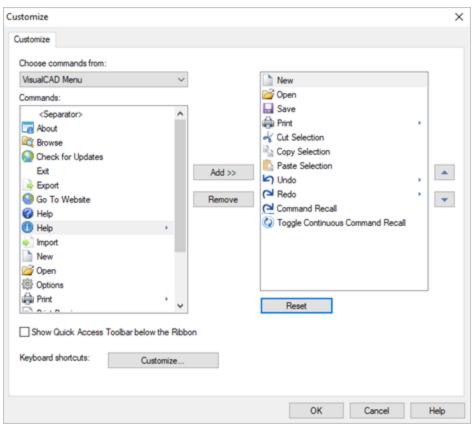

Dialog Box: Customize

### Choose commands from:

Select a <u>Ribbon bar</u> from the drop-down list. The commands on the selected Ribbon will be listed in the <u>Commands</u>; window.

#### Commands:


This window lists all of the commands on the <u>Ribbon bar</u> selected from the Choose commands from: list. Select a command from the list and then pick the Add >> button to add it to the list on the right.

# Add >> / Remove

The Add >> button adds a selected command from the Commands: list on the left to the list on the right. The Remove button removes a selected command from the list on the right.


### Selected Commands List

The list on the right shows all of the commands that are currently being displayed on the <u>Quick Access Toolbar</u>. The order of the commands in the list determines the order of the command icons in on the <u>Quick Access Toolbar</u>.

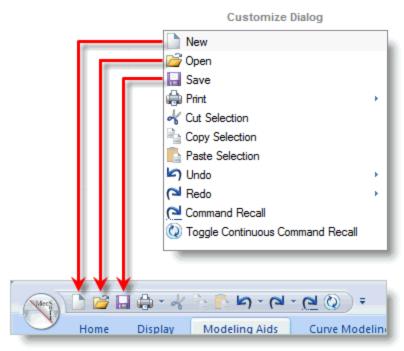

Quick Access Toolbar

The icon to the left of a command in the list indicates that this command has a submenu that will also be included on the Quick Access Toolbar.

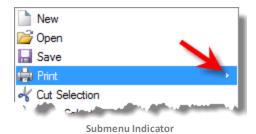


Pick the Up or Down buttons to move a selected command higher (to the left) or lower (to the right) on the Quick Access Toolbar.

#### Reset

Select the Reset button to return the list on the right to the <u>Quick Access Toolbar's</u> default list of commands.

# Show Quick Access Toolbar below Ribbon

Checking this box will force the <u>Quick Access Toolbar</u> to display below the <u>Ribbon bar</u>. You can also do this by selecting Show Below the Ribbon from the <u>Customize Quick Access Toolbar</u> menu.

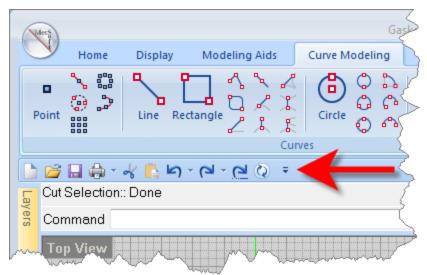

Show the Quick Access Toolbat below the Ribbon Bar

### Keyboard Shortcuts / Customize

Select the Customize... button to display the <u>Customize Keyboard</u> dialog. From this dialog you can then reassign shortcut keys to any command on the various <u>Ribbon</u> <u>bars</u>.

### Related Topics

**Customize VisualCAD** 

**Customize Quick Access Toolbar** 

Minimize Ribbon Bar

Preset < Alt> Accelerator Keys

**Customize Dialog** 

Styles Menu


#### 1.7.5 Customize the Keyboard

Invoked by the <u>Customize dialog</u>, the <u>Customize Keyboard</u> dialog shown below allows you to redefine the <u>Default Shortcut Keys</u> assigned to your keyboard. Keyboard shortcuts are combinations of keys that can be pressed to execute a <u>VisualCAD</u> command. Pressing the shortcut keys does the same thing as moving the cursor to the toolbar / menu item and selecting the command, thus saving time and promotes the continuous flow of your work.

Keyboard shortcuts are also called hot-keys.

#### Dialog Box: Customize Keyboard

In the dialog shown below, the <u>C-Plane by 3 Points</u> command located on the <u>Modeling</u> <u>Aids Ribbon bar</u> is being assigned to the keyboard short keys <u>Ctrl+Shift+3</u>. The dialog also informs you that those keyboard shortcut keys have not previously been assigned. Each section of the dialog is described in detail below.

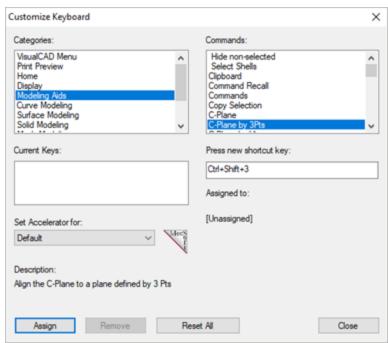

Dialog Box: Customize Keyboard

Categories:

This section lists all of the individual panes on each ribbon bars as well as each ribbon bar. Select a category and the commands located on that ribbon bar/pane will be listed on the right within the Commands list.

### Commands:

This section lists all of the commands located on the <u>Ribbon bar or Pane</u> selected from the <u>Categories</u> section on the left. Select a command from the list to assign a new shortcut keys or to reassign its current shortcut keys.

# **Current Keys:**

If the command selected from the Commands list has a shortcut key assigned to it, it will be displayed in the Current Keys: windows. This window is for information purposes and cannot be edited.

# Press new shortcut key:

After selecting a command from the Commands:, place the mouse cursor in this field to activate it. Then from the keyboard, press the shortcut keys that you want to assign to the command.

If the keyboard shortcut keys are currently assigned to another command, that command is listed under the Assigned to: section directly below this field. \* If you pick the Assign button, the shortcut keys will be reassigned!

### Assigned to:

If the keyboard shortcut keys you entered in the Press new shortcut key: fields are currently assigned to another command, that command is listed under the Assigned to: section.

### Set Accelerator for:

This sets the keyboard accelerator. Currently only Default is available on the list which sets the accelerator for VisualCAD.

# Description:

After you select a command from the Commands: list a description of the command is shown under this section. Refer to the example dialog shown above as a reference.

# Assign / Remove / Reset All

Once you are certain about the selected command and the new shortcut keys, pick the Assign button to associate them. VisualCAD will then execute the command

when those shortcut keys are pressed.

Related Topics

**Customize VisualCAD** 

**Customize Quick Access Toolbar** 

Minimize Ribbon Bar

Preset < Alt> Accelerator Keys

**Customize Dialog** 

**Styles Menu** 


### 1.7.6 Styles Menu

You can select different themes to change how the windows appear. The borders, colors, highlighting, and shadowing of standard buttons, dialogs, and windows are controlled by which theme is selected.






Office 2007 (Blue Style)

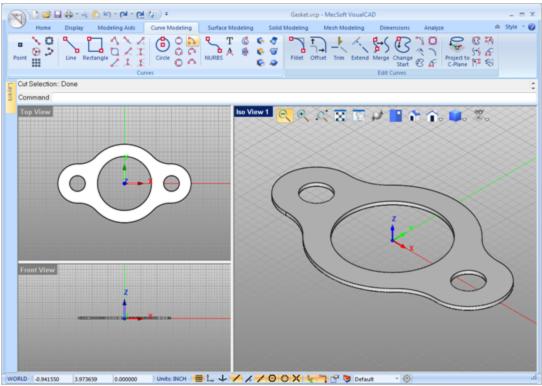


Office 2007 (Blue Style)

# Office 2007 (Black Style)

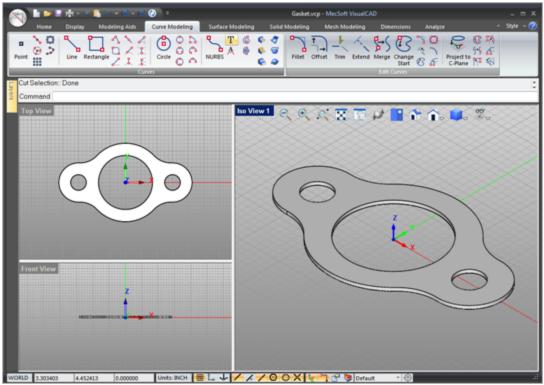


Office 2007 (Black Style)

# Office 2007 (Silver Style)

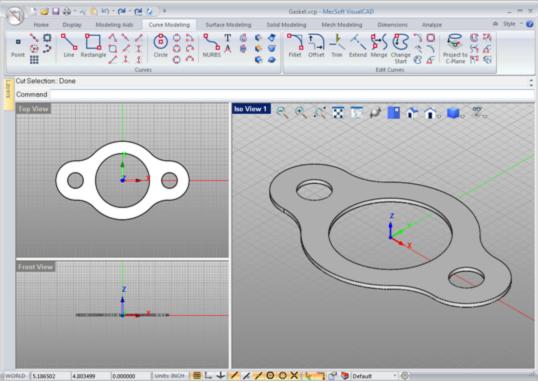


Office 2007 (Silver Style)

Office 2007 (Aqua Style)

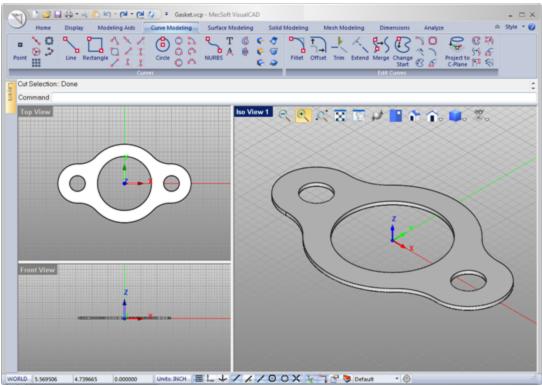

Office 2007 (Aqua Style)

# Windows 7

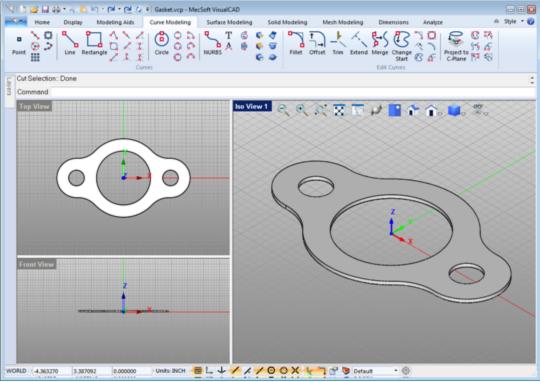

Windows 7

# Related Topics

<u>Customize VisualCAD</u>

<u>Customize Quick Access Toolbar</u>

Minimize Ribbon Bar

Preset <Alt> Accelerator Keys

**Customize Dialog** 

**Customize the Keyboard** 

### **Quick Start**



# VisualCAD 2025

Prefer Printed Documentation? Click Here!

What's New | Quick Start Play List

Quick Start Guides for each VisualCAD module are available in both PDF and Video format. Refer to the following information to access these resources:

Training Guides (Click on Image to Download)




Related Topics
Find More Resources

### **Resource Guide**

Download this PDF Guide for a list of the available VisualCAD Resources.

2025 VisualCAD Resource Guide

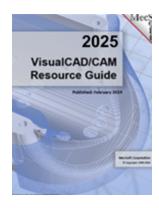

### The 2025 VisualCAD Resource Guide!

18 Pages

Lists PDF downloads and Online resources including Quick Start Guides, Reference Guides, Exercise Guides, Tutorials and More.


<u>Prefer Printed Documentation? Click Here!</u>

<u>What's New | Quick Start Play List</u>

### VisualCAD Menu

The VisualCAD Menu controls for manipulating files, printing, and exiting the program. The most recently opened VCP file names are listed for easy access. If one of those names is selected, that file will be loaded. All current work will be overwritten by the loaded file.

### Show me the File Menu

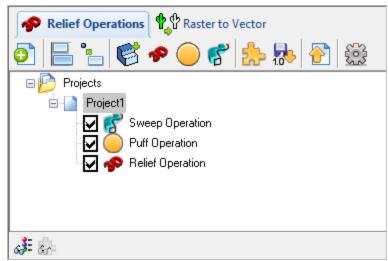

File Menu

### Related Topics

New

Open ...

Browse ...

Import ...

Save

Save As ...

Export ...

Print ...

**Print Preview** 

Print Setup ...

Options ...

Help & Info

**Help Topics** 

**Check for Updates** 

Go To Website

**About VisualCAD** 

**Exit** 

#### 4.1 New



Create a new VCP (VisualCAD Part) file. The file holds the geometry, layers, orientation, and preferences. If there are unsaved objects, a dialog will ask you if they want to save them before creating the new VCP file. All current work will be overwritten by the new file.

Related Topics


<u>File</u>

### 4.2 Open ...



Open an existing VCP (VisualCAD Part) file or one of the <u>supported file types</u>. The file holds the geometry, layers, orientation, and preferences. If there are existing unsaved objects, a dialog will ask you if you want to save them before opening the VCP file. All current work will be overwritten by the loaded file.

### Dialog Box: Open

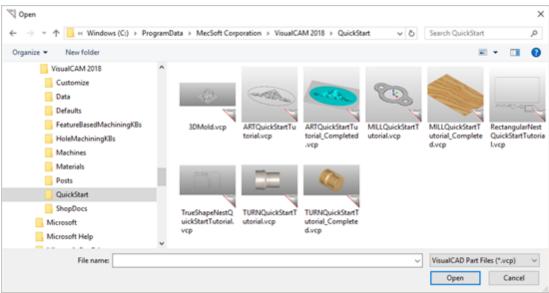

Dialog Box: Open

Standard Windows® File Browser supports preview of VisualCAD \*.vcp drawings and models.

### Files of Type Supported

The following file types are supported by VisualCAD. See <u>File Open</u> and <u>File Import</u> for more information

- VisualCAD Part Files (\*.vcp)
- VisualMILL Part Files (\*.vmp)
- VisualTurn Part Files (\*.vct)
- 3D Studio Files (\*.3ds)
- Adobe Illustrator Files (\*.ai)
- AMF Files (\*.amf)
- AutoCAD (\*.dxf;\*.dwg)
- IGES Files (\*.igs;\*.iges)
- LightWave Files (\*.lwo)
- MecSoft Region Files (\*.mrq)
- OBJ Files (\*.obj)
- Parasolid Files (\*.x\_t;\*.x\_b)
- Point Cloud Files (\*.cvs; \*.txt; \*.asc)
- RAW Triangle Files (\*.raw)
- RHINO 3DM Files (\*.3dm)
- SAT Files (\*.sat)
- SketchUP Files (\*.skp)
- SLC Files (\*.slc)
- STEP Files (\*.stp;\*.step)
- Stereo-lithography files (\*.sla;\*.stl)
- Universal 3D Files (\*.u3d)
- VRML Files (\*.wrl)

### Related Topics

File

Import ...

Save

Save As ...

Browse...

#### VisualCAD Part Files (\*.vcp) VisualCAD Part Files (\*.vcp) VisualMill Part Files (\*.vmp) VisualTurn Part Files (\*.vtp) 3D Studio Files (\*.3ds) Adobe Illustrator Files (\*.ai) AMF Files (\*.amf) AutoCAD Files (\*.dxf;\*.dwg) IGES Files (\*.igs;\*.iges) LightWave Files (\*.lwo) MecSoft Region Files (\*.mrg) OBJ Files (\*.obj) Parasolid Files (\*.x\_t;\*.x\_b) Points Cloud Files (\*.csv;\*.txt;\*.asc) RAW Triangle Files (\*.raw) Rhino 3DM Files (\*.3dm) SAT Files (\*.sat) SketchUp Files (\*.skp) SLC (\*.slc) STEP Files (\*.stp;\*.step) Streo-Lithography Files (\*.sla;\*.stl) Universal 3D Files (\*.u3d) VRML Files (\*.wrl) All Files (\*.\*)


File Types Supported

#### 4.3 Browse ...



Visually browse files on the computer. VCP files can be opened. A preview window will show the last view displayed when the original file was saved.

### Dialog Box: VisualCAD® File Browser

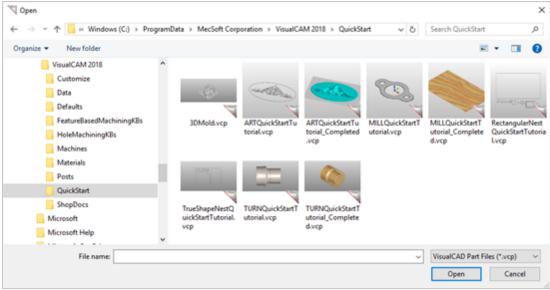

Dialog Box: VisualCAD® File Browser

### Related Topics

File Menu

Import ...

Save


Save As ...

### 4.4 Import ...



Open existing files made by other programs. This is used to transfer information, normally geometric models. Currently, VisualCAD can import the following formats:

Dialog Box: Import

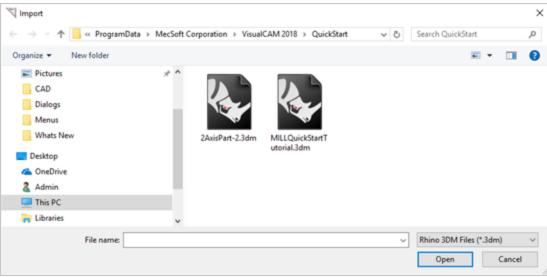


Dialog Box: Import

Standard Windows® File Browser supports preview of VisualCAD \*.vcp drawings and models.

### Import Multiple Files

You can Import multiple files at the same time. To do so, first press and hold the <Ctrl> key while selecting the files from the Import dialog. Each file will highlight and also be listed together in the File name field at the bottom of the dialog. When done selecting files, pick the Open button.

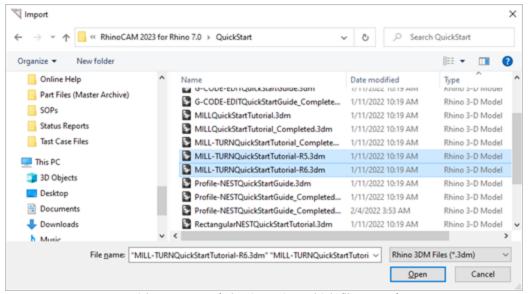

Dialog Box: Import (When importing multiple files at once)

Standard Windows® File Browser supports preview of VisualCAD \*.vcp drawings and models.

Files of Type Supported

The following file types are supported by VisualCAD. See <u>File Open</u> and <u>File Import</u> for more information

- VisualCAD Part Files (\*.vcp)
- VisualMILL Part Files (\*.vmp)
- VisualTurn Part Files (\*.vct)
- 3D Studio Files (\*.3ds)
- Adobe Illustrator Files (\*.ai)
- AMF Files (\*.amf)
- AutoCAD (\*.dxf;\*.dwg)
- IGES Files (\*.igs;\*.iges)
- LightWave Files (\*.lwo)
- MecSoft Region Files (\*.mrg)
- OBJ Files (\*.obj)
- Parasolid Files (\*.x\_t;\*.x\_b)
- Point Cloud Files (\*.cvs; \*.txt; \*.asc)
- RAW Triangle Files (\*.raw)
- RHINO 3DM Files (\*.3dm)
- SAT Files (\*.sat)
- SketchUP Files (\*.skp)
- SLC Files (\*.slc)
- STEP Files (\*.stp; \*.step)
- Stereo-lithography files (\*.sla;\*.stl)
- Universal 3D Files (\*.u3d)
- VRML Files (\*.wrl)

### Related Topics

File

**Export** 

Save

Save As

Browse...

#### VisualCAD Part Files (\*.vcp)

VisualCAD Part Files (\*.vcp) VisualMill Part Files (\*.vmp)

VisualTurn Part Files (\*.vtp)

3D Studio Files (\*.3ds)

Adobe Illustrator Files (\*.ai)

AMF Files (\*.amf)

AutoCAD Files (\*.dxf;\*.dwg)

IGES Files (\*.igs;\*.iges)

LightWave Files (\*.lwo)

MecSoft Region Files (\*.mrg)

OBJ Files (\*.obj)

Parasolid Files (\*.x\_t;\*.x\_b)

Points Cloud Files (\*.csv;\*.txt;\*.asc)

RAW Triangle Files (\*.raw)

#### Rhino 3DM Files (\*.3dm)

SAT Files (\*.sat)

SketchUp Files (\*.skp)

SLC (\*.slc)

STEP Files (\*.stp;\*.step)

Streo-Lithography Files (\*.sla;\*.stl)

Universal 3D Files (\*.u3d) VRML Files (\*.wrl)

All Files (\*.\*)

File Types Supported

#### 4.5 Save



Save geometry, layers, orientation, and preferences in a VCP file. If saving for the first time, you can name the file and select where on the computer to save the file. If the file had been saved previously, the current information overwrites the original information.


Related Topics
File

#### 4.6 Save As ...



Save geometry, layers, orientation, and preferences in a VCP file. Name the file and select where on the computer to save it. If selecting an existing file, the current information will overwrite the original information. See <a href="Export...">Export...</a> to save as different file types.

### File Save As dialog box

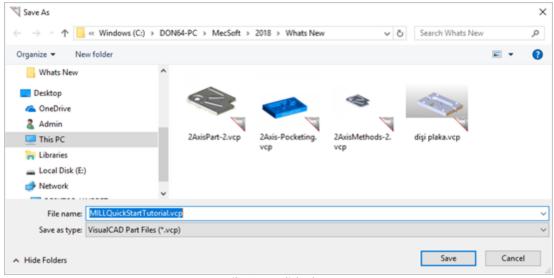

File Save As dialog box

- Save as Files Types Supported
  - VisualCAD Part Files (\*.vcp)
- Related Topics

File


#### 4.7 Save As Template

Use this to save VisualCAD® preferences (<u>System</u>, <u>Display</u>, <u>Color</u>, <u>Grid</u>, <u>Lighting</u>, <u>Dimension</u>, <u>Tolerance and Units</u>) in the \*.vcp file. This template file can then be used to begin new VisualCAD drawings.

### 4.8 **Export** ...

Save geometry in a neutral file format (can be read by many different programs). The following export translators are available. Binary formats are usually much smaller in size, but ASCII formats are more easily read. Ordinary text programs can read the ASCII files.


### Dialog Box: Export To

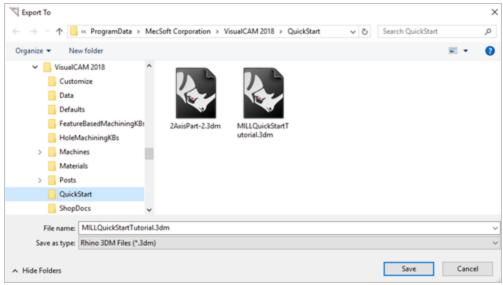

Dialog Box: Export To

### **Export File Types Supported**


The following file types are supported by VisualCAD during Export:

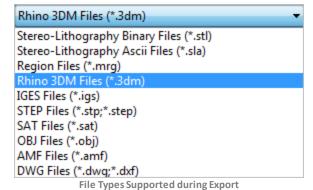

- Stereo-Lithography Binary (\*.stl)
- Stereo-Lithography ASCII (\*.sla)
- Region Files (\*.mrg)
- Rhino (\*.3dm)
- IGES (\*.igs)
- STEP Files (\*.stp; \*.step)
- SAT Files (\*.sat)
- OBJ Files (\*.obj)
- AMF Files (\*.amf)
- DWG Files (\*.dxf; \*.dwg)

# Exporting to Dwg/Dxf formats

When you select the Dwg/Dxf export File Type, the file is exported to \*.dwg format by default. If you would like to export the file in \*.dxf format, you will need to enter the file extension to the end of the file name (i.e., Example.dxf).

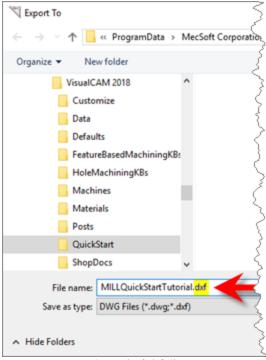

Exporting to the \*.dxf File Type

Related Topics

File

Import ...

<u>Save</u>

Save As ...


Browse...

### 4.9 Print Menu



Moving the mouse cursor over the Print ... button from the <u>VisualCAD</u> <u>Menu</u> will display additional print options. You can also select (left-click) on this button to execute the <u>Print</u> command.

VisualCAD Menu > Print ...

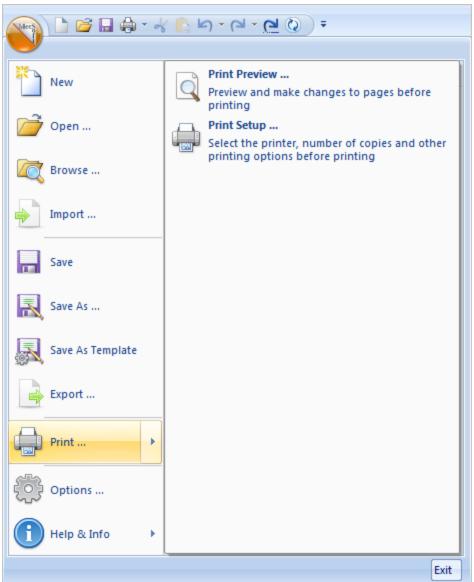

VisualCAD® Menu > Print ...

# Related Topics

VisualCAD Menu

Print ...

Print Preview ...


Print Setup ...

#### 4.9.1 Print



Prints the objects displayed. If multiple views are displayed, the currently selected view will be printed. The standard Windows® Print dialog box is displayed.

### The standard Windows® Print dialog

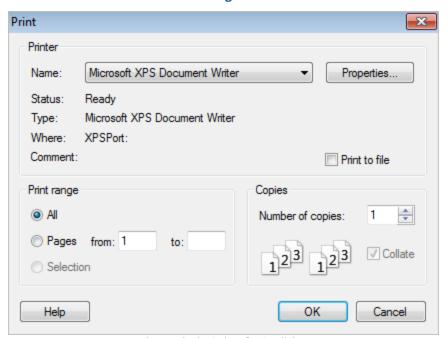

The standard Windows® Print dialog

### Related Topics

VisualCAD Menu

**Print Menu** 

Print Setup ...


Print Preview ...

#### 4.9.2 Print Preview ...



This shows a picture of what will be printed. The picture can be printed from here along with the additional controls listed below.


Print Preview Display

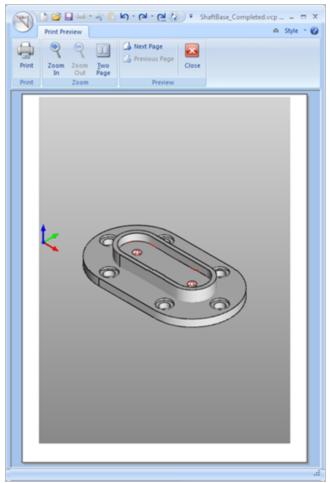

File > Print Preview Display

### Print Preview Controls

The following controls are available from the Print Preview ribbon bar:

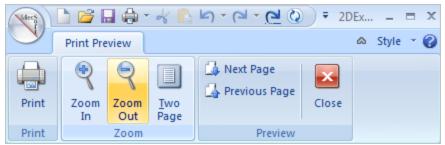


Print Preview Ribbon Bar

- Print
- Zoom In/Out
- Two Page
- Next Page


- Prev Page
- Close
- Related Topics
  File

#### 4.9.3 Print Setup ...

From the <u>VisualCAD Menu</u> moving the mouse cursor over the <u>Print</u> ... option will display the <u>Print Menu</u> with this <u>Print Setup</u> ... option available. Use this to select the printer used to print. The orientation (landscape or portrait), paper size and additional printer properties can be specified. The standard <u>Windows</u> <u>Print Setup</u> dialog box is displayed.

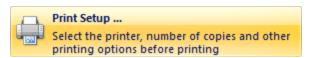

The standard Windows® Print Setup dialog

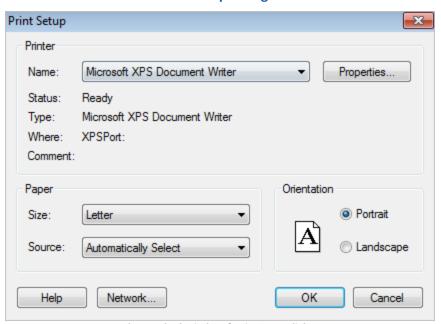

The standard Windows® Print Setup dialog

Related Topics
VisualCAD Menu
Print Menu

<u>Print ...</u>


<u>Print Preview ...</u>

### 4.10 Options



The Home Ribbon Bar contains the Options pane. Selecting the icon will display the Options dialog shown below. This dialog allows you to set global parameters which include <a href="System">System</a>, <a href="Display">Display</a>, <a href="Color">Color</a>, <a href="Grid">Grid</a>, <a href="Lighting">Lighting</a>, <a href="Dimension">Dimension</a>, <a href="Tolerance">Tolerance</a> and <a href="Units">Units</a> preferences. This dialog can also be accessed from the <a href="Status Toolbar">Status Toolbar</a>.

### Dialog Box: Options

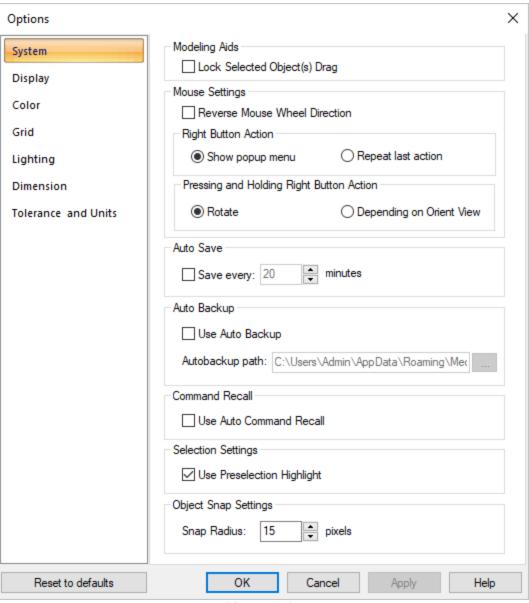

Dialog Box: Options

Related Topics

<u>System</u>

**Display** 

Color

Grid

**Lighting** 

**Dimension** 

**Tolerance and Units** 

**Home Ribbon Bar** 


### 4.10.1 System





Allows user to set preferences for modeling aids, mouse settings, auto save and command recall.

Dialog Box: Options > System

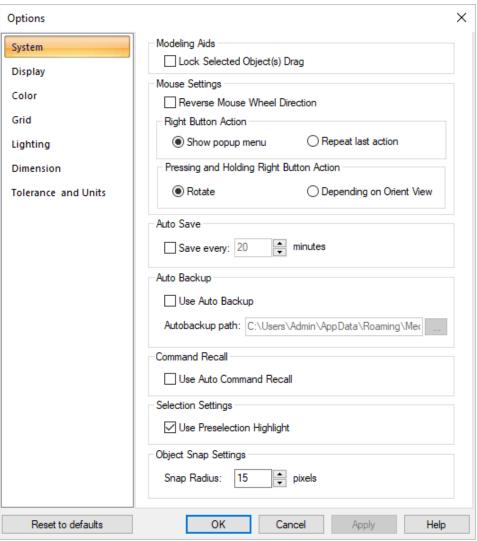

Dialog Box: Options > System

# Lock Selected Object(s) Drag

If the box is not checked, you can select a geometry object and drag it around the C-Plane. When the box is checked, the objects cannot be dragged.

# Mouse Settings


The following Mouse options are supported:


Reverse Mouse Wheel Direction

Reverses the direction of view zooming when using the mouse wheel.

Right Button Action

When Show pop-up menu is selected, performing a right mouse button click in the view port displays the commands in the pop-up menu.

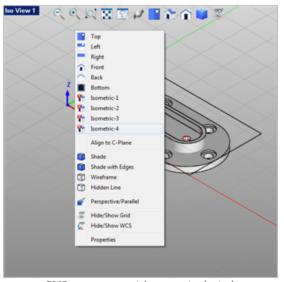

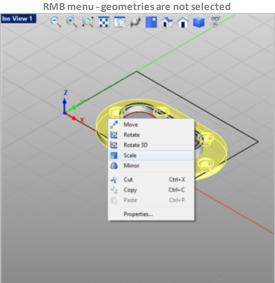

RMB menu - geometries are selected

When Repeat last action is selected, this recalls the previous command.

# Pressing and Holding Right Button Action

This option tells VisualCAD what to do when the right mouse button is pressed and held.

#### Rotate

When selected, pressing and holding down the right mouse button from all views performs a <u>Rotate</u> on the display.

#### Depending on Orient View

When depending on orient view is selected, pressing & holding down the right mouse button from Top, Front, Right, Left, Back, Bottom views does a <a href="Dynamic Pan">Dynamic Pan</a> of the geometries instead of rotate. For Iso views (Iso1,2,3 & 4) it performs a <a href="Rotate">Rotate</a> when pressing and holding down right mouse button down.

#### AutoSave

The AutoSave function can be used to automatically save your active part file at user-specified time intervals. AutoSave always saves to the current file name. This saved file is removed when you successfully close your model.

NOTE: Once you activate AutoSave, you will need to Exit VisualCAD and then launch VisualCAD again before AutoSave will begin saving your part files!


Under the AutoSave function, check the box next to 'Save every xx minutes' to activate the AutoSave function. The time interval can be entered in minutes.

! AutoSave saves the file under:

<a href="mailto:APPDATA"><a href="mai

### Opening an Older Version \*.vcp File

Opening an older version vcp file, displays the following dialog allowing you the opportunity to save the file to the current version.

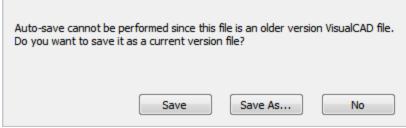

AutoSave Message

# When does AutoSave Prompt me to Save a File?

Under the following conditions VisualCAD will prompt you to save your file:

- 1. When you have opened a non-native VisualCAD file.
- 2. When you have imported a file.

3. When you have created a new part and has not saved the file yet.

# When is the AutoSave File Deleted?

Auto save file is deleted under the following scenarios:

- 1. When the application closes normally.
- 2. When you close the file either explicitly or by opening another file.
- 3. When you select not to recover an AutoSave file that was detected on startup

# File Recovery


In the event of a computer crash or if VisualCAD is terminated abruptly by ending the process from task manager, VisualCAD will recover your file if AutoSave was active and your part file was automatically saved at least once.

If an AutoSave file has been created prior to the crash or termination, VisualCAD will detect the file located in the AutoSave folder the next time it is loaded. You are then prompted with the following dialog:



AutoSave Message

Selecting Yes, displays the following dialog, prompting you to save your file:

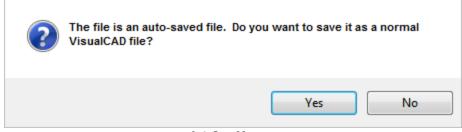

AutoSave Message

This is the only opportunity to recover the part file. If you choose not to recover it, the AutoSave file will be removed.

### Use Auto Backup

Use this option to back up your VisualCAD files automatically. You can change the Auto Backup Path destination directory by selecting the 'browse' button.

If you have the check box checked, then the file is saved ONCE (as soon as the file is loaded) to the Auto Backup path with the same name as the original path file. This file is not deleted on exit so it can be recovered later if necessary. By default the check box to Auto Backup is unchecked.

# Use Auto Command Recall

When this option is selected, VisualCAD automatically repeats the last command without having to go back & reselect the command from the toolbar or use the right mouse button click or enter option to repeat the previous command.

# Use Preselection Highlight

When this option is selected, VisualCAD automatically highlights selections as the cursor moves over them. See Pre-Selection Highlight for more information.

# Object Snap Settings


You can control the pixel radius of the object snaps located on the <u>Status Toolbar</u>. Enter the <u>Snap Radius</u> desired.

Related Topics
Options

#### 4.10.2 Display

Controls how geometry is displayed. Select from the following:

Dialog Box: Options > Display

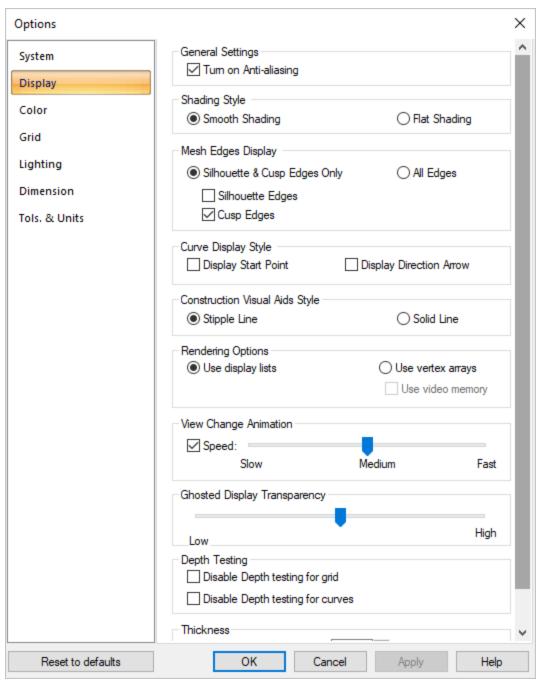

Dialog Box: Options > Display


### General Settings

#### Turn on Anti-aliasing

A method of smoothing the jagged edges along the lines and curves of text or graphics. Aliasing is caused by limited display resolution. Selecting this option turns on Anti-aliasing.

Shading Style

This controls how smooth surfaces are shaded.

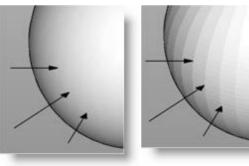


**Smooth Shading** 


Flat Shading

The pictures demonstrate the difference between smooth and flat shading. The left picture smoothly changes the amount of shading as the surface curves. The right picture just displays the shading for a flat facet on the surface. Since all surfaces (including smooth ones) are internally represented as flat facets, flat shading can affect any surface. The default is smooth shading.

# Mesh Edges Display Style

This changes how smooth surfaces are displayed. Since all surfaces are internally represented as flat facets, these facets join up along edges. On smooth surfaces, these edges are not sharp and are not normally displayed. An example of a sharp edge is the edge of a cube.

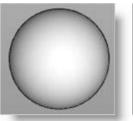


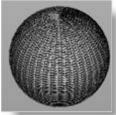

The pictures demonstrate the difference between silhouette & cusp edges only and all edge display. The left picture displays only sharp edges (there are none on a sphere); meanwhile, the right picture displays all the edges. The default is Silhouette & Cusp Edges Only. When selected, this allows you to select Silhouette Edges, Cusp Edges or All Edges to display.

# Curve Display Style


This provides an option to turn on or off display of curve start point and direction arrow.

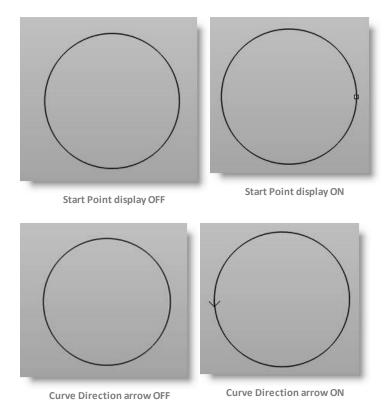


Selecting Start Point and Curve Direction arrow display under options displays both start point and curve direction arrow.

# Construction Visual Aids Style

This provides an option to choose the display style between Stipple line and Solid line for visual aids when the Visual Aids is set to active under the status bar.

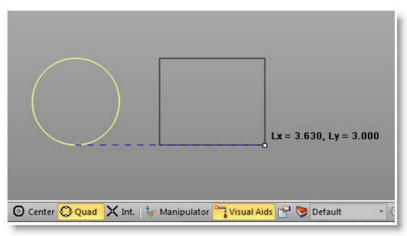

Stipple line display

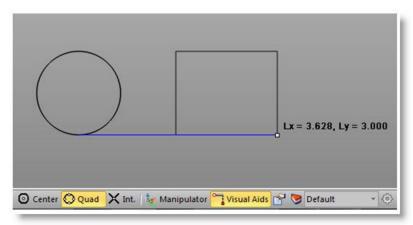

Solid line display

### Rendering Options

This can be set to Use Display Lists or Vertex Arrays. The Vertex Arrays option also provides the option to Use Video Memory from the video card that is installed on the computer. The speed and performance varies depending on the operating system type and video card installed.

# View Change Animation

Whenever the view orientation is changed within the active viewport, VisualCAD can make that orientation change instantly or through smooth animation. If animation is used, the speed of the animation can be set.

Under the View Change Animation function, check the box next to Speed to activate the animation. The animation speed can be controlled using the slider bar.

# Ghosted Display Transparency

Whenever the view mode is set to <u>Ghosted Display</u>, you can use this slider to control the transparency level of the hidden (ghosted) geometry.

# Depth Testing

These options allow you to fully display certain objects regardless of the view mode. For example, checking the box to Disable Depth Testing for curves, will display all curves even if the view is set to shaded model. You can also Disable Depth testing for grid. If enabled, the grid lines will always display.

## **Thickness**

Use this parameter to set the display line thickness for all wireframe geometry. Set this to 1 for the default line thickness. Higher for thicker lines.


### Related Topics

#### **Options**

#### 4.10.3 Color

The default colors are set using this dialog.

### Dialog Box: Options > Color

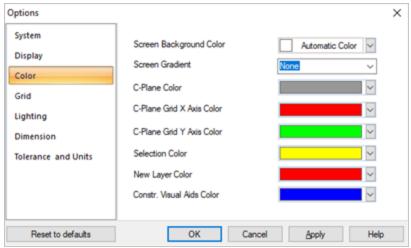

Dialog Box: Options > Color

#### • Screen Background Color

This allows user to set the viewport background color. This is the color displayed when no objects are at that position.

#### • Screen Gradient

This is a smooth change of lighting. The direction specified is the lighter side. It starts slightly darker on the opposite side of the screen and gradually gets lighter until it reaches the specified side.

#### C-Plane Color

This changes the color of the construction plane grid.

#### C-Plane Grid X Axis Color

This changes the horizontal axis line of the construction plane.

#### • C-Plane Grid Y Axis Color

This changes the vertical axis line of the construction plane.

#### Selection Color

This is the highlight color of objects that have been selected.

#### New Layer Color

This is the default color of objects created on new (not Default) layers.

Constr. Visual Aids Color

This is the default color of construction aids when Visual Aids is set to active in the status bar.


Related Topics

**Options** 

#### 4.10.4 Grid

This controls how the construction plane grid is displayed.

### Dialog Box: Options > Grid

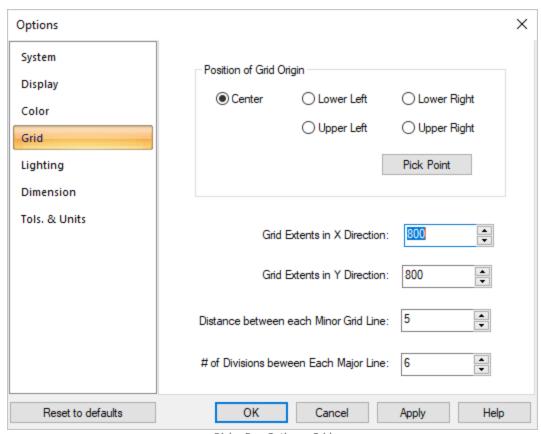

Dialog Box: Options > Grid


# Position of Grid Origin

These options will control where the grid is positioned relative to the World Coordinate System (WCS).

The grid orientation also carries over to whichever view is active, making construction easier.

#### Center


Move the center of the grid to the WCS.

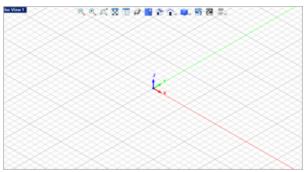

Move the center of the grid to the WCS.

#### **Lower Left**

Move the lower left corner of the grid to the WCS.

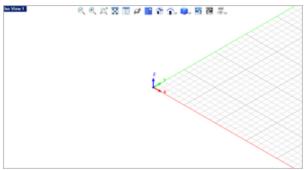

Move the lower left corner of the grid to the WCS.

#### **Lower Right**


Move the lower right corner of the grid to the WCS.



Move the lower right corner of the grid to the WCS.

#### **Upper Left**


Move the upper left corner of the grid to the WCS.

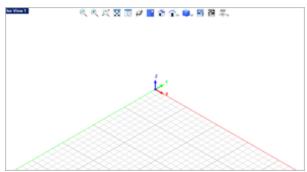

Move the upper left corner of the grid to the WCS.

#### **Upper Right**

Move the upper right corner of the grid to the WCS.

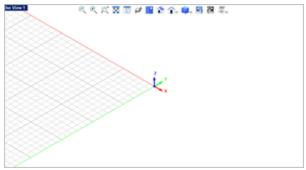


Move the upper right corner of the grid to the WCS.

#### **Pick**

Use the button to pick a point on the screen and the origin of the grid will move to this location.

#### Notes:

- The point you pick is always on the default XY plane.
- If you use the Upper/Lower options above after using this Pick option, the offset distance between the WCS and the new origin of the grid remains in effect.

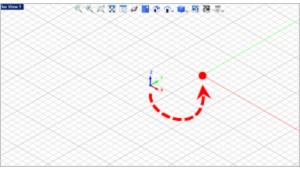

Move the the origin of the grid to this location.

# Other Grid Options

#### **Grid Extents in X Direction**


This controls how many major divisions are displayed along the X axis direction.

#### **Grid Extents in Y Direction**

This controls how many major divisions are displayed along the Y axis direction.

#### Distance between each Minor Grid Line


This controls the distance between each minor grid line.

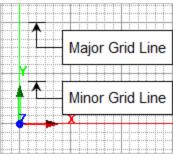

Major/Minor Grid Lines

#### # of Divisions between Each Major Line

This controls the distance between each major grid line. the number of minor rid line multiplied by the number of major grid lines will determine the overall extent of the grid.

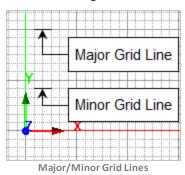


Related Topics
Options

#### 4.10.5 Lighting


This controls the characteristics of lighting for the model.



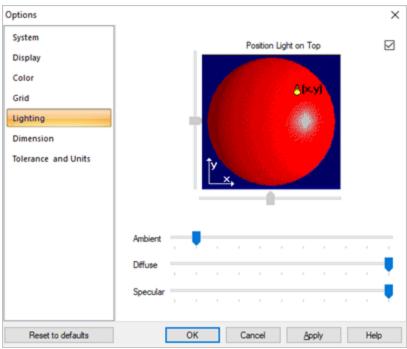

Dialog Box: Options > Lighting

There are three types of lighting: ambient, diffuse, and specular.

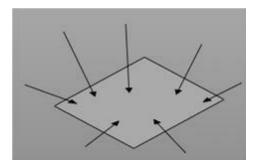


### Position Light on Top

The scene has a single light source and there are controls for setting its position. Not all lighting in the model comes directly from that one source; there is some ambient light coming in from all over. The **Position Light on Top** checkbox must be unchecked to be able to move the light source.


# **Ambient**

**Ambient** light comes in from all different directions equally. Light sources have no effect on ambient light. Shadows don't appear with only ambient light.

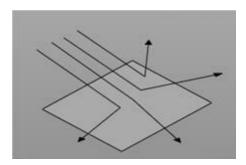


### Diffuse

**Diffuse** light comes from a single source but is scattered in all directions. Shadows appear, but there are no "shiny" spots.

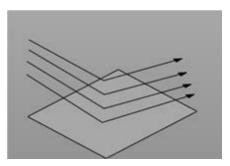


# Specular Specular


**Specular** light comes from a single source and is scattered in a single direction. It is reflective light. Shiny metal objects demonstrate good specular reflection. Shading is not a significant consideration with specular light.

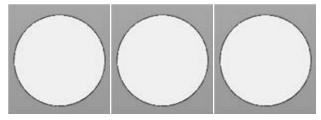

The three pictures above demonstrate ambient light as the light source moves from left to right. There is no effect since ambient light comes from all sides equally.

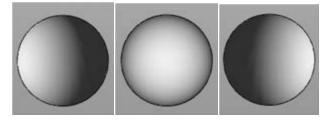

The pictures above show the effects of the motion of the light source using only diffuse lighting. There are no "shiny" spots but yet there is a direction from the light.

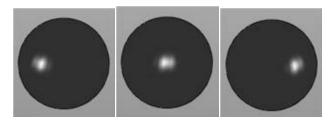


The last set of pictures uses only specular lighting. As the light source moves from left to right, the "shiny" spot follows it. However, there is nothing else lit up, so the effect is not just reflective metal.

Related Topics
Options

#### 4.10.6 Dimension

This controls the appearance of dimensioning labels, arrows, and leader lines.

# Dialog Box: Options > Dimension

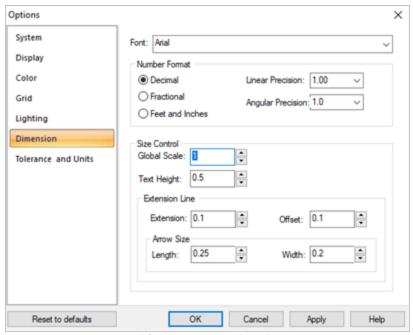


Dialog Box: Options > Dimension

Related Topics
Options

#### 4.10.7 Tol. & Units

This controls the accuracy of the model and part units.

### Dialog Box: Options > Tolerance and Units

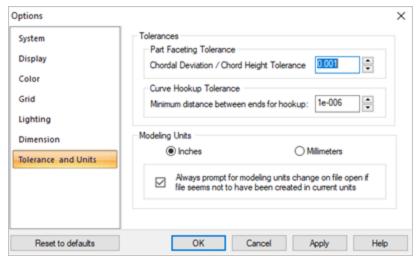

Dialog Box: Options > Tolerance and Units

### Tolerances


This controls the accuracy of the models. Smaller tolerance numbers often result in significantly big files and slower processing time but are more accurate.


The tolerances are set in a dialog.

# Part Faceting Tolerance

#### Chordal Deviation/Chord Height Tolerance

The chord height tolerance is used in commands that require approximation of smooth curves and surfaces.

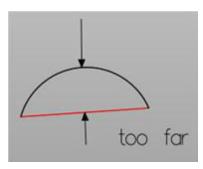

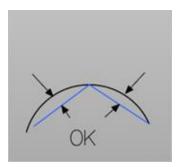

Curve Hookup Tolerance

This specifies maximum separation between the endpoints of different curves when joining them into a single curve.

## Units

This converts units from inches to millimeters or from millimeters to inches. If there are existing objects, a dialog will appear confirming if you really want to convert the units.




The objects remain the original size but the coordinate values change.

You can check the box to always prompt you to change the units when files are opened if they appear not to be in the correct units. For example, if the system sees a coordinate value that is quite large such as 500.5, then this dialog will display giving you the opportunity to change the units to Millimeters.


Related Topics
Options

### 4.11 Help & Info Menu

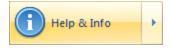

Select Help & Info from the VisualCAD Menu to access information about VisualCAD and how to use it. You can also select (left-click) on this button to display the VisualCAD Online Help.

The Help & Info Menu

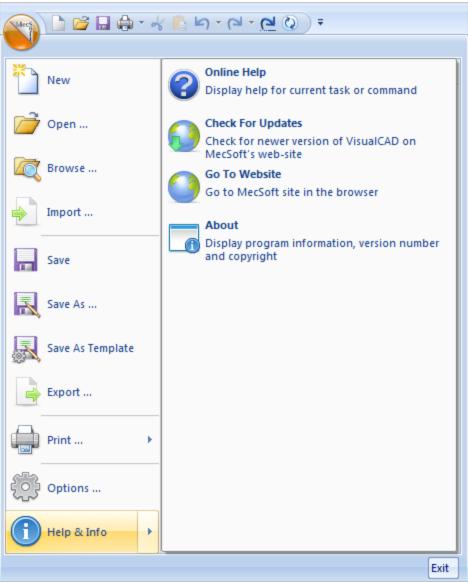

VisualCAD® Menu > Help & Info

# Related Topics

Online Help

**Check for Updates** 


Go To Website

**About** 

#### 4.11.1 Help Topics ...

VisualCAD is accompanied with a comprehensive online help system. When a command is active you can press the <F1> key to display context-sensitive help for that command.

Many dialogs also have a Help button that you can click to display help for that dialog. Whenever you see the Help "?" icon, select it to display the Online Help system.

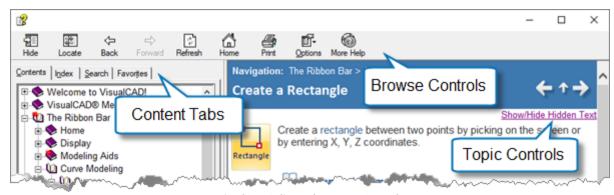

VisualCAD Online Help Browser Controls


Related Topics
Help

#### 4.11.2 Check for Updates ...



This checks for product updates. Internet connection is required to perform this task.

Dialog Box: Check for Updates

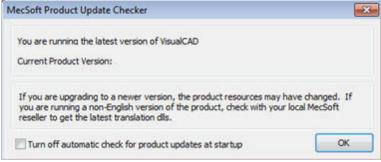

Dialog Box: Check for Updates

Turn off automatic check for product updates at startup
 Check this box if do not want VisualCAD to check for updates automatically.



#### 4.11.3 Go To Website

Selecting this option displays the <u>MecSoft.com</u> website in your default web browser. Note that and Internet connection is required. From the website you can access free downloads, videos, tutorials and keep up to date on the latest innovations from <u>MecSoft Corporation</u>.




Go to the MecSoft.com Website

#### 4.11.4 About VisualCAD



This brings up a dialog, which shows the product version number.

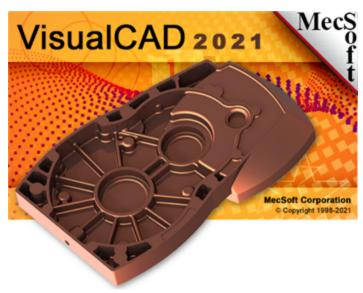

**Dialog Box: About VisualCAD** 

Related Topics

<u>Help</u>

Help Topics ...

Check for Updates ...

### 4.12 Exit




Quits VisualCAD. If there is unsaved work, you will be asked if you want to save it before quitting. If the unsaved work is not saved, it will be lost.

Related Topics

<u>File</u>

#### The Ribbon Bar

The Ribbon Bar displays all of the features available in VisualCAD. It conforms to the standard for Ribbon Bars set by Microsoft® Corp.

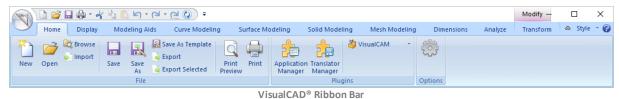

Tabs along the top of the Ribbon Bar allow selection of major categories of functionality, such as creation, modification, analysis, dimensioning, etc. Within each tab are subordinate panes of related functionality that are labeled along the bottom of the group. The <a href="Home Ribbon bar">Home Ribbon bar</a> shown above has three sub panes of commands labeled File, Plugins and Options.

Ribbon Bars

Home

**Display** 

**Modeling Aids** 

**Curve Modeling** 

**Surface Modeling** 

**Solid Modeling** 

Mesh Modeling

**Dimensions** 

Analyze

**Transform** 

**Print Preview** 

#### **5.1** Home

The Home Ribbon Bar contains File, Plugins, and Options panes and associated functions.



The Home Ribbon Bar

Related Topics

File Pane, Home Ribbon Bar

Plugins Pane, Home Ribbon Bar

Options Pane, Home Ribbon Bar

The Ribbon Bar

<u>Customize Quick Access Toolbar</u>

**Customize Dialog** 

**VisualCAD Options** 

#### 5.1.1 File

The Home Ribbon Bar contains the following File pane with associated functions.



Home Ribbon Bar

### Related Topics

New

Open ...

Browse ...

Import ...

Save

Save As ...

Save As Template

Export ...

Print Preview ...

Print ...

**Home Ribbon Bar** 

#### 5.1.1.1 New



Create a new VCP (VisualCAD Part) file. The file holds the geometry, layers, orientation, and preferences. If there are unsaved objects, a dialog will ask you if they want to save them before creating the new VCP file. All current work will be overwritten by the new file.


# Related Topics File

#### 5.1.1.2 Open ...



Open an existing VCP (VisualCAD Part) file or one of the <u>supported file types</u>. The file holds the geometry, layers, orientation, and preferences. If there are existing unsaved objects, a dialog will ask you if you want to save them before opening the VCP file. All current work will be overwritten by the loaded file.

# Dialog Box: Open

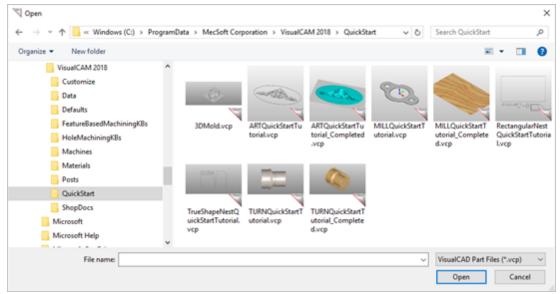

Dialog Box: Open

Standard Windows® File Browser supports preview of VisualCAD \*.vcp drawings and models.

# Files of Type Supported

The following file types are supported by VisualCAD. See <u>File Open</u> and <u>File Import</u> for more information

- VisualCAD Part Files (\*.vcp)
- VisualMILL Part Files (\*.vmp)
- VisualTurn Part Files (\*.vct)
- 3D Studio Files (\*.3ds)
- Adobe Illustrator Files (\*.ai)
- AMF Files (\*.amf)
- AutoCAD (\*.dxf;\*.dwg)
- IGES Files (\*.igs;\*.iges)
- LightWave Files (\*.lwo)
- MecSoft Region Files (\*.mrg)
- OBJ Files (\*.obj)
- Parasolid Files (\*.x\_t;\*.x\_b)
- Point Cloud Files (\*.cvs;\*.txt;\*.asc)
- RAW Triangle Files (\*.raw)
- RHINO 3DM Files (\*.3dm)
- SAT Files (\*.sat)
- SketchUP Files (\*.skp)
- SLC Files (\*.slc)
- STEP Files (\*.stp;\*.step)
- Stereo-lithography files (\*.sla;\*.stl)
- Universal 3D Files (\*.u3d)
- VRML Files (\*.wrl)

# Related Topics

File

Import ...

Save

Save As ...

Browse...

#### VisualCAD Part Files (\*.vcp)

VisualCAD Part Files (\*.vcp) VisualMill Part Files (\*.vmp)

VisualTurn Part Files (\*.vtp)

3D Studio Files (\*.3ds)

Adobe Illustrator Files (\*.ai)

AMF Files (\*.amf)

AutoCAD Files (\*.dxf;\*.dwg)

IGES Files (\*.igs;\*.iges)

LightWave Files (\*.lwo)

MecSoft Region Files (\*.mrg)

OBJ Files (\*.obj)

Parasolid Files (\*.x\_t;\*.x\_b)

Points Cloud Files (\*.csv;\*.txt;\*.asc)

RAW Triangle Files (\*.raw)

#### Rhino 3DM Files (\*.3dm)

SAT Files (\*.sat) SketchUp Files (\*.skp)

SLC (\*.slc)

STEP Files (\*.stp;\*.step)

Streo-Lithography Files (\*.sla;\*.stl)

Universal 3D Files (\*.u3d)

VRML Files (\*.wrl) All Files (\*.\*)


File Types Supported

#### 5.1.1.3 Browse ...



Visually browse files on the computer. VCP files can be opened. A preview window will show the last view displayed when the original file was saved.

### Dialog Box: VisualCAD® File Browser

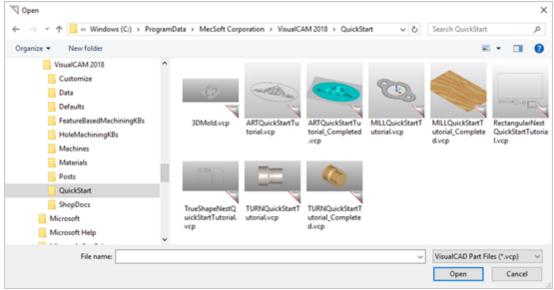

Dialog Box: VisualCAD® File Browser

### Related Topics

File Menu

Import ...

Save


Save As ...

#### 5.1.1.4 Import ...



Open existing files made by other programs. This is used to transfer information, normally geometric models. Currently, VisualCAD can import the following formats:

Dialog Box: Import

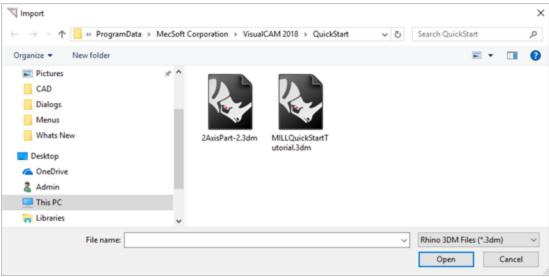


Dialog Box: Import

Standard Windows® File Browser supports preview of VisualCAD \*.vcp drawings and models.

### Import Multiple Files

You can Import multiple files at the same time. To do so, first press and hold the <Ctrl> key while selecting the files from the Import dialog. Each file will highlight and also be listed together in the File name field at the bottom of the dialog. When done selecting files, pick the Open button.

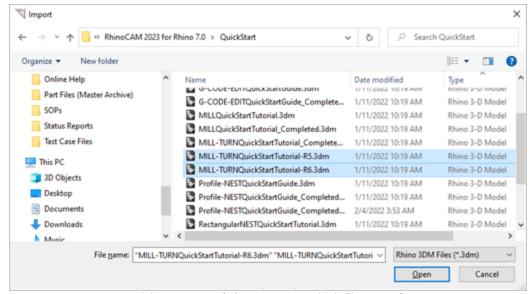

Dialog Box: Import (When importing multiple files at once)

Standard Windows® File Browser supports preview of VisualCAD \*.vcp drawings and models.

Files of Type Supported

The following file types are supported by VisualCAD. See <u>File Open</u> and <u>File Import</u> for more information

- VisualCAD Part Files (\*.vcp)
- VisualMILL Part Files (\*.vmp)
- VisualTurn Part Files (\*.vct)
- 3D Studio Files (\*.3ds)
- Adobe Illustrator Files (\*.ai)
- AMF Files (\*.amf)
- AutoCAD (\*.dxf;\*.dwg)
- IGES Files (\*.igs;\*.iges)
- LightWave Files (\*.lwo)
- MecSoft Region Files (\*.mrg)
- OBJ Files (\*.obj)
- Parasolid Files (\*.x\_t;\*.x\_b)
- Point Cloud Files (\*.cvs; \*.txt; \*.asc)
- RAW Triangle Files (\*.raw)
- RHINO 3DM Files (\*.3dm)
- SAT Files (\*.sat)
- SketchUP Files (\*.skp)
- SLC Files (\*.slc)
- STEP Files (\*.stp;\*.step)
- Stereo-lithography files (\*.sla;\*.stl)
- Universal 3D Files (\*.u3d)
- VRML Files (\*.wrl)

# Related Topics

File

**Export** 

Save

Save As

Browse...

#### VisualCAD Part Files (\*.vcp)

VisualCAD Part Files (\*.vcp) VisualMill Part Files (\*.vmp)

VisualTurn Part Files (\*.vtp)

3D Studio Files (\*.3ds)

Adobe Illustrator Files (\*.ai)

AMF Files (\*.amf)

AutoCAD Files (\*.dxf;\*.dwg)

IGES Files (\*.igs;\*.iges)

LightWave Files (\*.lwo)

MecSoft Region Files (\*.mrg)

OBJ Files (\*.obj)

Parasolid Files (\*.x\_t;\*.x\_b)

Points Cloud Files (\*.csv;\*.txt;\*.asc) RAW Triangle Files (\*.raw)

#### Rhino 3DM Files (\*.3dm)

SAT Files (\*.sat)

SketchUp Files (\*.skp)

SLC (\*.slc)

STEP Files (\*.stp;\*.step)

Streo-Lithography Files (\*.sla;\*.stl)

Universal 3D Files (\*.u3d) VRML Files (\*.wrl)

All Files (\*.\*)

File Types Supported

#### 5.1.1.5 Save



Save geometry, layers, orientation, and preferences in a VCP file. If saving for the first time, you can name the file and select where on the computer to save the file. If the file had been saved previously, the current information overwrites the original information.

Related Topics


<u>File</u>

#### 5.1.1.6 Save As ...



Save geometry, layers, orientation, and preferences in a VCP file. Name the file and select where on the computer to save it. If selecting an existing file, the current information will overwrite the original information. See <a href="Export...">Export...</a> to save as different file types.

# File Save As dialog box

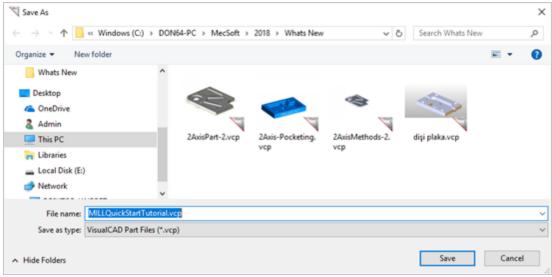

File Save As dialog box

- Save as Files Types Supported
  - VisualCAD Part Files (\*.vcp)
- Related Topics

<u>File</u>


#### 5.1.1.7 Save As Template

Use this to save VisualCAD® preferences (<u>System</u>, <u>Display</u>, <u>Color</u>, <u>Grid</u>, <u>Lighting</u>, <u>Dimension</u>, <u>Tolerance and Units</u>) in the \*.vcp file. This template file can then be used to begin new VisualCAD drawings.

#### 5.1.1.8 Export ...

Save geometry in a neutral file format (can be read by many different programs). The following export translators are available. Binary formats are usually much smaller in size, but ASCII formats are more easily read. Ordinary text programs can read the ASCII files.


## Dialog Box: Export To

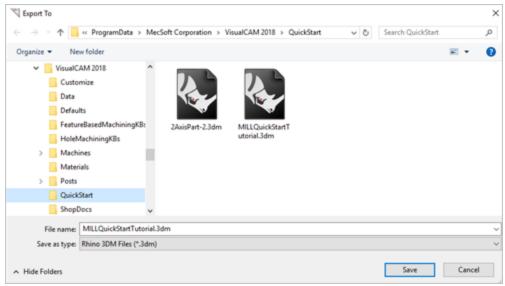

**Dialog Box: Export To** 

## Export File Types Supported

The following file types are supported by VisualCAD during Export:

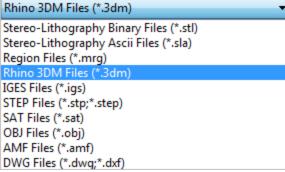


File Types Supported during Export

Stereo-Lithography Binary (\*.stl)

- Stereo-Lithography ASCII (\*.sla)
- Region Files (\*.mrg)
- Rhino (\*.3dm)
- IGES (\*.igs)
- STEP Files (\*.stp; \*.step)
- SAT Files (\*.sat)
- OBJ Files (\*.obj)
- AMF Files (\*.amf)
- DWG Files (\*.dxf; \*.dwg)

# Exporting to Dwg/Dxf formats

When you select the Dwg/Dxf export File Type, the file is exported to \*.dwg format by default. If you would like to export the file in \*.dxf format, you will need to enter the file extension to the end of the file name (i.e., Example.dxf).

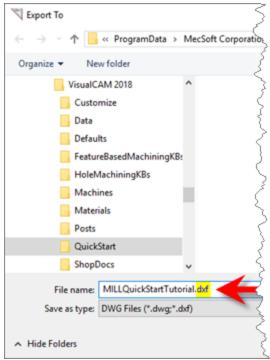

Exporting to the \*.dxf File Type

Related Topics

<u>File</u>

Import ...

<u>Save</u>

Save As ...

Browse...

### 5.1.1.9 Export Selected

This command is similar to the <u>File Export</u> command but only exports the currently selected entities. The entities <u>MUST</u> be pre-selected before executing this command. All of the file types supported by the <u>File Export</u> command are also supported by this command.

### Basic Procedure

	Screen Entry	Command Input
Step 1	Select the entities that you wish to export.	
Step 2	Pick the Export Selected icon from the Home Ribbon Bar.	
	Use the Export To dialog to create the exported file type required. See <u>File Export</u> for more information about using the Export To dialog.	

### Related Topics

File Export ...

<u>File</u>

Import ...

<u>Save</u>

Save As ...


Browse...

### 5.1.1.10 Print Preview



This shows a picture of what will be printed. The picture can be printed from here along with the additional controls listed below.

Print Preview Display

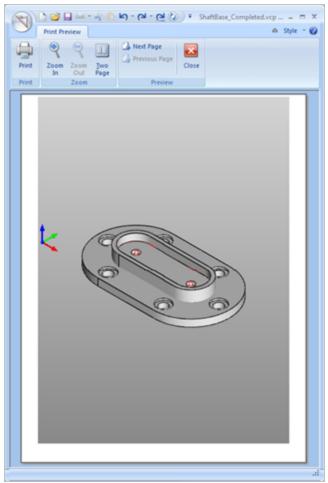

File > Print Preview Display

## Print Preview Controls

The following controls are available from the Print Preview ribbon bar:



Print Preview Ribbon Bar

- Print
- Zoom In/Out
- Two Page
- Next Page

- Prev Page
- Close
- Related Topics


<u>File</u>

#### 5.1.1.11 Print ...



Prints the objects displayed. If multiple views are displayed, the currently selected view will be printed. The standard Windows® Print dialog box is displayed.

### The standard Windows® Print dialog

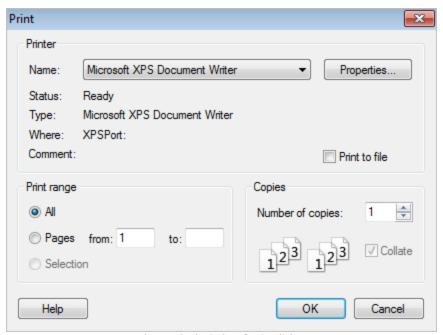

The standard Windows® Print dialog

Related Topics

VisualCAD Menu

**Print Menu** 

Print Setup ...

Print Preview ...

### 5.1.2 Plugins



The Home Ribbon Bar contains the following Plugins pane with associated functions.

Related Topics

Application Plug-ins ...

Translator Plug-ins ...


Home Ribbon Bar

### 5.1.2.1 Application Plug-ins ...



This allows additional functionality to be added to VisualCAD after installation. Select from the following for more information:

### Dialog Box: Application Plug-ins Manager

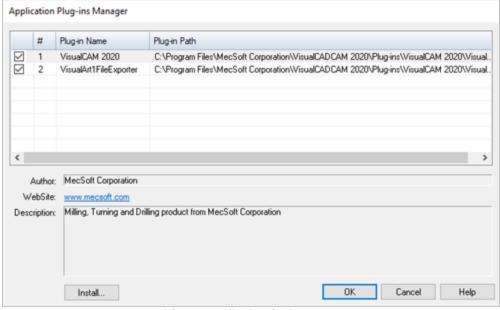

Dialog Box: Application Plug-ins Manager

## Enable/Disable Application Plug-ins

Active application plug-ins are listed at the top of the manager. The Plug-in Name and Plug-in Path are listed.

Check the box to the left of the application plug-in to enable or disable the plug-in.

### Install New Application Plug-ins

- 1. Select the Install button to display the File Browser.
- 2. Separate files, normally with an extension \*.vca, are stored in the Plug-ins folder under the installation directory for VisualCAD®.
- 3. Select a Plug-in file and then pick Open.
- 4. The plug-in is added to the Application Plug-in Manager along with Author, Website and a Description.

## Related Topics

**Options** 

**Export** 

**Import** 

Save

Save As


Browse...

### 5.1.2.2 Translator Plug-ins ...



This allows different file types to be read, imported, and exported. VisualCAD can read and write its own file types (\*.vcp) with no additional plug-ins. There are some translators that come already pre-installed such as things to read Dxf, Dwg, STEP, IGES, SAT, Parasolids and STL file formats.

## ☐ Dialog Box: Loaded Translator Plug-ins

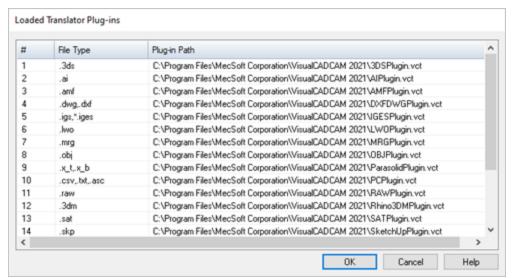

**Dialog Box: Loaded Translator Plug-ins** 

As more translators become available, they can be plugged in and used.

Related Topics

**Options** 

Export ...

Import ...

Save

Save As ...


Browse...

### 5.1.3 Options



The Home Ribbon Bar contains the Options pane. Selecting the icon will display the Options dialog shown below. This dialog allows you to set global parameters which include <a href="System">System</a>, <a href="Display">Display</a>, <a href="Color">Color</a>, <a href="Grid">Grid</a>, <a href="Lighting">Lighting</a>, <a href="Dimension">Dimension</a>, <a href="Tolerance">Tolerance</a> and <a href="Units">Units</a> preferences. This dialog can also be accessed from the <a href="Status Toolbar">Status Toolbar</a>.

Dialog Box: Options

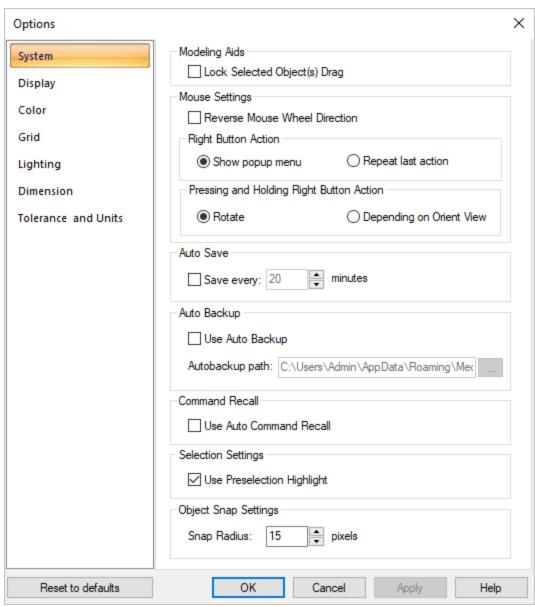

Dialog Box: Options

## Related Topics

**System** 

**Display** 

Color

Grid

Lighting

**Dimension** 

**Tolerance and Units** 


### Home Ribbon Bar

### 5.1.3.1 System



Allows user to set preferences for modeling aids, mouse settings, auto save and command recall.

Dialog Box: Options > System

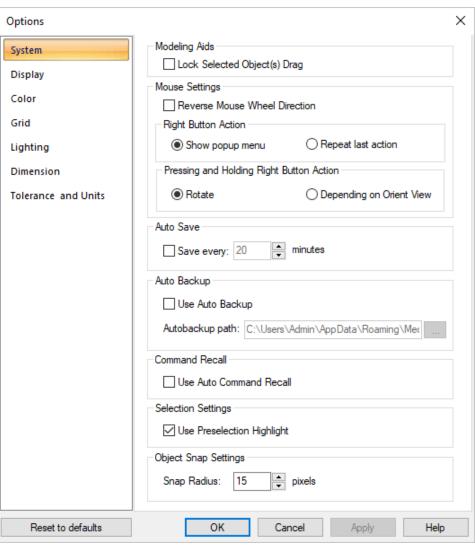

Dialog Box: Options > System

# Lock Selected Object(s) Drag

If the box is not checked, you can select a geometry object and drag it around the C-Plane. When the box is checked, the objects cannot be dragged.

Mouse Settings


The following Mouse options are supported:


# Reverse Mouse Wheel Direction

Reverses the direction of view zooming when using the mouse wheel.

# Right Button Action

When Show pop-up menu is selected, performing a right mouse button click in the view port displays the commands in the pop-up menu.

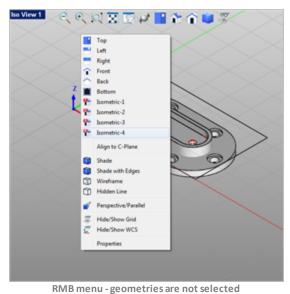

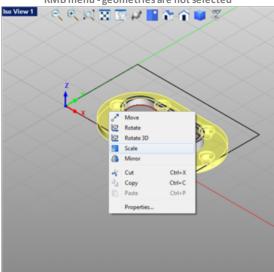

RMB menu - geometries are selected

When Repeat last action is selected, this recalls the previous command.

Pressing and Holding Right Button Action

This option tells VisualCAD what to do when the right mouse button is pressed and held.

#### Rotate

When selected, pressing and holding down the right mouse button from all views performs a <u>Rotate</u> on the display.

#### Depending on Orient View

When depending on orient view is selected, pressing & holding down the right mouse button from Top, Front, Right, Left, Back, Bottom views does a <u>Dynamic Pan</u> of the geometries instead of rotate. For Iso views (Iso1,2,3 & 4) it performs a <u>Rotate</u> when pressing and holding down right mouse button down.

### AutoSave

The AutoSave function can be used to automatically save your active part file at user-specified time intervals. AutoSave always saves to the current file name. This saved file is removed when you successfully close your model.

I NOTE: Once you activate AutoSave, you will need to Exit VisualCAD and then launch VisualCAD again before AutoSave will begin saving your part files!


Under the AutoSave function, check the box next to 'Save every xx minutes' to activate the AutoSave function. The time interval can be entered in minutes.

AutoSave saves the file under:

<a href="mailto:APPDATA"><a href="mailt

# Opening an Older Version \*.vcp File

Opening an older version vcp file, displays the following dialog allowing you the opportunity to save the file to the current version.

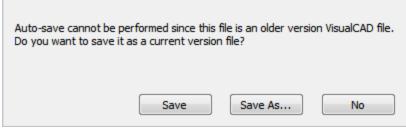

AutoSave Message

When does AutoSave Prompt me to Save a File?

Under the following conditions VisualCAD will prompt you to save your file:

- 1. When you have opened a non-native VisualCAD file.
- 2. When you have imported a file.
- 3. When you have created a new part and has not saved the file yet.

# When is the AutoSave File Deleted?

Auto save file is deleted under the following scenarios:

- 1. When the application closes normally.
- 2. When you close the file either explicitly or by opening another file.
- 3. When you select not to recover an AutoSave file that was detected on startup

# File Recovery


In the event of a computer crash or if VisualCAD is terminated abruptly by ending the process from task manager, VisualCAD will recover your file if AutoSave was active and your part file was automatically saved at least once.

If an AutoSave file has been created prior to the crash or termination, VisualCAD will detect the file located in the AutoSave folder the next time it is loaded. You are then prompted with the following dialog:



AutoSave Message

Selecting Yes, displays the following dialog, prompting you to save your file:

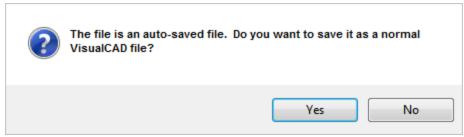

AutoSave Message

! This is the only opportunity to recover the part file. If you choose not to recover it, the AutoSave file will be removed.

## Use Auto Backup

Use this option to back up your VisualCAD files automatically. You can change the Auto Backup Path destination directory by selecting the 'browse' button.

If you have the check box checked, then the file is saved ONCE (as soon as the file is loaded) to the Auto Backup path with the same name as the original path file. This file is not deleted on exit so it can be recovered later if necessary. By default the check box to Auto Backup is unchecked.

# Use Auto Command Recall

When this option is selected, VisualCAD automatically repeats the last command without having to go back & reselect the command from the toolbar or use the right mouse button click or enter option to repeat the previous command.

# Use Preselection Highlight

When this option is selected, VisualCAD automatically highlights selections as the cursor moves over them. See <a href="Pre-Selection Highlight">Pre-Selection Highlight</a> for more information.

# Object Snap Settings

You can control the pixel radius of the object snaps located on the <u>Status Toolbar</u>. Enter the <u>Snap Radius</u> desired.


Related Topics

**Options** 

#### 5.1.3.2 Display

Controls how geometry is displayed. Select from the following:

Dialog Box: Options > Display

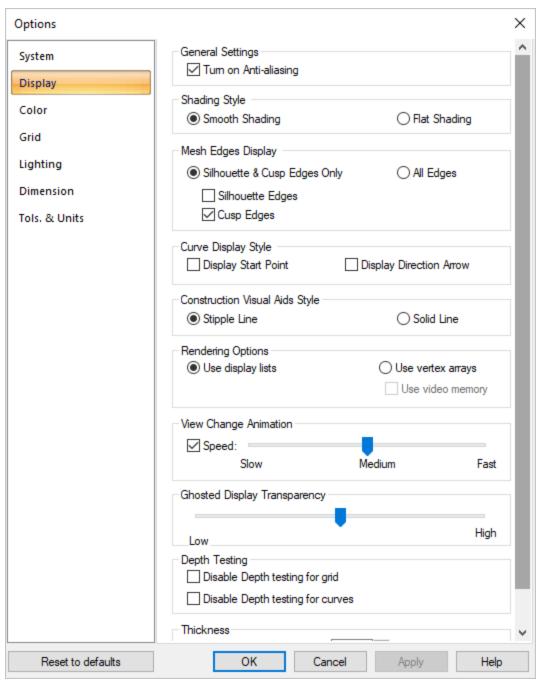

Dialog Box: Options > Display


## General Settings

#### Turn on Anti-aliasing

A method of smoothing the jagged edges along the lines and curves of text or graphics. Aliasing is caused by limited display resolution. Selecting this option turns on Anti-aliasing.

Shading Style

This controls how smooth surfaces are shaded.

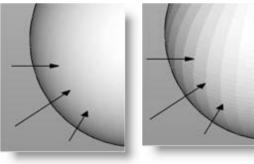


**Smooth Shading** 


Flat Shading

The pictures demonstrate the difference between smooth and flat shading. The left picture smoothly changes the amount of shading as the surface curves. The right picture just displays the shading for a flat facet on the surface. Since all surfaces (including smooth ones) are internally represented as flat facets, flat shading can affect any surface. The default is smooth shading.

# Mesh Edges Display Style

This changes how smooth surfaces are displayed. Since all surfaces are internally represented as flat facets, these facets join up along edges. On smooth surfaces, these edges are not sharp and are not normally displayed. An example of a sharp edge is the edge of a cube.

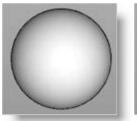


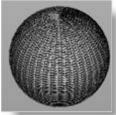

The pictures demonstrate the difference between silhouette & cusp edges only and all edge display. The left picture displays only sharp edges (there are none on a sphere); meanwhile, the right picture displays all the edges. The default is Silhouette & Cusp Edges Only. When selected, this allows you to select Silhouette Edges, Cusp Edges or All Edges to display.

# Curve Display Style


This provides an option to turn on or off display of curve start point and direction arrow.

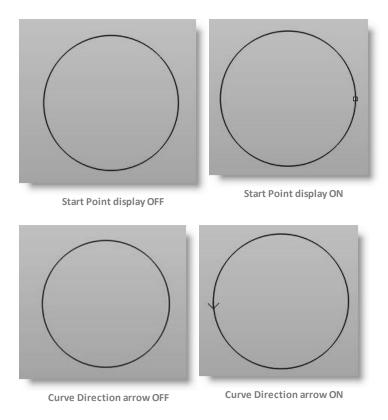


Selecting Start Point and Curve Direction arrow display under options displays both start point and curve direction arrow.

# Construction Visual Aids Style

This provides an option to choose the display style between Stipple line and Solid line for visual aids when the Visual Aids is set to active under the status bar.

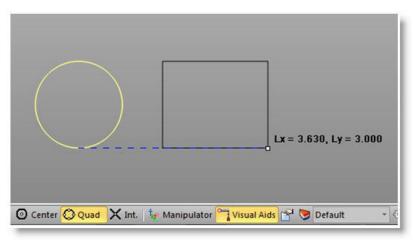

Stipple line display

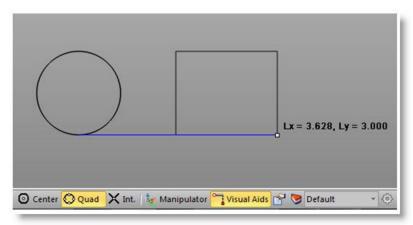

Solid line display

## Rendering Options

This can be set to Use Display Lists or Vertex Arrays. The Vertex Arrays option also provides the option to Use Video Memory from the video card that is installed on the computer. The speed and performance varies depending on the operating system type and video card installed.

# View Change Animation

Whenever the view orientation is changed within the active viewport, VisualCAD can make that orientation change instantly or through smooth animation. If animation is used, the speed of the animation can be set.

Under the View Change Animation function, check the box next to Speed to activate the animation. The animation speed can be controlled using the slider bar.

# Ghosted Display Transparency

Whenever the view mode is set to <u>Ghosted Display</u>, you can use this slider to control the transparency level of the hidden (ghosted) geometry.

# Depth Testing

These options allow you to fully display certain objects regardless of the view mode. For example, checking the box to Disable Depth Testing for curves, will display all curves even if the view is set to shaded model. You can also Disable Depth testing for grid. If enabled, the grid lines will always display.

# **Thickness**

Use this parameter to set the display line thickness for all wireframe geometry. Set this to 1 for the default line thickness. Higher for thicker lines.


## Related Topics

#### **Options**

#### 5.1.3.3 Color

The default colors are set using this dialog.

## Dialog Box: Options > Color

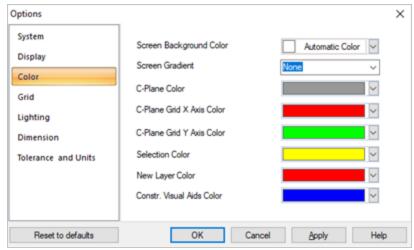

Dialog Box: Options > Color

#### Screen Background Color

This allows user to set the viewport background color. This is the color displayed when no objects are at that position.

#### Screen Gradient

This is a smooth change of lighting. The direction specified is the lighter side. It starts slightly darker on the opposite side of the screen and gradually gets lighter until it reaches the specified side.

#### C-Plane Color

This changes the color of the construction plane grid.

### • C-Plane Grid X Axis Color

This changes the horizontal axis line of the construction plane.

### • C-Plane Grid Y Axis Color

This changes the vertical axis line of the construction plane.

#### Selection Color

This is the highlight color of objects that have been selected.

#### New Layer Color

This is the default color of objects created on new (not Default) layers.

Constr. Visual Aids Color

This is the default color of construction aids when Visual Aids is set to active in the status bar.


Related Topics

**Options** 

#### 5.1.3.4 Grid

This controls how the construction plane grid is displayed.

## Dialog Box: Options > Grid

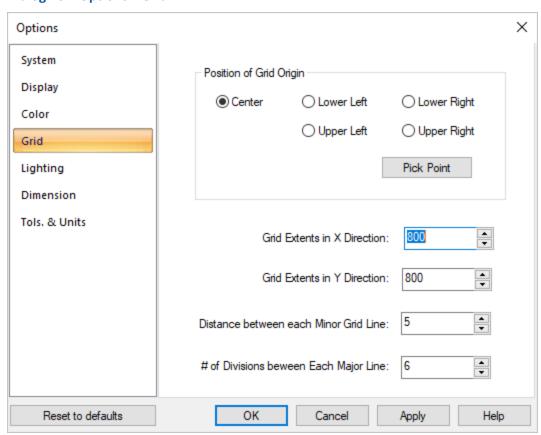

Dialog Box: Options > Grid


## Position of Grid Origin

These options will control where the grid is positioned relative to the World Coordinate System (WCS).

The grid orientation also carries over to whichever view is active, making construction easier.

### Center


Move the center of the grid to the WCS.

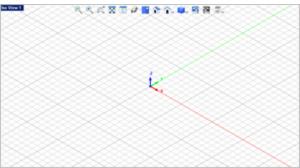

Move the center of the grid to the WCS.

### **Lower Left**


Move the lower left corner of the grid to the WCS.

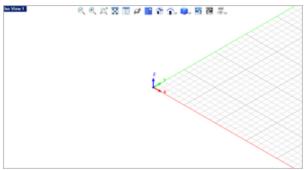

Move the lower left corner of the grid to the WCS.

### **Lower Right**


Move the lower right corner of the grid to the WCS.

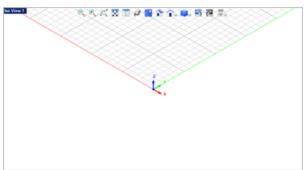

Move the lower right corner of the grid to the WCS.

### **Upper Left**


Move the upper left corner of the grid to the WCS.

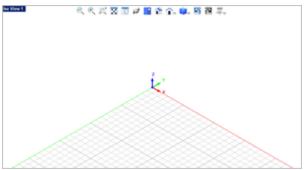

Move the upper left corner of the grid to the WCS.

### **Upper Right**

Move the upper right corner of the grid to the WCS.

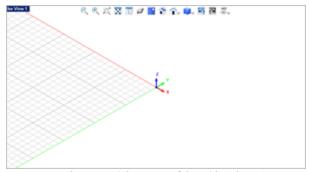


Move the upper right corner of the grid to the WCS.

### Pick

Use the button to pick a point on the screen and the origin of the grid will move to this location.

#### Notes:

- The point you pick is always on the default XY plane.
- If you use the Upper/Lower options above after using this Pick option, the offset distance between the WCS and the new origin of the grid remains in effect.

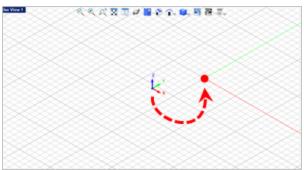

Move the the origin of the grid to this location.

# Other Grid Options

#### **Grid Extents in X Direction**


This controls how many major divisions are displayed along the X axis direction.

### **Grid Extents in Y Direction**

This controls how many major divisions are displayed along the Y axis direction.

### Distance between each Minor Grid Line


This controls the distance between each minor grid line.

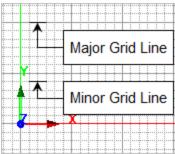

Major/Minor Grid Lines

### # of Divisions between Each Major Line

This controls the distance between each major grid line. the number of minor rid line multiplied by the number of major grid lines will determine the overall extent of the grid.

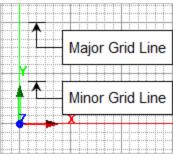


Major/Minor Grid Lines

Related Topics
Options

### **5.1.3.5** Lighting


This controls the characteristics of lighting for the model.



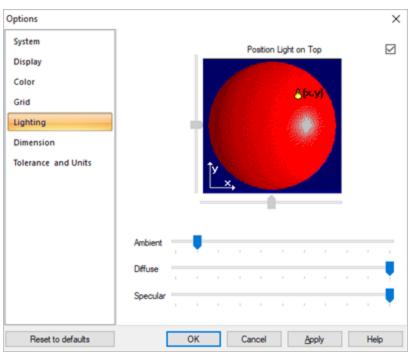

Dialog Box: Options > Lighting

There are three types of lighting: ambient, diffuse, and specular.

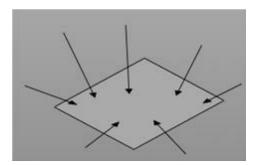


## Position Light on Top

The scene has a single light source and there are controls for setting its position. Not all lighting in the model comes directly from that one source; there is some ambient light coming in from all over. The **Position Light on Top** checkbox must be unchecked to be able to move the light source.


# **Ambient**

**Ambient** light comes in from all different directions equally. Light sources have no effect on ambient light. Shadows don't appear with only ambient light.

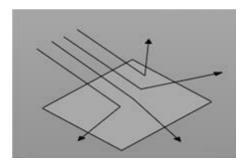


## Diffuse

**Diffuse** light comes from a single source but is scattered in all directions. Shadows appear, but there are no "shiny" spots.

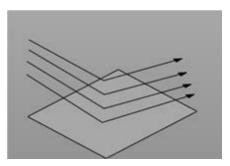


# Specular Specular


**Specular** light comes from a single source and is scattered in a single direction. It is reflective light. Shiny metal objects demonstrate good specular reflection. Shading is not a significant consideration with specular light.

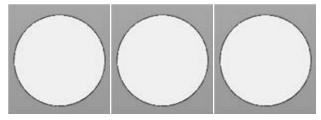

The three pictures above demonstrate ambient light as the light source moves from left to right. There is no effect since ambient light comes from all sides equally.

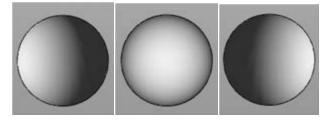

The pictures above show the effects of the motion of the light source using only diffuse lighting. There are no "shiny" spots but yet there is a direction from the light.

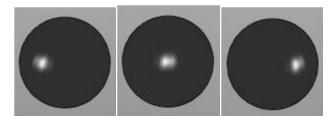


The last set of pictures uses only specular lighting. As the light source moves from left to right, the "shiny" spot follows it. However, there is nothing else lit up, so the effect is not just reflective metal.

Related Topics
Options

### 5.1.3.6 Dimension

This controls the appearance of dimensioning labels, arrows, and leader lines.

## Dialog Box: Options > Dimension

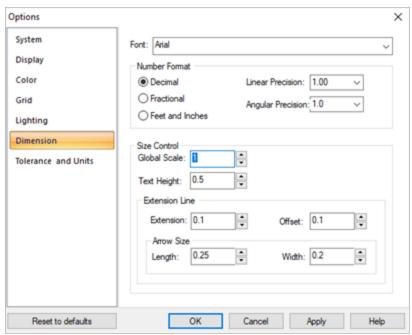


Dialog Box: Options > Dimension

Related Topics
Options

#### 5.1.3.7 Tol. & Units

This controls the accuracy of the model and part units.

## Dialog Box: Options > Tolerance and Units

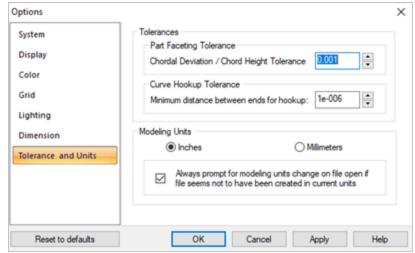

Dialog Box: Options > Tolerance and Units

### Tolerances


This controls the accuracy of the models. Smaller tolerance numbers often result in significantly big files and slower processing time but are more accurate.


The tolerances are set in a dialog.

# Part Faceting Tolerance

### Chordal Deviation/Chord Height Tolerance

The chord height tolerance is used in commands that require approximation of smooth curves and surfaces.

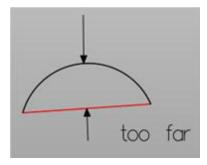

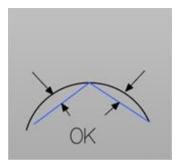

# Curve Hookup Tolerance

This specifies maximum separation between the endpoints of different curves when joining them into a single curve.

### Units

This converts units from inches to millimeters or from millimeters to inches. If there are existing objects, a dialog will appear confirming if you really want to convert the units.



The objects remain the original size but the coordinate values change.

You can check the box to always prompt you to change the units when files are opened if they appear not to be in the correct units. For example, if the system sees a coordinate value that is quite large such as 500.5, then this dialog will display giving you the opportunity to change the units to Millimeters.


Related Topics

**Options** 

## 5.2 Display

The Display Ribbon Bar contains View Modify, Orient, Modes, Visibility and Viewport panes and associated functions.

The Display Ribbon Bar

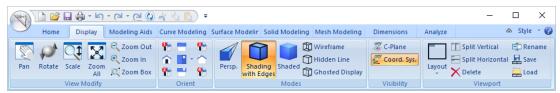

Display Ribbon Bar

## Related Topics

View Modify Pane, Display Ribbon Bar

Orient Pane, Display Ribbon Bar

Modes Pane, Display Ribbon Bar

Visibility Pane, Display Ribbon Bar

Viewport Pane, Display Ribbon Bar

The Ribbon Bar

**Customize Quick Access Toolbar** 

**Customize Dialog** 

**VisualCAD Options** 

### 5.2.1 View Modify

The Display Ribbon Bar contains the following View Modify pane with associated functions.



## Related Topics

**Dynamic Pan View** 

**Dynamic Rotate View** 

**Dynamic Zoom** 

Fit View

**Zoom Out** 

**Zoom In** 

**Zoom Box** 

**Display Ribbon Bar** 

### 5.2.1.1 Dynamic Pan View



The mouse moves the camera left, right, up, or down. It does not change the orientation or rotate.

You can perform dynamic pan by holding down the shift key on your keyboard and using right mouse button click.



**View Bar Options** 

### 5.2.1.2 Dynamic Rotate View



The mouse moves the camera around the model. The center of the view is the center of rotation. You can perform dynamic rotate using right mouse button click.

Related Topics

**View Bar Options** 

#### 5.2.1.3 Dynamic Zoom

This moves the camera towards or away from the center of view with the mouse. Hold down the left mouse-button while moving the mouse forward (zooms in – makes things appear larger) and backward (zooms out – makes things appear smaller).

You can perform dynamic zoom by holding down the control key on your keyboard and using right mouse button click.

Related Topics

**View Bar Options** 

#### 5.2.1.4 Fit View

Zoom

This changes the position of the camera to so that all objects are in view. It does not change the orientation or rotation. If a 3D object (surface, solid or mesh) is selected, the Fit View command will fit the view to the selected objects.

**Note**: With the VisualMILL plug-in module loaded, Fit View will also account for the Stock model if Stock display is toggled on.

Related Topics
View Bar Options

#### 5.2.1.5 **Zoom Out**



The camera backs up to make the objects appear twice as small. The dimensions of the objects don't change, only the position of the camera.

Related Topics
View Bar Options

#### 5.2.1.6 Zoom In



The camera moves forward to make the objects appear twice as large. The dimensions of the objects don't change, only the position of the camera.

Related Topics

**View Bar Options** 

#### 5.2.1.7 Zoom Box

This creates a rubber-banded rectangle surrounding an area. The camera is moved so that the selected area fills the view. If the area's aspect ratio doesn't match the view's ratio, the area is expanded so that the entire selected area is in view. The dimensions of the objects don't change, only the position of the camera.

Related Topics

**View Bar Options** 

### **5.2.2** Orient



The Display Ribbon Bar contains the following Orient pane with associated functions.

Related Topics

Top View

**Bottom View** 

**Front View** 

**Back View** 

**Left View** 

Right View

Iso View 1-4

**Display Ribbon Bar** 

### 5.2.2.1 Top View

Changes the currently selected view to look down to the origin. The camera is positioned at a positive z-height on the z-axis. The x-axis points to the right, the y-axis points up, and the z-axis points out of the screen towards you. If geometry is not at the origin, it might be out of view after top view is selected.

Related Topics
View Bar Options

#### 5.2.2.2 Bottom View

Changes the currently selected view to look up to the origin. The camera is positioned at a negative z-height on the z-axis. The x-axis points to the right, the y-axis points down, and the z-axis points into the screen away from you. If geometry is not at the origin, it might be out of view after bottom view is selected.

Related Topics
View Bar Options

#### 5.2.2.3 Front View

Changes the currently selected view to look at the origin from the front. The camera is position at a negative y-coordinate on the y-axis. The x-axis points to the right, the y-axis points away from you, and the z-axis points up. If geometry is not at the origin, it might be out of view after front view is selected.

Related Topics
View Bar Options

#### 5.2.2.4 Back View

Changes the currently selected view to look at the origin from the back. The camera is position at a positive y-coordinate on the y-axis. The x-axis points to the left, the y-axis points towards you, and the z-axis points up. If geometry is not at the origin, it might be out of view after back view is selected.

Related Topics
View Bar Options

#### 5.2.2.5 Left View

Changes the currently selected view to look at the origin from the left. The camera is position at a negative x-coordinate on the x-axis. The x-axis points away from you, the y-axis points to the left, and the z-axis points up. If geometry is not at the origin, it might be out of view after left view is selected.



### 5.2.2.6 Right View


Changes the currently selected view to look at the origin from the right. The camera is position at a positive x-coordinate on the x-axis. The x-axis points towards you, the y-axis points to the right, and the z-axis points up. If geometry is not at the origin, it might be out of view after right view is selected.


Related Topics
View Bar Options


#### 5.2.2.7 Iso View 1-4


There are 4 preset Iso Views to choose from. Selecting one of the 4 icons changes the currently active viewport to the assigned Iso View direction. Note that if geometry is not at the origin, it might be out of view after an Iso View is selected.

Iso View Examples

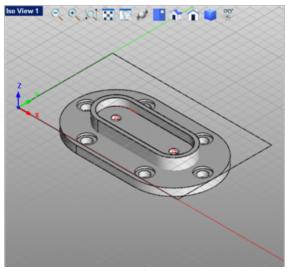

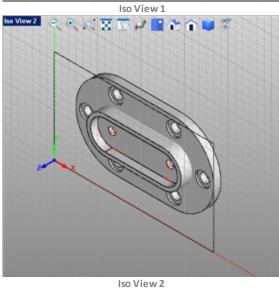

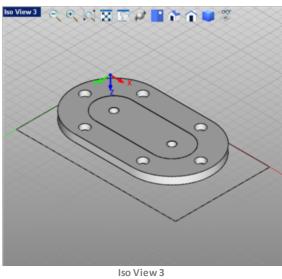

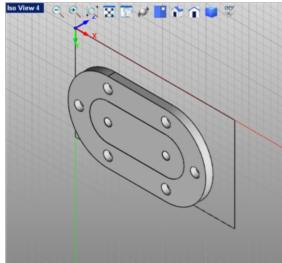

Iso View 4

Related Topics

**View Bar Options** 

### **5.2.3** Modes

The Display Ribbon Bar contains the following Modes pane with associated functions.



Display Ribbon Bar Modes Pane



Perspective / Parallel

Toggle Shading + Edges

**Shaded Display** 

Wireframe Display

**Toggle Hidden Lines** 

**Toggle Ghosted Display** 

**Display Ribbon Bar** 

### 5.2.3.1 Perspective / Parallel




Switch the currently selected view between a perspective view and a parallel view. The default is parallel view. A perspective view shows nearer objects as bigger than normal while objects that are farther away are shown smaller than normal. Even nearer faces of volumes will be bigger than normal while the farther away faces are smaller. This is a

standard are technique to convey distance but distorts the appearance of objects.

A parallel view maintains the size of all objects, regardless of apparent distance.


## Perspective Enabled

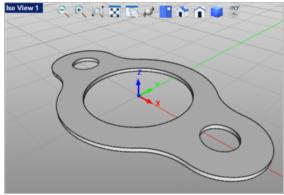

Perspective Enabled



**Parallel Enabled** 

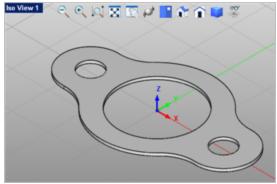

Parallel Enabled


**View Bar Options** 

### 5.2.3.2 Toggle Shading + Edges



All surfaces and volumes in the currently selected view are filled in with colors. The edges of surfaces and volumes are outlined in black. The surface color is modified to display shading and lighting effects. There is a light source that can cause shadows and glossy appearances depending on the position of the geometry and how it is viewed.

# Shading + Edges Enabled

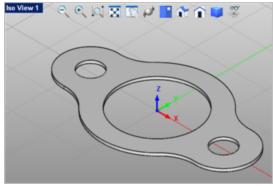

Shading + Edges Enabled

# Related Topics


**View Bar Options** 

### 5.2.3.3 Shaded Display



All surfaces and volumes in the currently selected view are filled in with colors. The color is modified to display shading and lighting effects. There is a light source that can cause shadows and glossy appearances depending on the position of the geometry and how it is viewed.

# Shading Display Enabled

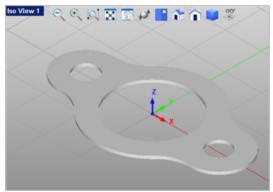

Shading Display Enabled


Related Topics

**View Bar Options** 

### 5.2.3.4 Wireframe Display

All surfaces and volumes in the currently selected view are transparent. Only the edges are displayed. Even the edges that would normally be on the backside of a volume and not normally be displayed show up. If one object is behind another, the farther away object is visible through the nearer object.

# Wireframe Display Enabled

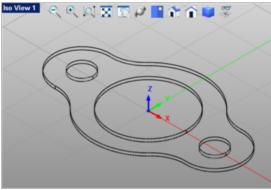

Wireframe Display Enabled


Related Topics

**View Bar Options** 

### 5.2.3.5 Hidden Line Display

All surfaces and volumes in the currently selected view are filled in with a neutral gray. The edges of surfaces and volumes are displayed in the normal color for that layer. No lighting or shading effects are displayed.

# Hidden Line Display Enabled

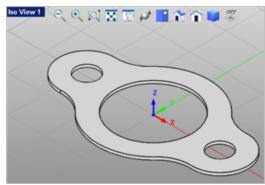

Hidden Line Display Enabled


# Related Topics

**View Bar Options** 

### 5.2.3.6 Ghosted Display

This display mode is a combination of <u>Shaded</u> and <u>Hidden Line</u> where the hidden areas of the part are displayed in a sub-tone color of the part's primary layer color. This display mode give you an understanding the hidden areas of the part. You can control the transparency level (low to high) from the <u>Display Options</u> dialog.

# Ghosted Display Enabled

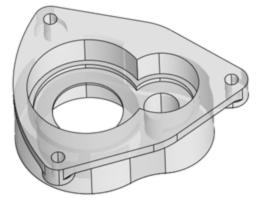

**Ghosted Display Enabled** 



**View Bar Options** 

**Display Options** 

### 5.2.4 Visibility



The Display Ribbon Bar contains the following Visibility pane with associated functions.

Related Topics

Hide/Show Grid

**Hide/Show WCS** 

**Display Ribbon Bar** 

### 5.2.4.1 Hide/Show Grid



Switches on and off the display of the construction plane in the currently selected view. The default is to show the construction plane (grid).

Related Topics

**View Bar Options** 

### 5.2.4.2 Hide/Show WCS

Switches on and off the display of the World Coordinate System in the currently selected view. The World Coordinate System is the three vectors at the origin, which show the positive x, y, and z axes. The default is to show the WCS.

Related Topics

**View Bar Options** 

### 5.2.5 Viewport

The Display Ribbon Bar contains the following Viewport pane with associated functions.



### Related Topics

**Viewport Layouts** 

Viewport Menu

**Split Viewport** 

**Delete Viewport** 

**Rename Viewport** 


**Save Viewport** 

**Load Viewport** 

**Display Ribbon Bar** 

### 5.2.5.1 Viewport Layouts

The next eight options control the viewport layout on the screen according to the following table. These are various useful arrangements of the views.

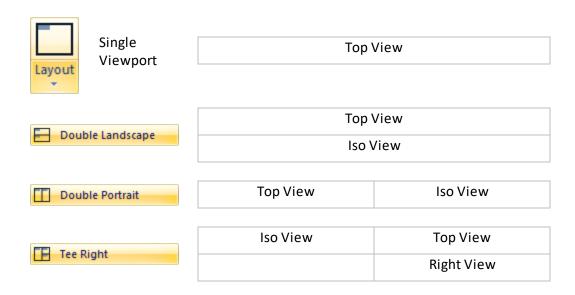




5.2.5.1.1 View port Menu

Use this menu to change the configuration of viewport layouts. A viewport is the section of the screen that displays what a camera would see if it were positioned at a particular location and orientation. The camera will see all the geometry and other objects currently in view with correct lighting and color. The view can be changed by panning or rotating.

# Show me the Viewport Menu

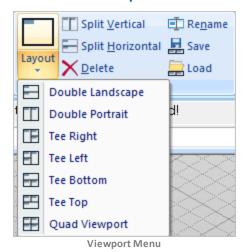

Right-click Menu from Viewport Title



# More about Viewports

Viewports have titles like Top, Right, Left, and Iso (Isometric). The way that the construction plane is aligned is also associated with each different title. For example, both Top and Iso have the construction plane in the z-plane; meanwhile, Left and Right have the construction plane in the y-plane, and Front and Back have the construction plane in the x-plane.

Each of the named views has a starting position and orientation. These positions correspond to the name (i.e. Top is on top of the model, at a large z position (0, 0, big +z). Both the icons and the names suggest looking at a model (a house) from the top, left, right, front, and back. To distinguish between left and right, notice the little chimney on top of the house. It is visible from one side but not the other. The viewport will always start in the same location.

It is possible that objects may be visible in one view but out of view in another. When you change views, some objects won't appear, but they are still there.

Multiple viewports can be displayed at the same time. Commonly used configurations can be selected with the toolbar button.

Selecting one of these buttons immediately changes the view port configuration. While some objects might suddenly become out-of-view, they are still there. Panning or rotating any view should allow them to be seen.

Viewport menu can also be invoked when you right mouse button click on any viewport title.



Related Topics

**Split Viewport** 

**Delete Viewport** 

**Viewport Layouts** 

**Rename Viewport** 

Align to C-Plane

### 5.2.5.2 Split Viewport

The first two options under Viewport are used to split the currently active view into two views, either vertically or horizontally. Any other view that exists in the Viewport layout will remain unchanged.



Top View
Iso View



### 5.2.5.3 Delete Viewport

The third option will delete the currently active view from the viewport layout.

Instantly, one of the adjacent views will fill in the vacated space in the viewport layout. The Delete Viewport option will cause no action if the current viewport layout is a single view.

Related Topics
Viewport

### 5.2.5.4 Rename Viewport



This option allows the currently active view to be renamed. The name change is temporary and neither the name nor the viewport are saved for later reference.

Related Topics
Viewport

### 5.2.5.5 Save Viewport


This option allows the currently active Viewport to be Saved for later recall. Complete the Viewport Name dialog and then pick OK to save it. Then at any time you can use the Load Viewport command to reload it as needed.



Related Topics
Load Viewport

### 5.2.5.6 Load Viewport

This option allows you to Load a Viewport that was previously saved using the <a href="Save Viewport">Save Viewport</a> command. When you select the Load Viewport icon the following Saved Viewports dialog is displayed. Select a saved viewport from the list and it will be displayed in the currently active viewport. To rename a saved viewport, select it and then pick the Rename ... button.

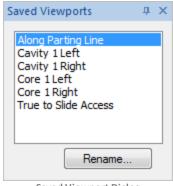

Saved Viewport Dialog

Related Topics


<u>Viewport</u>

Save Viewport

# 5.3 Modeling Aids

The Modeling Aids Ribbon Bar contains Clipboard, Selections, Commands, Objects and C-Plane panes and associated functions.

The Modeling Aids Ribbon Bar

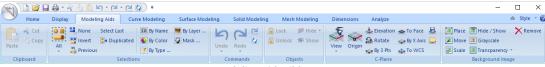

Modeling Aids Ribbon Bar

Related Topics

Clipboard Pane, Modeling Aids Ribbon Bar

Selections Pane, Modeling Aids Ribbon Bar

Commands Pane, Modeling Aids Ribbon Bar

Objects Pane, Modeling Aids Ribbon Bar

C-Plane Pane, Modeling Aids Ribbon Bar

Background Image Pane, Modeling Aids Ribbon Bar


The Ribbon Bar

**Customize Quick Access Toolbar** 

**Customize Dialog** 

**VisualCAD Options** 

### 5.3.1 Clipboard

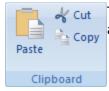

The Modeling Aids Ribbon Bar contains the following Clipboard pane with associated functions.

Related Topics

**Cut Selection** 

**Copy Selection** 

Paste Selection

Modeling Aids Ribbon Bar

### 5.3.1.1 Cut Selection

Objects will be deleted, but will remain on the clipboard until replaced by the next items moved/copied to the clipboard. If no objects are selected when the command is executed, objects can be picked.

Related Topics

**Copy Selection** 

**Paste Selection** 

### 5.3.1.2 Copy Selection



Objects will be copied onto the clipboard. If no objects are selected when the command is executed, objects can be picked.

Related Topics

**Cut Selection** 

**Paste Selection** 

### 5.3.1.3 Paste Selection





All objects on the clipboard will be put at the cursor's position when the command was executed.


Related Topics

**Cut Selection** 

**Copy Selection** 

### 5.3.2 Selections


The Modeling Aids Ribbon Bar contains the following Selections pane with associated functions.

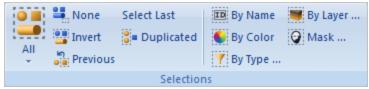

Modeling Aids Ribbon Bar Selections Pane

These commands allow you to select certain geometry to apply commands to as a group. Commands such as Delete or Scale will apply to all of the currently selected geometry in the same way and at the same time. Selected geometry will be highlighted with the highlight color. The default highlight color is yellow. Selected items can also be on multiple layers.

Multiple items can be selected by holding down the control key (on the keyboard) and left-clicking on the item with the mouse.

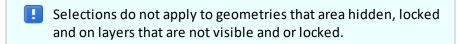

# Related Topics

Select Menu

**Select Points** 

Select Lines/Polylines

Select Arcs/Circles

Select Arcs/Circles ...

**Select Nurbs Curves** 

**Select Polycurves** 

**Select Point Clouds** 

**Select Shells** 

**Select Meshes** 

**Select Dimensions** 

**Select Open Curves** 

Select All

Select None

**Invert Selections** 

**Select Previous** 

Select Last

**Select Duplicated** 

Select by Name

Select by Color

Select by Type ...


Select by Layer ...

Selection Mask ...

Modeling Aids Ribbon Bar

### 5.3.2.1 Select Menu

Pick the indicator to drop down the Select Menu.

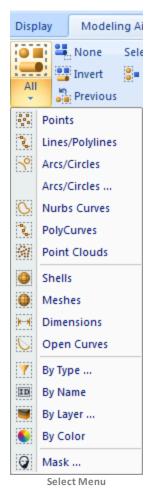

5.3.2.1.1 Select Points

Points All points will be selected. All other geometry will be deselected.

Related Topics

Select Menu

Selections Pane, Modeling Aids Ribbon Bar

### 5.3.2.1.2 Select Lines/Polylines

Lines/Polylines All lines and polylines will be selected. All other geometry will be deselected.

Select Menu

Selections Pane, Modeling Aids Ribbon Bar

#### 5.3.2.1.3 Select Arcs/Circles



All arcs and circles will be selected. All other geometry will be deselected.

# Related Topics

Select Menu


Selections Pane, Modeling Aids Ribbon Bar

### 5.3.2.1.4 Select Arcs/Circles ...



This function selects arcs and circles only, but gives the option to be selective to a range of diameter values and orientation.

# Select Arcs/Circles dialog box

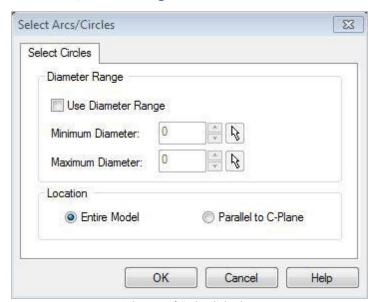

Select Arcs/Circles dialog box

### • Diameter Range

If the diameter range is used, the diameters may be entered directly or existing arcs may be picked on the screen to set these values.

### Location

Another option restricts the selection to only arcs and circles that are Parallel (coplanar) to the C-Plane.

### Related Topics

Select Menu

Selections Pane, Modeling Aids Ribbon Bar

### 5.3.2.1.5 Select Nurbs Curves



All NURBS will be selected. All other geometry will be deselected.

# Related Topics

Select Menu

Selections Pane, Modeling Aids Ribbon Bar

### 5.3.2.1.6 Select Polycurves




All curves made of sub curves (e.g. chained curves) will be selected. All other geometry will be deselected.

# Related Topics

Select Menu

Selections Pane, Modeling Aids Ribbon Bar

### 5.3.2.1.7 Select Point Clouds

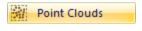

Use this command to select Point Cloud objects. Currently, the Point Cloud object can only be created from corresponding data during Import.

# Related Topics

Select Menu

Selections Pane, Modeling Aids Ribbon Bar

### 5.3.2.1.8 Select Shells




All surfaces & poly-surface objects (not meshes) will be selected. All other geometry will be deselected.

Select Menu

Selections Pane, Modeling Aids Ribbon Bar

### 5.3.2.1.9 Select Meshes

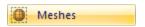

All meshes will be selected. All other geometry will be deselected.

Related Topics

Select Menu

Selections Pane, Modeling Aids Ribbon Bar

### 5.3.2.1.10 Select Dimensions



All Dimension labels and leader lines will be selected. All other geometry will be deselected.

Related Topics

Select Menu

Selections Pane, Modeling Aids Ribbon Bar

### 5.3.2.1.11 Select Open Curves




All curves including polylines, poly-curves, NURBS curves that are open will be selected. All other geometry will be deselected.


The Open Curves selection function is found under Select on the Menu Bar.

This function will automatically identify all curves on the screen that have an 'open' end that is not connected to another curve. These curves will be selected and highlighted.

Select Open Curves example

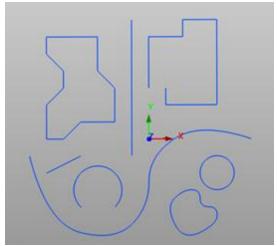

Select Open Curves - Before

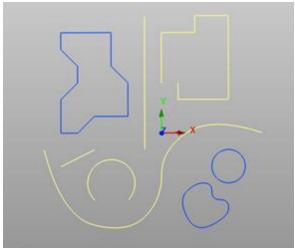

Select Open Curves - Before

Select Menu

Selections Pane, Modeling Aids Ribbon Bar

### 5.3.2.2 Select All



All geometry on all layers is selected.

Related Topics

Select Menu

Selections Pane, Modeling Aids Ribbon Bar

### 5.3.2.3 Select None

**None** Everything is deselected.

Related Topics

Select Menu

Selections Pane, Modeling Aids Ribbon Bar

### 5.3.2.4 Invert Selections



All geometry currently selected will be deselected; meanwhile, currently unselected items will be selected and highlighted.

Related Topics

Select Menu

Selections Pane, Modeling Aids Ribbon Bar

### 5.3.2.5 Select Previous



Geometries that were previously selected will be re-selected. All currently selected items will be deselected.

Related Topics

Select Menu

Selections Pane, Modeling Aids Ribbon Bar

### 5.3.2.6 Select Last

Last Created

The geometry created last will be selected.

Related Topics

Select Menu

Selections Pane, Modeling Aids Ribbon Bar

### 5.3.2.7 Select Duplicated



Selects objects that are geometrically identical with another object and visible, regardless of other object properties.

Select Menu

Selections Pane, Modeling Aids Ribbon Bar

### 5.3.2.8 Select by Name



Geometry will be selected whose name matches a name that you enter. All other geometry will be deselected.

Related Topics

Select Menu

Selections Pane, Modeling Aids Ribbon Bar

### 5.3.2.9 Select By Color



Select an entity and then all geometry with the same color is also selected automatically. All other geometry will be deselected.

Related Topics

Select Menu


Selections Pane, Modeling Aids Ribbon Bar

### 5.3.2.10 Select By Type ...



Geometry of the desired type will be selected. All other geometry will be deselected.

Object Selection Filters dialog box

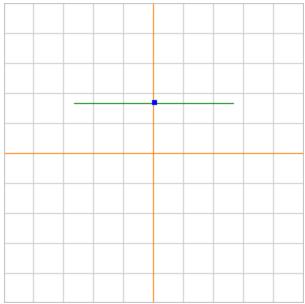

Object Selection Filters dialog box

- Selectable Types Check the box next to the object types that you wish to select.
- Select All / Clear All Selects or Clears all types selected.

Select Menu


Selections Pane, Modeling Aids Ribbon Bar

### 5.3.2.11 Select By Layer ...



By Layer.... All geometry on the desired layer will be selected. All other geometry will be deselected.

**Object Selection Filters dialog box (by layer)** 

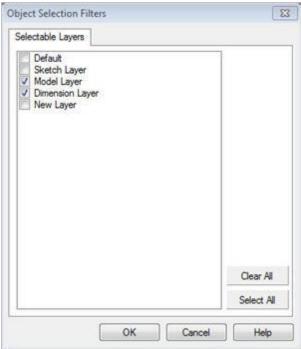

Object Selection Filters dialog box (by layer)

- Selectable Types
  Check the box next to the object types that you wish to select.
- Select All / Clear All
   Selects or Clears all types selected.


Select Menu

Selections Pane, Modeling Aids Ribbon Bar

### 5.3.2.12 Selection Mask ...

Use this to set masks based on object types for subsequent selection operations. All other geometry will be deselected. This can be selected from the Menu bar by clicking on Select, then choosing Selection Mask from the list. Geometries can be selected either by clicking on Select from Menu bar and selecting All or dragging a window with mouse to select the geometry in the viewport.

Selection Mask dialog box

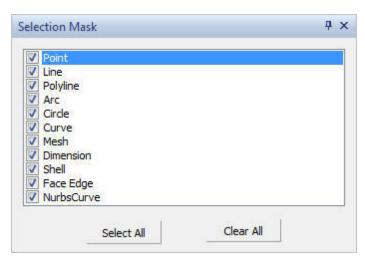

### **Selection Masks**


Check the box next to the mask types that you wish to select.

### Select All / Clear All


Selects or Clears all types selected.

# Selection Mask dialog box example

Example shown displays the Selection Mask for Polyline only and the only geometry selected in the viewport are the polylines.

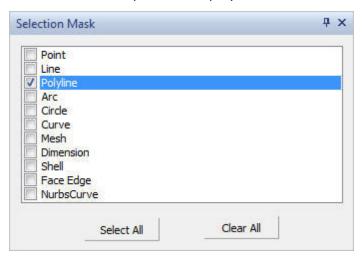

Geometry can be selected either by clicking on Select from Menu bar and selecting All or dragging a window by holding left mouse to select the geometry.

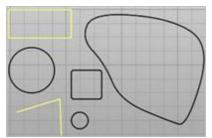

Selection Mask for Polyline results


Select Menu

Selections Pane, Modeling Aids Ribbon Bar

### 5.3.2.13 Other Selection Techniques

5.3.2.13.1 Select Chain

Shift + You can automatically select a chain of curves or edges by pressing the <Shift> key while performing a left-click selection. This works with any curves or edges that are connected end-to-end. If you want to create a Curve Chain entity see Create a Curve Chain. Note that this is not a command and is not located on a menu.

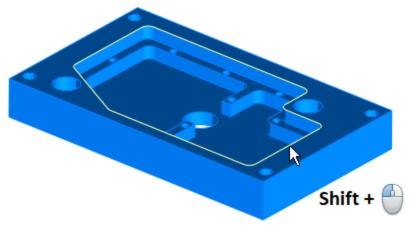

Chain Select (<Shift> + Left-click)


Related Topics

Select Menu

Create a Curve Chain

### 5.3.2.13.2 Highlights

Objects that are available for selection are highlighted when the cursor moves over them. This functionality is not a command and is not located on a menu. This functionality is enabled/disabled from the <a href="System Options">System Options</a> dialog.

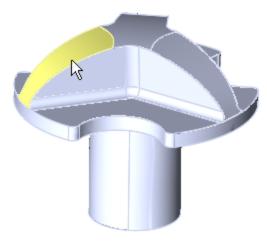


**Pre-Selection Highlight** 

Related Topics
Select Menu
System Options

### 5.3.2.13.3 Multi-Selections

When you make a selection and there are multiple objects available, the Multi-Selection Dialog will display listing the available objects. You can select an object from the list. If you select None or pick outside of the list, the dialog will close automatically.

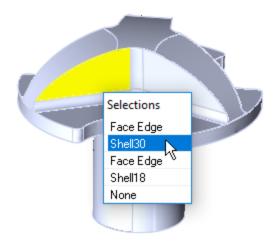


Multi-Selection Dialog

Related Topics
Select Menu

#### 5.3.2.13.4 from Solid

If your part is a solid model (also referred to as a poly-surface), you can highlight and select one or more surfaces. To select one surface just move the cursor over it and then left-click to select it. To select multiple surface, press and hold the <Ctrl> key when selecting.

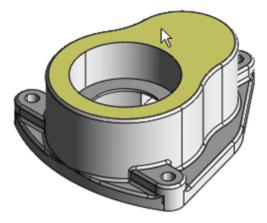

**Select Surface from Solid** 



### 5.3.3 Commands



The Modeling Aids Ribbon Bar contains the following Commands pane with associated functions.

Related Topics

Undo

**Undo Multiple** 

Redo

Redo Multiple

**Command Recall** 

**Continuous Command Recall** 

**Modeling Aids Ribbon Bar** 

### 5.3.3.1 Undo





Undoes the previous construction or edit command. Everything goes back to how it was before the last command was executed. Geometry objects that were previously selected (highlighted) will remain selected when Undo is used.

**Related Topics** 

Undo

**Undo Multiple** 

Redo

Redo Multiple

Commands Pane, Modeling Aids Ribbon Bar

### 5.3.3.2 Redo





Redoes a previously undone construction or edit command. Everything returns to the state after the command was executed.

**Related Topics** 

Undo

**Undo Multiple** 

Redo Multiple

Commands Pane, Modeling Aids Ribbon Bar

### 5.3.3.3 Undo Multiple

Undo Multiple

This command will Undo multiple commands at the same time. A list of recent commands is displayed. A command is selected, and all commands

after that one including it are undone. Everything returns to the state before the selected command was executed.

The commands are listed in reverse order with the most recent at the top. The last command executed is number one, and the second to last command executed is number two. Only one command needs to be picked, and all commands higher (more recent or occurred after that one) will automatically be selected.

**Dialog Box: Undo Multiple** 



Dialog Box: Undo Multiple

**Undo** 

Redo

Redo Multiple

Commands Pane, Modeling Aids Ribbon Bar


### 5.3.3.4 Redo Multiple

Redo Multiple commands that were previously undone. A list of undone commands is displayed. A command is selected, and all commands after that one including it are redone. Everything returns to the state after the selected command was executed.

The commands are listed in the order that they were originally executed. The first command executed is number one, and the second command executed is number two. Only one command needs to be picked, and all commands higher will automatically be selected.

Once commands have been undone, they will appear in the multiple redo list until another command is executed. Then the multiple redo list is emptied. Redo will have no effect.

Dialog Box: Redo Multiple

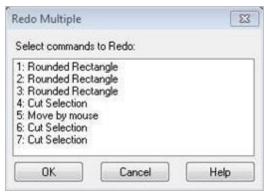

Dialog Box: Redo Multiple

Undo

**Undo Multiple** 

Redo

Commands Pane, Modeling Aids Ribbon Bar

### 5.3.3.5 Command Recall

Redo the previous command.

Related Topics

Commands Pane, Modeling Aids Ribbon Bar

### 5.3.3.6 Continuous Command Recall

Automatically repeats the last command without having to go back & reselect the command from the toolbar or use the right mouse button click or enter option to repeat the previous command.

Related Topics

Commands Pane, Modeling Aids Ribbon Bar

### 5.3.4 Objects



The Modeling Aids Ribbon Bar contains the following Objects pane with associated functions.

Related Topics

**Lock Selection** 

**Unlock All** 

**Hide Selection** 

**Hide Non-Selected** 

**Show All** 

Modeling Aids Ribbon Bar

### 5.3.4.1 Lock Selection



Locks all selected objects. Sets the state of selected objects so they can be seen but cannot be selected for editing.

Related Topics

**Unlock** 

### 5.3.4.2 Unlock All



Unlocks all locked objects.

Related Topics

Lock

### 5.3.4.3 Hide Selection




Hides or Conceals selected objects from view.

Related Topics

**Show** 

**Hide Non-Selected** 

### 5.3.4.4 Hide Non-Selected

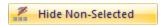

Hides or Conceals non selected objects from view.

Related Topics

<u>Hide</u>

**Show** 

### 5.3.4.5 Show All



Displays all hidden objects.

**Related Topics** 

<u>Hide</u>

**Hide Non-Selected** 

#### 5.3.5 C-Plane

The Modeling Aids Ribbon Bar contains the following C-Plane pane with associated functions.



C-Plane Pane, Modeling Aids Ribbon Bar

# **Related Topics**

Set C-Plane to View

Set C-Plane to Top View

Set C-Plane to Bottom View

Set C-Plane to Front View

Set C-Plane to Back View

Set C-Plane to Left View

Set C-Plane to Right View

Set C-Plane Origin

**Set C-Plane Elevation** 

Rotate the C-Plane

Set C-Plane by 3 Points

Set C-Plane to 3D Face

Set C-Plane to Planar Curve

Set C-Plane by X Axis

Set C-Plane to WCS

Save C-Plane

Load a C-Plane

Modeling Aids Ribbon Bar

### 5.3.5.1 Set to View



This option immediately sets the orientation of the C-Plane to be parallel to the plane of the currently active view. The origin remains the same.

**Command Prompts** 

C-Plane by View:: Done

Related Topics

C-Plane Pane, Modeling Aids Ribbon Bar

### 5.3.5.2 Set to Top View



Move the construction plane to the origin and in the z-plane.

Related Topics

C-Plane Pane, Modeling Aids Ribbon Bar

### 5.3.5.3 Set to Bottom View



Move the construction plane to the origin and in the z-plane.

Related Topics

C-Plane Pane, Modeling Aids Ribbon Bar

### 5.3.5.4 Set to Front View



Move the construction plane to the origin and in the y-plane.

Related Topics

C-Plane Pane, Modeling Aids Ribbon Bar

### 5.3.5.5 Set to Back View



Move the construction plane to the origin and in the y-plane.

# Related Topics

C-Plane Pane, Modeling Aids Ribbon Bar

### 5.3.5.6 Set to Left View



Move the construction plane to the origin and in the x-plane.

# Related Topics

C-Plane Pane, Modeling Aids Ribbon Bar

### 5.3.5.7 Set to Right View



Move the construction plane to the origin and in the x-plane.

# Related Topics

C-Plane Pane, Modeling Aids Ribbon Bar

### 5.3.5.8 **Set Origin**



Moves the origin of the C-Plane to a selected point or entered coordinates. The current configuration of the construction plane is saved whenever the model is saved into the VCP (VisualCAD Part) file.

# Command Prompts

C-Plane Origin:: Pick origin point or enter coordinates x, y and z

# Related Topics

C-Plane Pane, Modeling Aids Ribbon Bar

### 5.3.5.9 Set Elevation

Moves the elevation of the C-Plane along its normal (perpendicular to the plane). Input is a single distance and may be positive or negative. A positive number moves the plane towards the positive end of the coordinate axes even if the viewing location is along the negative axis. All input values are treated as an incremental distance relative to the current location of the plane.

# Command Prompts C-Plane Elevation:: Enter C-Plane elevation Related Topics C-Plane Pane, Modeling Aids Ribbon Bar

### 5.3.5.10 Rotate

Rotates the C-Plane about one of the principle axes of the current C-Plane, X, Y, or Z. The center of rotation is the center of the plane and not necessarily the origin. Input is 'axis,degrees'.

# Command Prompts

Rotate C-Plane:: Enter axis to rotate about and angle to rotate by (eg: X,45)

# Related Topics

C-Plane Pane, Modeling Aids Ribbon Bar

### 5.3.5.11 Set by 3 Pts

Three points are selected (origin, x-axis and y-axis) or entered to re-orient the C-Plane. The y-axis point defines the C-Plane and the general direction of the positive y-axis.

# **Command Prompts**

C-Plane by 3Pts:: Pick origin point or enter coordinates x, y and z C-Plane by 3Pts:: Pick x axis point or enter coordinates x,y and z C-Plane by 3Pts:: Pick y axis point or enter coordinates x,y and z

### Notes

- 1. The true y-axis will lie in the plane and be perpendicular to the x-axis and will pass through the origin point.
- 2. The third point cannot be collinear with the other two points.

# Related Topics

C-Plane Pane, Modeling Aids Ribbon Bar

### 5.3.5.12 C-Plane to 3D Face

The C-Plane will be oriented to a selected flat plane of a geometry object. The pick point will become the C-Plane origin.

**Command Prompts** 

C-Plane to 3D Face:: Pick flat area:

**Basic Procedure** 

	Screen Pick	Command Input
Step 1	Select the 3D face to align the C-Plane to.	None

**Related Topics** 

C-Plane Pane, Modeling Aids Ribbon Bar

### 5.3.5.13 C-Plane to Planar Curve

The C-Plane will be oriented to a selected planar curve. The pick point will become the C-Plane origin.

**Command Prompts** 

C-Plane to Planar Curve:: Pick a planar curve

**Basic Procedure** 

	Screen Pick	Command Input
Step 1	Select the 3D planar curve to align the C-Plane to.	None

**Related Topics** 

C-Plane Pane, Modeling Aids Ribbon Bar

### 5.3.5.14 Set by X Axis

By X Axis

Two points are entered to re-orient the x-axis of the C-Plane:

# **Command Prompts**

C-Plane by X-Axis:: Pick origin point or enter coordinates x, y and z

C-Plane by X-Axis:: Pick x axis point or enter coordinates x,y and z

### Basic Procedure

	Screen Pick	Command Input
Step 1	Pick the new origin point or enter the x,y,z coordinates.	Command 1,1,0.75
Final	Pick a point on the new x-axis. The new C-Plane is parallel to the prior orientation.	

# Related Topics

C-Plane Pane, Modeling Aids Ribbon Bar

### 5.3.5.15 Set to WCS



Resets the C-Plane back to its default orientation relative to the WCS and the currently active viewport. The origin will be the WCS origin.

# Related Topics

C-Plane Pane, Modeling Aids Ribbon Bar

### 5.3.5.16 Save ...



This option saves the C-Plane orientation from the currently active view. A name must be provided for later reference when loading.

# C-Plane Name dialog box




# Related Topics

C-Plane Pane, Modeling Aids Ribbon Bar

### 5.3.5.17 Load ...

This option allows the retrieval of a saved C-Plane into the currently active view. A list of previously saved C-Planes is presented. These saved C-Planes may also be deleted in this option or renamed.

# Saved C-Planes dialog box

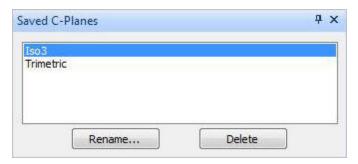

# Related Topics

C-Plane Pane, Modeling Aids Ribbon Bar

### 5.3.6 Background Image

The Modeling Aids Ribbon Bar contains the following Background Image pane with associated functions.



Background Image Pane, Modeling Aids Ribbon

# Related Topics

Place Background Image

**Move Background Image** 

Scale Background Image

Toggle Display of Background Image

**Gray Scale Background Image** 

**Background Image Transparency** 

#### 5.3.6.1 Place Image



Use this command to place an image onto the background of the C-Plane.

# **Command Prompts**

- 1. Select an image using the file browser.
- 2. Pick first point of enter x,y and z
- 3. Pick second point or enter coordinates x, y and z

	Screen Pick	Command Input
Step 1	none	Select image file.
Step 2	Y Pick First Point	Pick first point of enter x,y and z.
Step 3	Pick Second Point	Pick first point of enter x,y and z.





**Background Image Full Viewport** 

**Background Image** 

Move Background Image

Scale Background Image

Toggle Background Image On/Off

**Gray Scale Background Image** 

**Background Image Transparency** 

**Delete Background Image** 

#### **5.3.6.2** Move Image



Use this command to Move the existing background image from one point to another on the C-Plane.

## **Command Prompts**

- 1. Pick first point or enter coordinates x,y and z
- 2. Pick first point or enter coordinates x,y and z
- Basic Procedure

	Screen Pick	Command Input
Step 1	Pick a point to move from. You can use the Object Snaps available from the Status Toolbar.  Most Ceposition Products  Toolbar.  Pick First Point	Pick first point or enter coordinates x,y and z
Step 2	Pick a point to move to. You can use the Object Snaps available from the Status Toolbar.	Pick first point or enter coordinates x,y and z

**Background Image** 

Place Background Image

Scale Background Image

Toggle Background Image On/Off

**Gray Scale Background Image** 

**Background Image Transparency** 

**Delete Background Image** 

#### 5.3.6.3 Scale Image



Use this command to Scale the existing background image on the C-Plane.

## Command Prompts

- 1. Enter scale center point
- 2. Enter first reference point or scale factor
- 3. Enter second reference point

Screen Pick	Command Input
Pick a point to serve as the scaling center point. You can use the <u>Object Snaps</u> available from the <u>Status Toolbar</u> .	Enter scale center point
Mr. Suff Curporation Value Calai Ferrica  Calai Calai Software Product  Calai	
Pick a reference point or enter a scale factor. You can use the Object Snaps available from the Status Toolbar.	Enter first reference point or scale factor
Mr.Soft Corporation  Your CAN Tenure  CARLES Software Products  MILL  MI	
	scaling center point. You can use the Object Snaps available from the Status Toolbar.  Enter scale center point  Pick a reference point or enter a scale factor. You can use the Object Snaps available from the Status Toolbar.

#### Step 3

Pick a second reference point. You can use the <u>Object Snaps</u> available from the <u>Status</u> <u>Toolbar</u>.



Enter second reference point

Enter second reference point

# Related Topics

**Background Image** 

Place Background Image

**Move Background Image** 

Toggle Background Image On/Off

**Gray Scale Background Image** 

**Background Image Transparency** 

**Delete Background Image** 

#### 5.3.6.4 Toggle Image On/Off



Use this command to toggle the display of the background image on and off.

## **Command Prompts**

1. None


	Screen Pick	Command Input
Step 1	Pick the command icon to toggle the display of the background image off.	None



Background Image On

Step 2 Pick the command icon to toggle the display of the background image on.

None

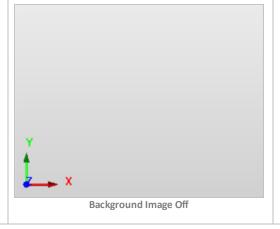

## Related Topics

**Background Image** 

Place Background Image

Move Background Image

Scale Background Image

**Gray Scale Background Image** 

**Background Image Transparency** 

Delete Background Image

#### 5.3.6.5 Gray Scale Image



Use this command to toggle the display of the background image to and from gray scale.

# **Command Prompts**

1. None

# Basic Procedure

	Screen Pick	Command Input
Step 1	Pick the command icon to toggle the display of the background to gray scale (On)	None
	Mesont Caporation  Year Cabal Process  GARREAN Software Products  There are the process of the p	
Step 2	Pick the command icon to toggle the display of the background from gray scale (Off)	None
	MacSoft Corporation  Your Call Protein  CALLICAM Software Products  NICL STREET  AND STREE	
	Gray Scale Off	

# Related Topics

**Background Image** 

Place Background Image

Move Background Image


Scale Background Image

Toggle Background Image On/Off

**Background Image Transparency** 


**Delete Background Image** 

#### 5.3.6.6 Image Transparency

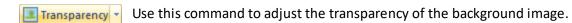

- **Command Prompts** 
  - 1. None

Screen Pick	Command Inpu	
Pick the dropdown menu indicator to the right of the command icon to display the transparency slider.	None	
Move the slider to the right for no transparency		
Transparency V		
Mr. Soft Corporation Value Calai Products  GARD CALA DELIVER Products  STORAGE CALA SOFT SALE PRODU		
Transparency Slider full right		
Move the slider to the middle for half transparency.	None	
	Pick the dropdown menu indicator to the right of the command icon to display the transparency slider.  Move the slider to the right for no transparency  Transparency  Transparency Slider full right  Move the slider to the middle for half	

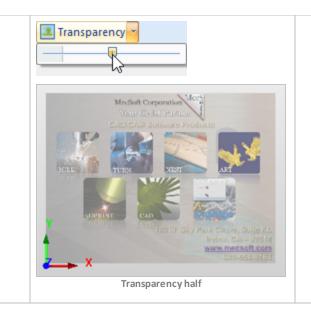

**Background Image** 

Place Background Image

**Move Background Image** 

Scale Background Image

Toggle Background Image On/Off

**Gray Scale Background Image** 

**Delete Background Image** 

#### 5.3.6.7 Delete Image



Use this command to delete the currently active background image.

- Command Prompts
  - 1. None
- Basic Procedure

	Screen Pick	Command Input
Step 1	Pick the command icon to delete the background image.	None

Related Topics

**Background Image** 

Place Background Image

**Move Background Image** 

Scale Background Image

Toggle Background Image On/Off


**Gray Scale Background Image** 

**Background Image Transparency** 

## 5.4 Curve Modeling

The Curve Modeling Ribbon Bar contains Curves and Edit Curves panes and associated functions.

The Curve Modeling Ribbon Bar

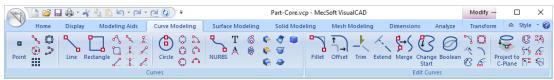

**Curve Modeling Ribbon Bar** 

## Related Topics

Curves Pane, Curve Modeling Ribbon Bar

Edit Curves Pane, Curve Modeling Ribbon Bar

The Ribbon Bar

**Customize Quick Access Toolbar** 

**Customize Dialog** 

**VisualCAD Options** 

#### **5.4.1 Curves**

The Curve Modeling Ribbon Bar contains the following Curves pane with associated functions.



Curve Modeling Ribbon Bar Curves Pane

**Point** 

**Mid Point** 

**Center Point** 

**Point Grid** 

**Polar Grid of Points** 

Points along a Curve

<u>Line</u>

Rectangle, 2 Points

Rectangle, Center

Rectangle, 3 Points

Rectangle, Vertical

**Rectangle** 

**Polyline** 

**Rounded Rectangle** 

Line at an Angle

Mid-Point Line

Line Normal to a Curve

**Line Normal to 2 Curves** 

**Line Normal & Tangent** 

Line Tangent to a Curve

**Line Tangent to 2 Curves** 

Circle at Center and a Point

Circle by 2 Dia. Points

Circle with 3 Dia Points

**Circle Tangent to 3 Curves** 

Arc with Center, Start and Angle

3-Point Arc

Arc with Center, Start and On Point

Ellipse, Diameter

Ellipse, Foci

**Nurbs Curve** 

**Text Curves** 

Text on a Curve

**Spiral Curve** 

**Helix Curve** 

**Curves from Flat Area** 

**Boundary Curves from all Flat Areas** 

**Extract all Silhouette Curves** 

**Curve from a Surface Boundary** 

**Bounding Rectangle** 

**Section Curves** 

Curve Modeling Ribbon Bar

#### 5.4.1.1 Point



Create a point by picking on the screen or by entering X, Y, Z coordinates.

**Command Prompts** 

Point:: Pick point or enter coordinates x,y and z

	Screen Pick	Command Input
Step 1 Create a point by picking a location on the screen.	picking a	(Optional) Enter the X, Y, Z coordinates of the point.
	33.75, 28.5, 0.0	
	-8-	Also: Other valid entries are
		33.75, 28.5
		X, Y coordinates only.
		Z is 0.000
		<b>Note</b> : X, Y, Z coordinates are relative to the Construction Plane in the Active View.



Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.2 Point, Mid



Create a point mid-way between two screen picks or by entering X, Y, Z coordinates for either point.

### **Command Prompts**

Mid:: Pick first point or enter coordinates x,y and z

Mid:: Pick second point or enter coordinates x, y and z

	Screen Pick	Command Input
Step 1	*	(Optional) Enter X, Y, [Z] coordinates for the first point.
Step 2	*	(Optional) Enter X, Y, [Z] coordinates for the second point.



<u>Curves Pane, Curve Modeling Ribbon Bar</u>

#### 5.4.1.3 Point, Center

Create a point at the center of a circle made from three construction points.


## **Command Prompts**

Center:: Pick first point or enter coordinates xy and z

Center:: Pick second point or enter coordinates x, y and z

Center:: Pick third point or enter coordinates xy and z

	Screen Pick	Command Input
Step 1	Pick three points to define a circle.	(Optional) Enter X, Y, [Z] coordinates for any of the three points.
	First	0,1,0
Step 2	Second	(Optional) Enter X, Y, [Z] coordinates for any of the three points.

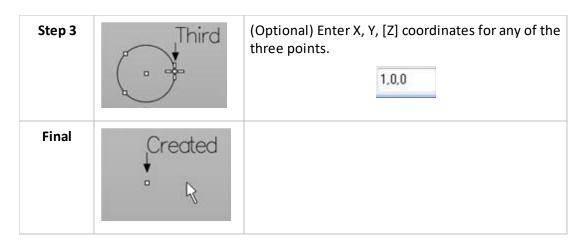

1. All construction points and circle are on the Construction Plane and are not kept.

## Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.4 Point, Grid

Create points in a rectangular grid array.

## **Command Prompts**


Grid:: Enter number of points(circles) in the first and normal direction:: X=4, Y=4, [D=0.000000]

Grid:: Enter angle of first row about X axis:: [A=0.000000]

Grid :: Pick first corner point of spacing


Grid :: Pick second corner point of spacing or enter spacing values

	Screen Pick	Command Input
Step 1		Enter the number of columns (along X) and rows (along Y). The default values are shown in the Prompt.
		4.4

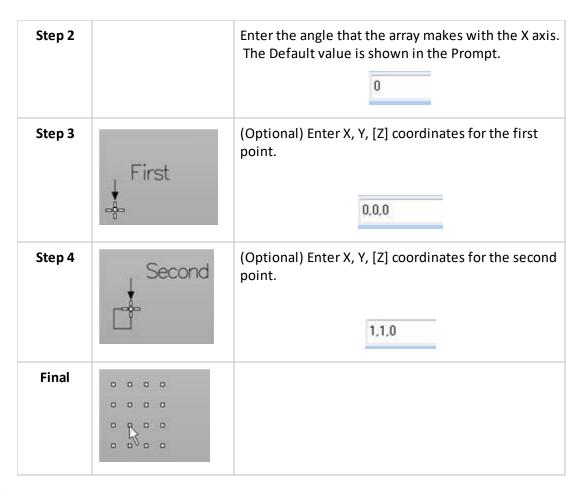

- 1. The incremental distance between the two points (in X and Y) determines the incremental distance between columns and rows respectively.
- 2. Since the construction plane changes between the different views, the directions "First" and "Normal" will also change.

Example with a 45-degree rotation

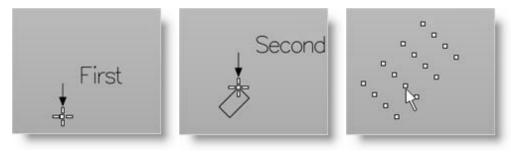

## Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.5 Point, Polar Grid

Create points in a circular grid array.

## Command Prompts


Polar Grid :: Enter number of points along circumference:: N=4, [D=0.000000]

Polar Grid :: Enter angle of first row about X axis:: [A=0.000000]

Polar Grid: Pick center point or enter coordinates xy and z

Polar Grid:: Enter radius or pick radius point: [R=4.000000]

	Screen Pick	Command Input
Step 1		Enter the number of points in the circular array. The default value is shown in the Prompt.
Step 2		Enter the angle that a radial line through the first circumference point makes with the X axis. The Default value is shown in the Prompt.
Step 3	First	(Optional) Enter X, Y, [Z] coordinates for the first point.

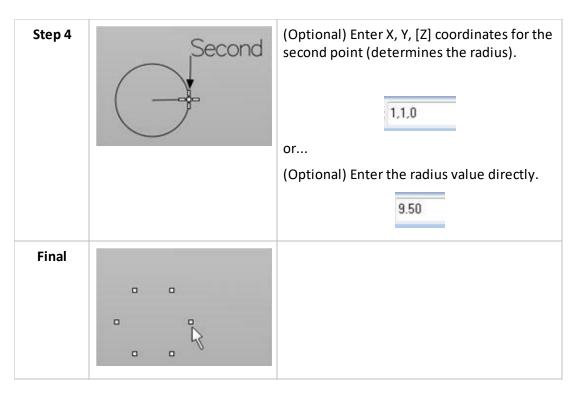

<u>Curves Pane, Curve Modeling Ribbon Bar</u>

#### 5.4.1.6 Point, On Curve

20


Create points equidistant along a curve.

## Command Prompts

On Curve:: Pick the curve(s) to draw the points on. Hit Right Mouse Button/Enter when done.

On Curve :: Enter number of points along the curve(s):: N=4

Screen Pick	Command Input

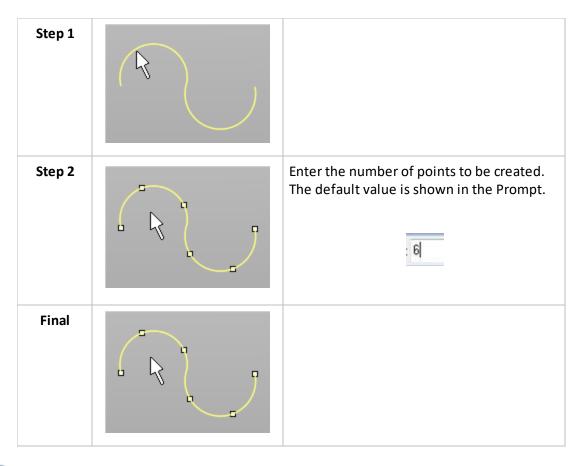

- 1. If multiple curves are selected, a full set of points will be created on each curve.
- 2. The curves can be 3D spatial curves.

## Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.7 Line



Create a line between two points by picking on the screen or by entering X, Y, Z coordinates.

## **Command Prompts**

Line :: Pick first point or enter coordinates xy and z

Line :: Pick second point or enter coordinates x, y and z

	Screen Pick	Command Input
Step 1	First	(Optional) Enter X, Y, [Z] coordinates for the first point.
		0.0,0
Step 2		(Optional) Enter X, Y, [Z] coordinates for the second point.
	Second	1,1,0

- 1. Coordinate entry can be in absolute or relative coordinates. An example of absolute coordinate is shown above.
- 2. Example of coordinate entry Input for relative coordinates:
  - a. Pick first point or enter coordinates x,y and Z: 2,0
  - b. Pick second point or enter coordinates x,y and Z: R5,0
- 3. For the second point, the coordinate input can also be entered as @5,0. This creates a horizontal line that is 5 units in length from 2,0 to 7,0 in X Y coordinates.
- 4. To create a vertical line, the coordinate entry for second point can be entered as @0,5. This creates a vertical line that is 5 units in length from 2,0 to 2,5 in X Y coordinates.
- 5. To create a line at an angle the coordinate entry for the second point can be entered as @5<45. This creates a line at 45 degrees which is 5 units in length.

## Related Topics

<u>Curves Pane, Curve Modeling Ribbon Bar</u>

#### 5.4.1.8 Rectangle, 2 Points



Create a rectangle between two points by picking on the screen or by entering X, Y, Z coordinates.

# **Command Prompts**

Rectangle:: Pick first corner point or enter coordinates x,y and z Rectangle:: Pick second corner point or enter coordinates x,y and z

Rectangle:: Done

### Basic Procedure

	Screen Pick	Command Input
Step 1	First	(Optional) Enter X, Y, [Z] coordinates for the first point.
Step 2	Second	(Optional) Enter X, Y, [Z] coordinates for the second point (opposite corner).
Final		

#### **Notes**

- 1. The rectangle is aligned with the axes of the Construction Plane.
- 2. The final rectangle will lie in a plane parallel to the Construction Plane and with one corner at the first point selected.
- 3. If the second point selected is not in that same plane, it will be projected onto the destination plane of the final rectangle.
- 4. Coordinate entry can be in absolute coordinates or in relative coordinates. An example of absolute coordinate is shown above.
- 5. Example of coordinate entry Input for relative coordinates:

- a. Pick first corner point or enter coordinates x,y and Z: 2,0
- b. Pick second corner point or enter coordinates x,y and Z: R6,4
- 6. For the second point, the coordinate input can also be entered as @6,4.

  This creates a rectangle line that is 6 units in length and 4 units in width from 2,0 to 8,4 in X Y coordinates.

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.9 Rectangle, Center



Create a rectangle about a center point. Picking points or entering coordinates.


## Command Prompts

Rectangle:: Pick center point or enter coordinates x,y and z

Rectangle:: Pick other corner point or enter coordinates x,y and z

Rectangle:: Done

	Screen Pick	
Step 1	Rectangle:: Pick center point or enter coordinates x,y and z	
Step 2	Rectangle:: Pick other corner point or enter coordinates x,y and z	
Final	Rectangle:: Done	

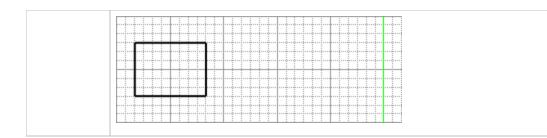

- 1. The rectangle is aligned with the axes of the Construction Plane.
- 2. The final rectangle will lie in a plane parallel to the Construction Plane and with one corner at the first point selected.
- 3. If the second point selected is not in that same plane, it will be projected onto the destination plane of the final rectangle.
- 4. Coordinate entry can be in absolute coordinates or in relative coordinates.
- 5. Example of coordinate entry Input for relative coordinates:
  - a. Pick first corner point or enter coordinates x,y and Z: 2,0
  - b. Pick second corner point or enter coordinates x,y and Z: R6,4
- 6. Coordinate input can also be entered as @6,4.
  This is 6 units in length and 4 units in width from 2,0 to 8,4 in X Y coordinates.

## Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.10 Rectangle, 2 Points 2




Create a rectangle between two points by picking on the screen or by entering X, Y, Z coordinates.

## Command Prompts

Rectangle:: Pick first corner point or enter coordinates x,y and z

Rectangle:: Pick second corner point or enter coordinates x,y and z

Rectangle:: Done

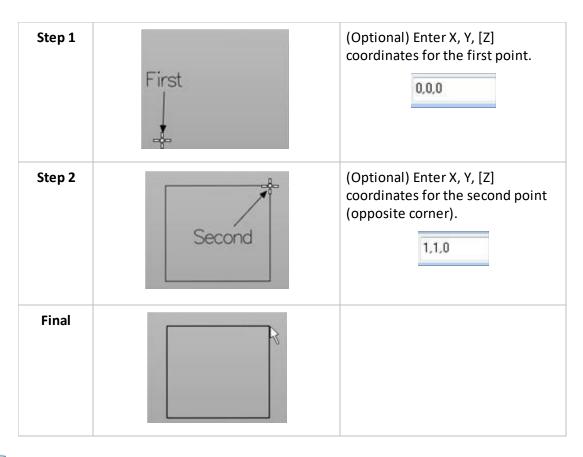

- 1. The rectangle is aligned with the axes of the Construction Plane.
- 2. The final rectangle will lie in a plane parallel to the Construction Plane and with one corner at the first point selected.
- 3. If the second point selected is not in that same plane, it will be projected onto the destination plane of the final rectangle.
- 4. Coordinate entry can be in absolute coordinates or in relative coordinates. An example of absolute coordinate is shown above.
- 5. Example of coordinate entry Input for relative coordinates:
  - a. Pick first corner point or enter coordinates x,y and Z: 2,0
  - b. Pick second corner point or enter coordinates x,y and Z: R6,4
- 6. For the second point, the coordinate input can also be entered as @6,4.

  This creates a rectangle line that is 6 units in length and 4 units in width from 2,0 to 8,4 in X Y coordinates.

## Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.11 Rectangle, 3 Points

Rectangle by three points

Create a rectangle between two base points and a height point. Picking points or entering coordinates.

# Command Prompts

Rectangle:: Pick edge start point or enter coordinates x,y and z
Rectangle:: Pick edge end point or enter coordinates x,y and z

Rectangle:: Pick point or enter coordinates x,y and z or enter width

Rectangle:: Done

	Screen Pick	
Step 1	Rectangle:: Pick edge start point or enter coordinates x,y and z	
Step 2	Rectangle:: Pick edge end point or enter coordinates x,y and z	
Step 3	Rectangle:: Pick point or enter coordinates x,y and z or enter width  Point 1 Point 2	
Final	Rectangle:: Done	

- 1. The rectangle is aligned with the axes of the Construction Plane.
- 2. The final rectangle will lie in a plane parallel to the Construction Plane and with one corner at the first point selected.
- 3. If the second point selected is not in that same plane, it will be projected onto the destination plane of the final rectangle.
- 4. Coordinate entry can be in absolute coordinates or in relative coordinates. An example of absolute coordinate is shown above.
- 5. Example of coordinate entry Input for relative coordinates:
  - a. Pick first corner point or enter coordinates x,y and Z: 2,0
  - b. Pick second corner point or enter coordinates x,y and Z: R6,4
- 6. For the second point, the coordinate input can also be entered as @6,4.

  This creates a rectangle line that is 6 units in length and 4 units in width from 2,0 to 8,4 in X Y coordinates.

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.12 Rectangle, Vertical



Create a rectangle between two base points and a height point. You can pick points or enter coordinates (See notes below).

# **Command Prompts**


Rectangle:: Pick edge start point or enter coordinates x,y and z  $\,$ 

Rectangle:: Pick edge end point or enter coordinates x,y and z


Rectangle:: Pick point or enter coordinates x,y and z or enter width

Rectangle:: Done


	Screen Pick	
Step 1 Rectangle:: Pick edge start point or enter coordinates x,y		

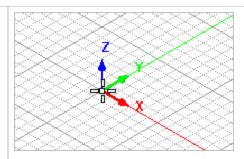


**Step 2** Rectangle:: Pick edge end point or enter coordinates x,y and z

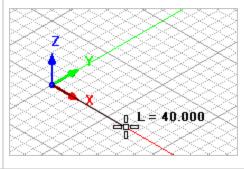

**Step 3** Rectangle:: Pick point or enter coordinates x,y and z or enter width

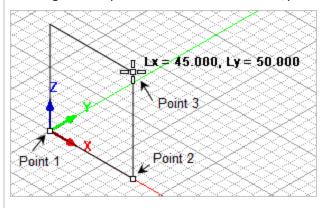

Final Rectangle:: Done

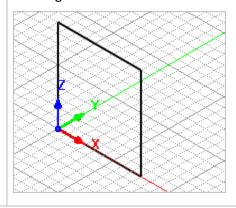

- 1. The rectangle is aligned with the axes of the Construction Plane.
- 2. The final rectangle will lie in a plane parallel to the Construction Plane and with one corner at the first point selected.
- 3. If the second point selected is not in that same plane, it will be projected onto the destination plane of the final rectangle.
- 4. Coordinate entry can be in absolute coordinates or in relative coordinates. An example of absolute coordinate is shown above.
- 5. Example of coordinate entry Input for relative coordinates:
  - a. Pick first corner point or enter coordinates x,y and Z: 2,0
  - b. Pick second corner point or enter coordinates x,y and Z: R6,4
- 6. For the second point, the coordinate input can also be entered as @6,4.

  This creates a rectangle line that is 6 units in length and 4 units in width from 2,0 to 8,4 in X Y coordinates.

## Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.13 Polyline



Create a polyline between consecutive points by picking on the screen or by entering X, Y, Z coordinates. Polylines are continuous line segments connected end-to-end.

## Command Prompts

Polyline :: Pick point or enter coordinates x,y and z

The Prompt (and point selection) is repeated until the right mouse button is clicked.

	Screen Pick	Command Input
Step 1	First	(Optional) Enter X, Y, [Z] coordinates for the first point.  Input: 0,0,0

Step 2	Middle	(Optional) Enter X, Y, [Z] coordinates for any of the intermediate points.
Step 3	After the last point is selected, click the right mouse button to end the selection.	
Final		

- 1. Coordinate entry can be in absolute coordinates or in relative coordinates. An example of absolute coordinate is shown above.
- 2. Example of coordinate entry Input for relative coordinates:
  - a. Pick point or enter coordinates x,y and Z: 2,0
  - b. Pick point or enter coordinates x,y and Z: R5,0
- 3. For the second point, the coordinate input can also be entered as @5,0. This creates a horizontal line that is 5 units in length from 2,0 to 7,0 in X Y coordinates.
- 4. To create a vertical line, the coordinate entry for next point can be entered as @0,5. This creates a vertical line that is 5 units in length from 2,0 to 2,5 in X Y coordinates.
- 5. To create a line at an angle the coordinate entry for the next point can be entered as @5<45. This creates a line at 45 degrees which is 5 units in length.

## Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.14 Rounded Rectangle



Create a rounded rectangle between two points by picking on the screen or by entering X, Y, Z coordinates.


### **Command Prompts**

Rounded Rect. :: Pick first comer point or enter coordinates x.y and z

Rounded Rect. :: Pick second corner point or enter coordinates x,y and z

Rounded Rect. :: Enter radius or point for rounded comer to pass through::[R=0.250000]

	Screen Pick	Command Input
Step 1	First	(Optional) Enter X, Y, [Z] coordinates for the first point.
Step 2	Second	(Optional) Enter X, Y, [Z] coordinates for the second point (opposite corner).  1.1.0

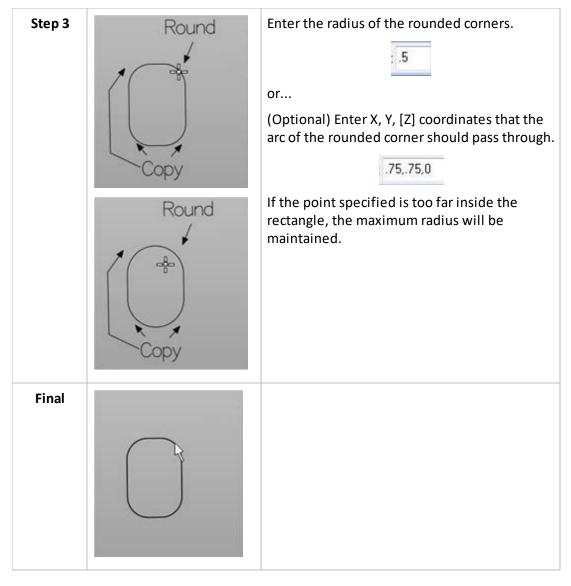



- 1. The rules for alignment and positioning are the same as for **Rectangle**.
- 2. All four rounded corners will have the same radius.
- 3. A radius value of 0.00 will produce a standard rectangle with sharp corners.
- 4. If the entered radius equals or exceeds half the width of the rectangle, then a full-radius rectangle will result.

Example of coordinate entry Input for relative coordinates.

- 1. Pick first corner point or enter coordinates x,y and Z: 2,0
- 2. Pick second corner point or enter coordinates x,y and Z: R6,4 For the second point, the coordinate input can also be entered as @6,4

This creates a rounded rectangle line that is 6 units in length and 4 units in width from 2,0 to 8,4 in X Y coordinates.

3. Enter radius: 0.25

### Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.15 Line at Angle



Create a line at an angle to a base line, and either through a point or you can input an angle and a line length.


### **Command Prompts**

Line at Angle :: Select first point of Base Line

Line at Angle :: Select second point of Base Line

Line at Angle :: Enter point on line or specify an angle::[A=0.000000]

	Screen Pick	Command Input
Step 1	First	(Optional) Enter X, Y, [Z] coordinates for the first point.
Step 2	Second	(Optional) Enter X, Y, [Z] coordinates for the second point.

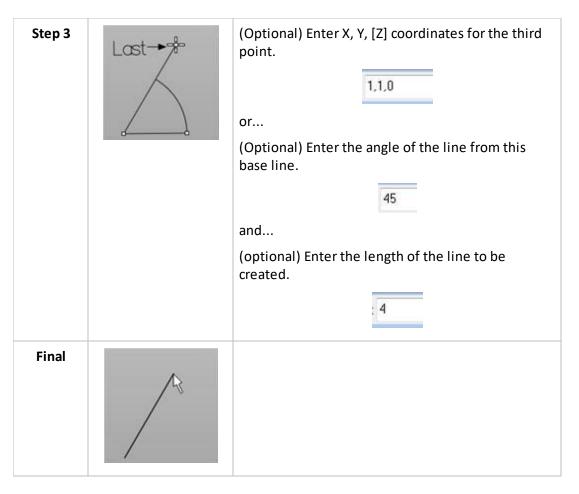

### Notes Notes

- 1. The first point selected is the pivot point about which the angle is measured.
- 2. If the second point is defined by picking on the screen or by entering coordinates, then the distance between those two points becomes the length of the created line, unless the length is entered through Input.
- Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.16 Line, from Mid-Point

Create a line by specifying its mid-point and an end-point.

## **Command Prompts**

From Mid-Point :: Pick first point or enter coordinates xy and z

From Mid-Point :: Pick second point or enter coordinates x, y and z

### Basic Procedure

	Screen Pick	Command Input
Step 1	First	(Optional) Enter X, Y, [Z] coordinates for the first point (mid-point).
Step 2	Lost	(Optional) Enter X, Y, [Z] coordinates for the second point (end point).
Final	R	

## Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### **5.4.1.17** Line, Normal to



Create a line that is normal (perpendicular) to a curve. Line segments, polylines, and rectangles can also be selected.

# **Command Prompts**

Tangent to:: Pick the curve to draw the tangent to

Tangent to:: Pick end point of Tangent line. You can use "S" key to change tangent line (BLACK line will be created)

# Basic Procedure

	Screen Pick	Command Input
Step 1	Pend	
Step 2		(Optional) Enter X, Y, [Z] coordinates for the far end point.  1.1.0
Final		

# Notes

- 1. If the normal line cannot be calculated, no line will appear on the screen.
- 2. In the case of multiple solutions, the nearest normal point will be used.

## Related Topics

<u>Curves Pane, Curve Modeling Ribbon Bar</u>

#### 5.4.1.18 Line, Normal to 2



Create a line that is normal (perpendicular) to two curves. Line segments, polylines, and rectangles can also be selected.

### **Command Prompts**

Create Line Normal to 2 :: Pick first curve to draw the normal to

Create Line Normal to 2 :: Pick second curve to draw the normal to

Create Line Normal to 2 :: Pick the candidate solution

### Basic Procedure

	Screen Pick	Command Input
Step 1	O	none
Step 2		
Step 3		
	In step 3 above where there are multiple solutions, move the cursor along the line and left click when the desired solution appears.	

## Notes

1. If the normal line cannot be calculated, no line will appear on the screen.

## Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.19 Line, Normal & Tangent



Create a line that is normal (perpendicular) to the first curve and tangent to the second curve. Line segments, polylines, and rectangles can also be selected.

# Command Prompts

Normal & Tangent: Pick the curve to draw the normal to

Normal & Tangent: Pick curve to draw the tangent to

### Basic Procedure

	Screen Pick	Command Input
Step 1	0	none
Step 2		
Step 3		
Final	2	

Notes

1. If the line cannot be calculated, a line will not appear on the screen.

### Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.20 Line, Tangent to

I


Create a line that is tangent to a curve. Line segments, polylines, and rectangles can also be selected.

# **Command Prompts**

Tangent to:: Pick the curve to draw the tangent to

Tangent to:: Pick end point of Tangent line. You can use "S" key to change tangent line (BLACK line will be created)

	Screen Pick	Command Input
Step 1		
Step 2	L = 1.807	(Optional) Enter X, Y, [Z] coordinates for the non-tangent end point.  1.1.0  (Optional) Pick the S key to switch the tangent direction of the line:

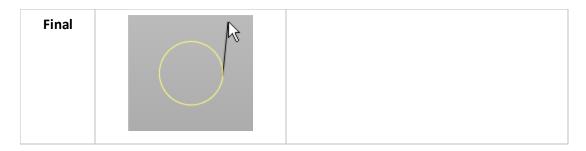

<u>Curves Pane, Curve Modeling Ribbon Bar</u>

#### 5.4.1.21 Line, Tangent to 2



Create a line that is tangent to a two curves. Line segments, polylines, and rectangles can also be selected.

# Command Prompts

Tangent to 2:: Pick first curve to draw the tangent to

Tangent to 2:: Pick second curve to draw the tangent to

	Screen Pick	Command Input
Step 1	O	none
Step 2		



- 1. If multiple curves are pre-selected at the time that this function is used, only one of the pre-selected curves is retained as the first, picked curve.
- 2. If no solution is possible, then no line will appear on the screen.
- 3. Moving the cursor around will reveal the other solutions of tangency.

## Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.22 Circle, Center, On Pt




Create a circle by picking a center point and a point on the circle.

# Command Prompts

Center, On Pt :: Pick center point or enter coordinates x,y and z

Center, On Pt :: Enter point on circle::[D=0.707107]

	Screen Pick	Command Input	
Step 1	First	(Optional) Enter X, Y, [Z] coordinates for the center point.	
	*	0,0,0	

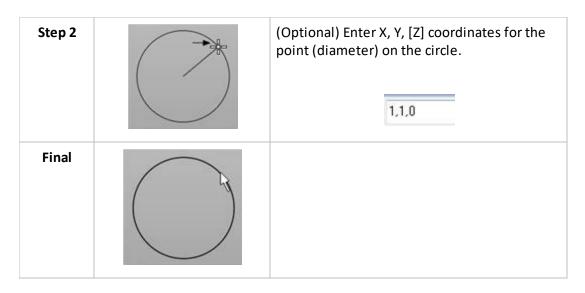

- 1. The circle will be created in a plane that passes through the specified center point and that is parallel to the Construction Plane of the currently selected view.
- 2. If the circumference point is not on the plane of the circle, it will be projected normal onto that plane.

## Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.23 Circle, Start, Diameter Pt




Create a circle by picking two opposite points on the circumference that determine the diameter of the circle.

# **Command Prompts**

Start, Diameter Pt :: Pick diameter start point or enter coordinates x,y and z

Start, Diameter Pt :: Pick diameter end point or enter coordinates xy and z

Screen Pick Command Input
---------------------------

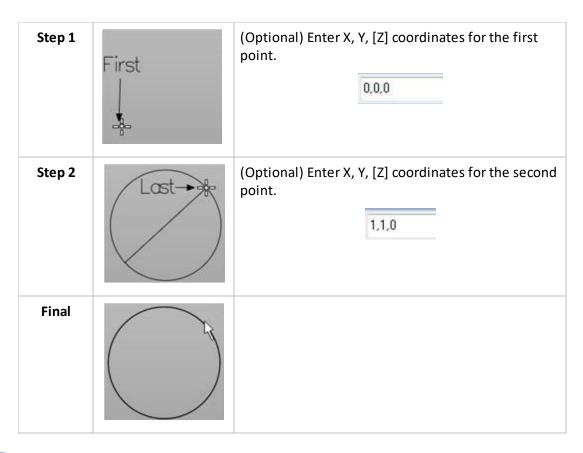

- 1. The circle will be created in a plane that passes through the first circumference point and that is parallel to the Construction Plane of the currently selected view.
- 2. If the second circumference point is not on the plane of the circle, it will be projected normal onto that plane.

## Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.24 Circle, 3 Pts

Create a circle by picking three points on the circumference of the circle.

# Command Prompts

3 Pts :: Pick first point or enter coordinates xy and z

3 Pts :: Pick second point or enter coordinates x, y and z

3 Pts :: Pick second point or enter coordinates x, y and z

# Basic Procedure

	Screen Pick	Command Input
Step 1	First	(Optional) Enter X, Y, [Z] coordinates for the first point.
Step 2	Second	(Optional) Enter X, Y, [Z] coordinates for the second point.
Step 3	Third	(Optional) Enter X, Y, [Z] coordinates for the third point.
Final		

# Notes

- 1. The circle will be created in a plane that passes through all three points. These points may not be collinear.
- 2. The start of the circle will be at the first circumference point specified.

# Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.25 Circle, Tangent to 3



Create a circle that will be mutually tangent to three curves or locations. The geometry selected may be points, lines, or curves.

### Command Prompts


Tangent to 3 :: Pick the first point, line or circle entity

Tangent to 3 :: Pick the second point, line or arc entity or hit enter for mouse point

Tangent to 3 :: Pick the third point, line or arc entity or hit enter for mouse point

Tangent to 3 :: Pick the candidate solution

	Screen Pick	Command Input
Step 1	00	none
Step 2		
Step 3		

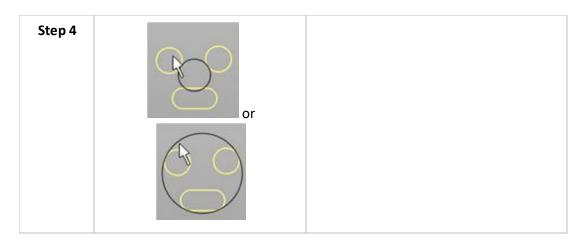

1. If line segments are used, they are extended to lines for the purpose of computing the tangency.

## Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.26 Arc, Center, Start, Angle Pts



Create an arc by giving a center point, a starting point which determines the radius, and an end point, which determines the angle of the arc.


# Command Prompts

Center, Start Angle Pts :: Pick center point or enter coordinates x.y and z

Center, Start Angle Pts :: Pick arc start point or enter coordinates x.y and z

Center, Start Angle Pts :: Pick arc end point or enter coordinates x.y and z::[A=45.000000]

	Screen Pick	Command Input
Step 1	First	(Optional) Enter X, Y, [Z] coordinates for the first point (center of circle).  0.0.0

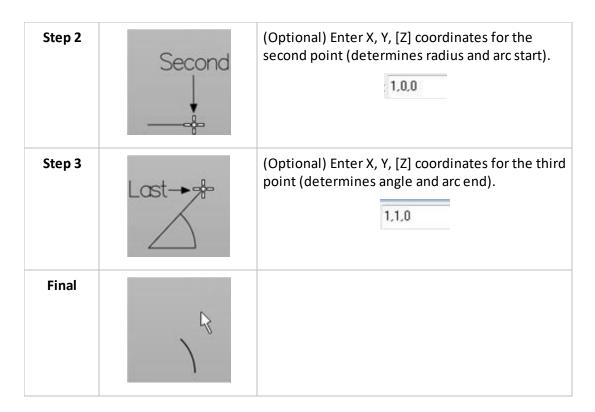

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.27 Arc, 3 Pts



Create an arc by selecting three points on the circumference: a start point, an intermediate point, and an end point (in that order of selection).


# Command Prompts

3 Pts :: Pick first point or enter coordinates x,y and z

3 Pts :: Pick second point or enter coordinates  $x,\,y$  and z

3 Pts :: Pick second point or enter coordinates x, y and z

Screen Pick Command Input
---------------------------

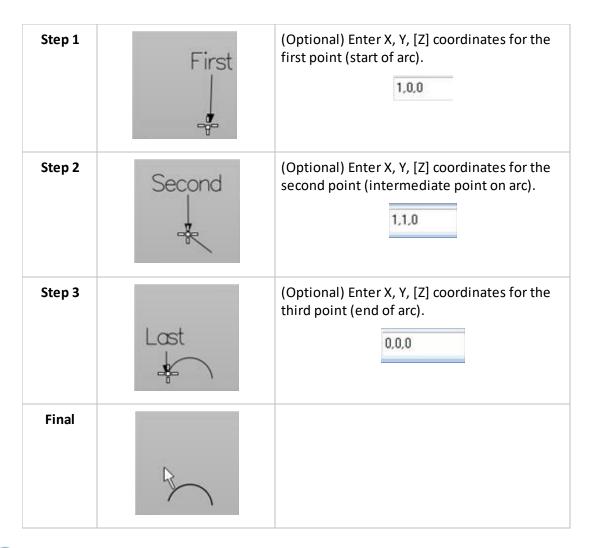

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.28 Arc, Start, End, On



Create an arc by selecting three points on the circumference: a start point, an end point, and then an intermediate point (in that order of selection).

# Command Prompts

Start, End, On :: Pick first point or enter coordinates x,y and z

Start, End, On :: Pick second point or enter coordinates x, y and z

Start, End, On :: Pick third point or enter coordinates xy and z

### Basic Procedure

	Screen Pick	Command Input
Step 1	First	(Optional) Enter X, Y, [Z] coordinates for the first point (start of arc).  1,0,0
Step 2	Second	(Optional) Enter X, Y, [Z] coordinates for the second point (end of arc).
Step 3	Last	(Optional) Enter X, Y, [Z] coordinates for the third point (intermediate point on arc).
Final		

# Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.29 Ellipse, Center, Diameter, End Pt.



Create an Ellipse by selecting three points. The first two points define the major axis while the third point defines the minor axis.


# Command Prompts

Ellipse:: Pick major axis start point or enter coordinates x,y and z

Ellipse:: Pick major axis end point or enter coordinates x,y and z

Ellipse:: Pick minor axis end point or enter coordinates x,y and z or Enter width value

### Basic Procedure

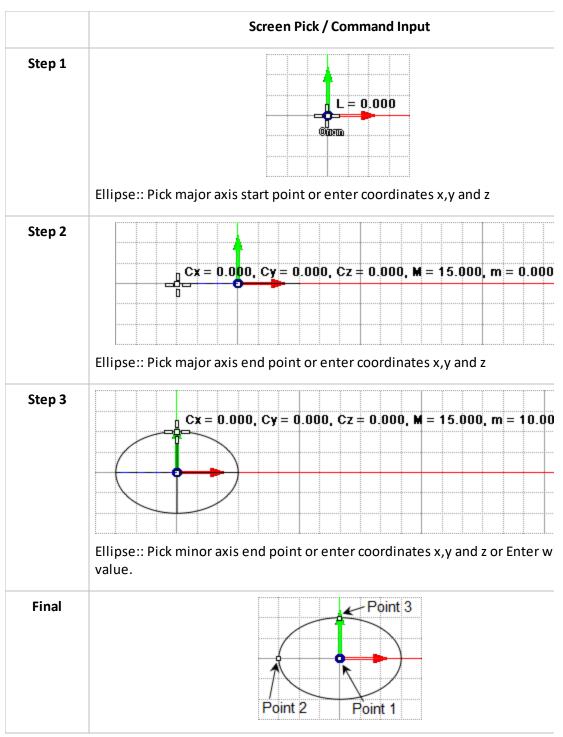

Related Topics

#### Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.30 Ellipse, Diameter, End Pt.

Ellipse by Diameter


Create an Ellipse by selecting two diameter points and a third point to define the axis end point.


## Command Prompts

Ellipse:: Pick major axis start point or enter coordinates x,y and z

Ellipse:: Pick major axis end point or enter coordinates x,y and z

Ellipse:: Pick minor axis end point or enter coordinates x,y and z or Enter width value

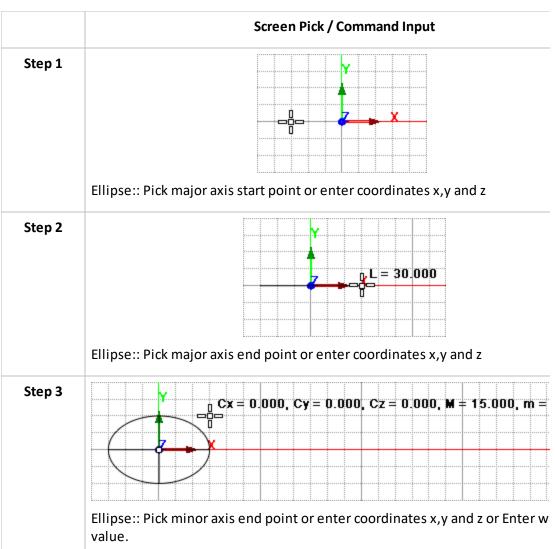

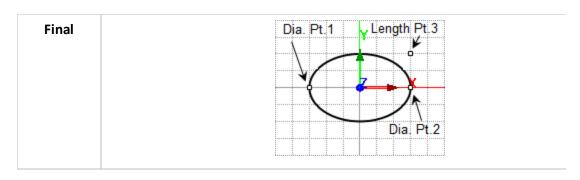

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.31 Ellipse, Foci

Create an Ellipse by defining a focal point about which the ellipse is positioned. The first two points define the ellipse major axis and are the focal points about which the ellipse is located. The minor axis of the ellipse passes through a


the focal points about which the ellipse is located. The minor axis of the ellipse passes through a third point defining the minor axis. Refer to the steps below.


# **Command Prompts**

Ellipse:: Pick first foci point or enter coordinates x,y and z

Ellipse:: Pick second foci point or enter coordinates x,y and z

Ellipse:: Pick point or enter coordinates x,y and z

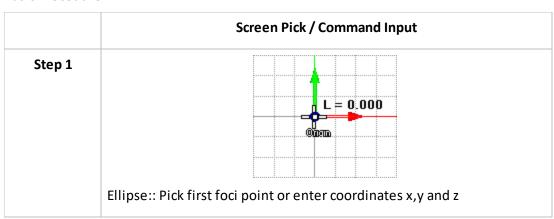

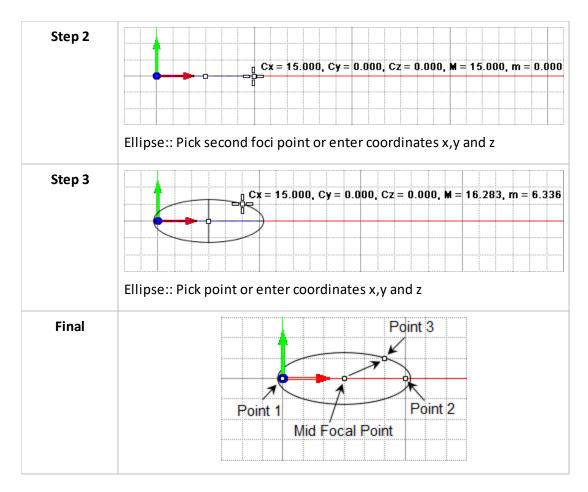

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.32 Nurbs Curve



Non-uniform rational basis-spline (NURBS) is a mathematical way of defining curves. The control points determine the shape of the curve. Typically, each point of the curve is computed by taking a weighted sum of a number of control points. The degree of the Nurbs curve can be set between 1 and 11.

Create a NURBS Curve by first entering the degree of B-Spline and then pick point or enter the X, Y, Z coordinates. Open and closed curves can be created using NURBS Curve. NURBS Curve icon can be selected in the Geometry Ribbon Bar under the Curves tab.

## Command Prompts

Nurbs curve:: Enter degree of BSpline (1 < degree < 11 )::[degree=2]

Nurbs curve:: Pick point or enter coordinates xy and z

Nurbs curve:: Pick point or enter coordinates xy and z

### Basic Procedure

	Screen Pick	Command Input
Step 1		Enter degree of B Spline (1 < degree < 11):: [degree=2]
		Command 2
Step 2	First	(Optional) Pick point or enter coordinates x,y and z
Step 3	Second	(Optional) Pick point or enter X, Y, [Z] coordinates for the second point.
Step 4	Last	(Optional) Pick point or enter X, Y, [Z] coordinates for the last point.

# Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### **5.4.1.33 Text Curves**

Create text curves from keyed-in text. The outlines of letters are created as a series of separate curves.

# **Command Prompts**

Enter parameters and text in dialog.

Text:: Enter start point of text

Dialog Box: Text to Create



**Dialog Box: Text to Create** 

#### Choose Font

VisualCAD supports over 300 different text fonts. Select one from the list.

# Auto Kerning


Kerning is the process of adjusting the spacing between characters in a proportional font, usually to achieve a visually pleasing result. Kerning adjusts the space between individual letter forms, while tracking (letter-spacing) adjusts spacing uniformly over a range of characters. In a well-kerned font, the two-dimensional blank spaces between each pair of characters all have a visually similar area.

• Use the slider to adjust Kerning or check the box to Auto Kerning.

# Other Options

- Bold/Italic
- Text Size
- Allow Single Line Font

Screen Action	Comments
---------------	----------

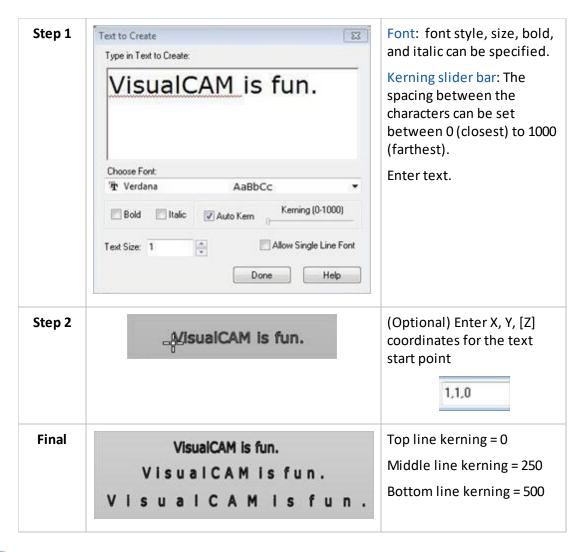

### Notes Notes

- 1. The text curves will be created on a plane parallel to the Construction Plane.
- 2. After the text is created, the curves can be independently manipulated.

## Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.34 Text on Curve




Create text curves that follow a curve. The outlines of letters are created as a series of separate curves.

# Command Prompts

Enter parameters and text in dialog.

Text on Curve:: Pick Curve to create Text on:

### Dialog Box: Text to Create

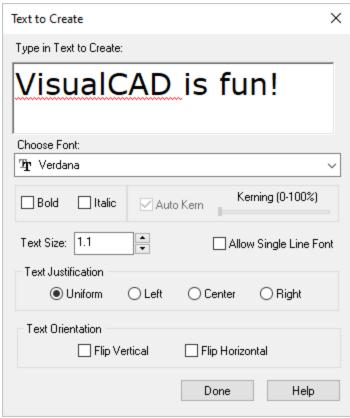

Text to Create (on Curve)

### Choose Font

VisualCAD® supports over 300 different text fonts. Select one from the list.


# Auto Kerning


Kerning is the process of adjusting the spacing between characters in a proportional font, usually to achieve a visually pleasing result. Kerning adjusts the space between individual letter forms, while tracking (letter-spacing) adjusts spacing uniformly over a range of characters. In a well-kerned font, the two-dimensional blank spaces between each pair of characters all have a visually similar area.

• Use the slider to adjust Kerning or check the box to Auto Kerning.


## Other Options

- Bold/Italic
- Text Size
- Allow Single Line Font
- Text Justification
- Text Size
- Text Spacing
- Text Orientation

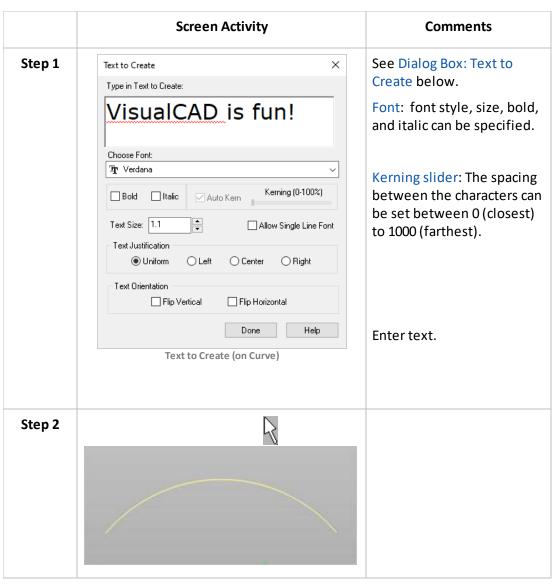

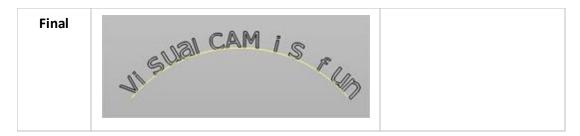

- 1. The text curves will be created along the curve in oriented to the current view.
- 2. After the text is created, the curves can be independently manipulated.
- 3. The text to appear is typed into the box. It will appear in the box in the selected font, bold, and italic applied. Changes in size do not appear in the text in the box but do take effect when the text is actually created.

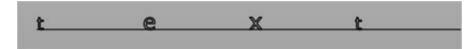

4. Hanging text has the top of the letters on the curve; whereas, the default is the bottom of the letters are on the curve.



5. Flip text flips each individual letter while keeping the sequence of letters the same.



6. The plane of the text is the viewing plane of the currently selected view. It doesn't have to be a construction plane.

## Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.35 Curve, Spiral

Create a spiral curve in a plane.

Command Prompts

Spiral :: Enter the number of revolutions::[N=4]

Spiral :: Pick center point or enter coordinates xy and z

Spiral :: Enter radius or pick radius point::[R=4.000000]

### Basic Procedure

	Screen Pick	Command Input
Step 1		Enter the number of revolutions of the spiral. The Prompt shows the default.
Step 2	First	(Optional) Enter X, Y, [Z] coordinates for the center point.
Step 3		(Optional) Enter the radius.  2.25  or  (Optional) Enter X, Y, [Z] coordinates for the second point which determines the radius.

# Related Topics

<u>Curves Pane, Curve Modeling Ribbon Bar</u>

#### 5.4.1.36 Curve, Helix



Create a helix curve.

# **Command Prompts**


Helix:: Enter the number of revolutions::[N=4]

Helix:: Pick center point or enter coordinates xy and z

Helix:: Enter the height of the helix:[H=2.000000]

Helix:: Enter radius or pick radius point: [R=2.000000]

	Screen Pick	Command Input
Step 1		Enter the number of revolutions of the helix. The Prompt shows the default.
Step 2	First	(Optional) Enter X, Y, [Z] coordinates for the center point.
Step 3	Second	(Optional) Enter X, Y, [Z] coordinates for the second point which determines the axis and height of the helix.
Step 4	Last **	(Optional) Enter the radius.  2.25  or  (Optional) Enter X, Y, [Z] coordinates for the third point which determines the radius of the helix.

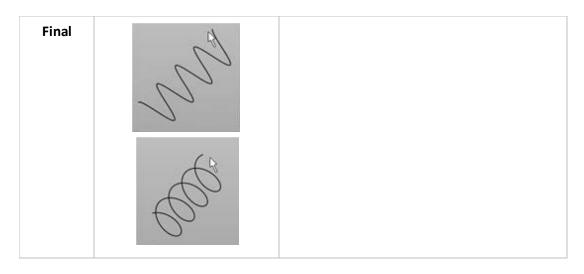

1. Intermediate geometry is discarded and only the helix is retained.

## Related Topics

<u>Curves Pane, Curve Modeling Ribbon Bar</u>

#### 5.4.1.37 Curve, Flat Area




Create a curve(s) forming the boundary of a flat-area region. The region could be a face of a mesh or a plane.

# **Command Prompts**

Flat Area :: Pick flat area:

	Screen Pick	Command Input
Step 1		none

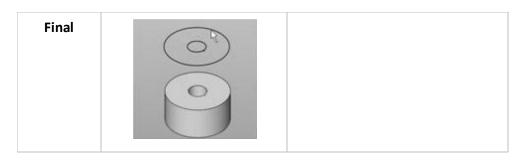

1. If there are holes in the area, multiple curves will be made, one for the outer boundary, and one curve each for the inner boundary of the holes.

## **Related Topics**

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.38 Curve, All Flat Areas



Create a set of curves enclosing flat-area regions. All flat regions parallel to the construction plane will generate curves including surfaces on multiple meshes.

# **Command Prompts**

Click on the function 'All Flat Areas'

	Screen Pick	Command Input
Select Function		none
Final		

- Notes
  - 1. Each of the generated curves is independent after it is created.
- Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.39 Silhouette Curves


Creates a 2D curve that represents the boundaries of the part for all selected solids and surface geometries on the screen. The curves will be independent once created and will be parallel to the active construction.

Reminder: You might want to set a new Layer as the destination for the newly created curves.

**Command Prompts** 

Silhouette:: Pick surface(s) for creating silhouette area curves

	Screen Entry	Command Input
Step 1		Select Surfaces by single pick or rectangular selection.  Hit the ENTER key when done.

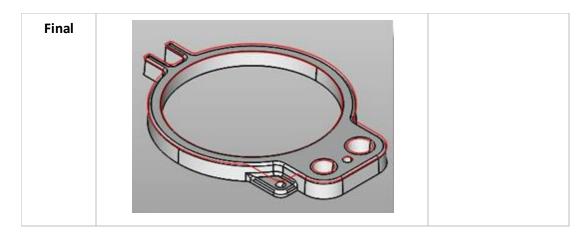

Curves Pane, Curve Modeling Ribbon Bar

### 5.4.1.40 Curve, Surface Boundary

Create a single curve from the outer boundary of a surface.

### **Command Prompts**

Surface Boundary:: Pick a surface to extract edges from

### Basic Procedure

	Screen Pick	Command Input
Step 1		none
Final		

Related Topics

#### Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.41 Curve, Bounding Rect.



Create a rectangular curve that is derived from a volumetric box that surrounds selected geometry objects.

The volumetric box and rectangle are oriented to either the Construction Plane or the World Coordinate System (your choice). The bounding rectangle will then be created at the top, middle, or bottom of that volumetric box (your choice).

### **Command Prompts**


Bounding Rect.:: Pick Objects for command. Hit Right Mouse Button/Enter when done.

Bounding Rect.:: Enter Orientation [CPlane=C,World=W]

Bounding Rect.:: Enter offsets in X & Y Direction [X=0.000000,Y=0.000000]

Bounding Rect.:: Enter Location [Bottom=B,Mid=M,Top=T]

	Screen Pick or Screen Results	Command Input
Step 1	Select all objects to be included in the volumetric box. Hit ENTER to end the selection.	
Step 2	c	Enter 'C' or 'W'.  'C' orients the volumetric box to the Construction Plane.

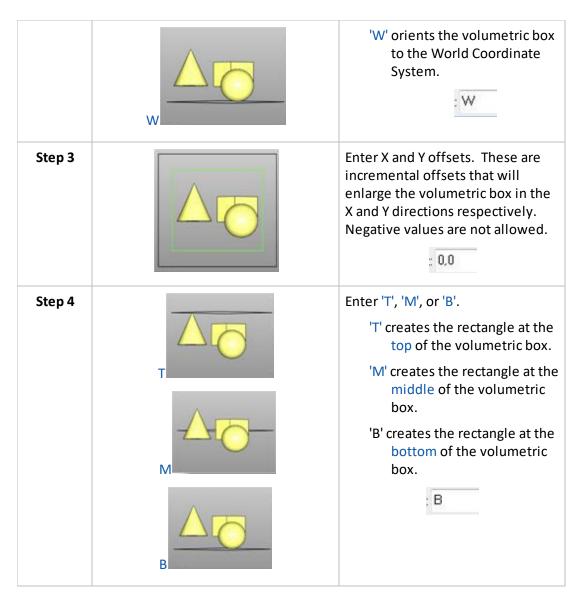


Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.42 Section Curves



Creates cross-section curves through all solids, surface and mesh geometries on the screen. The curves will be independent once created.

Reminder: You might want to set a new Layer as the destination for the newly created curves.

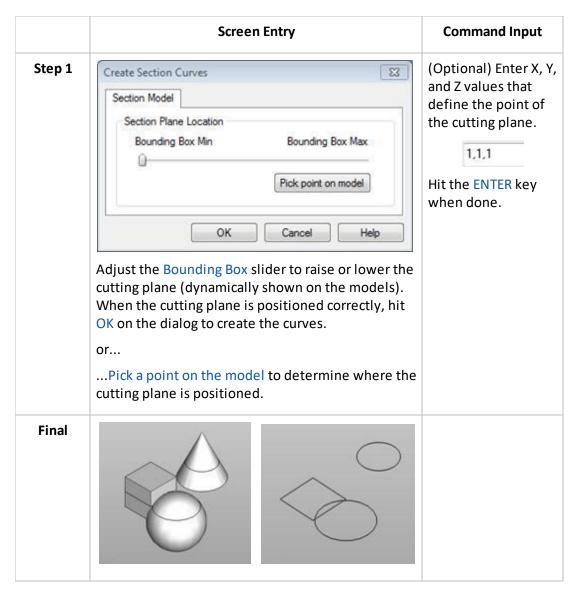

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.1.43 Extract Curve



Creates (extracts) a curve from a surface edge. The curve will be independent of the surface once created.

Reminder: You might want to set a new Layer as the destination for the newly created curves.

# Command Prompts

Extract curve from face edge:: Select face edge(s) and hit Right Mouse Button/Enter when done

### Basic Procedure

	Screen Entry	Command Input
Step 1	Select the surface edge to create a curve from. You can pre-select the surface edge before executing this command.  Selections Face Edge Shell0 None	Right-click or press <enter> when done.</enter>
Final	Z	

# Related Topics

Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.2 Edit Curves

The Curve Modeling Ribbon Bar contains the following Edit Curves pane with associated functions.



Curve Modeling Ribbon Bar Edit Curves Pane

Related Topics

Fillet 2 Curves

**Create Offset Curves** 

Trim a Curve

**Extend Curve** 

**Merge Curves** 

**Curve Boolean** 

Split by Curve

**Close Curve** 

**Change Curve Start Point** 

**Chamfer Curves** 

**Extend Curve by Distance** 

**Reverse Curve Direction** 

Automatically Fillet Curves of a Polyline

Fit an Arc to a Polyline

Smooth a Curve

**Project Curves to a C-Plane** 

Create a Curve Chain

**Split Curves** 

**Break Curves at Sharp Corners** 

**Explode Curves** 

Reduce a Curve


Wrap a Curve onto a Cylinder

**Curve Modeling Ribbon Bar** 

#### 5.4.2.1 Fillet



Create a tangent arc blend (fillet) at the intersection of two curves. The radius of the fillet is user specified. **Zero radius fillets can be created with this command by entering 0** as the fillet radius.

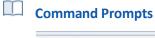


Fillet: Enter fillet radius [R=0.500000]

Fillet: Pick first curve

Fillet: Pick second curve

### Basic Procedure

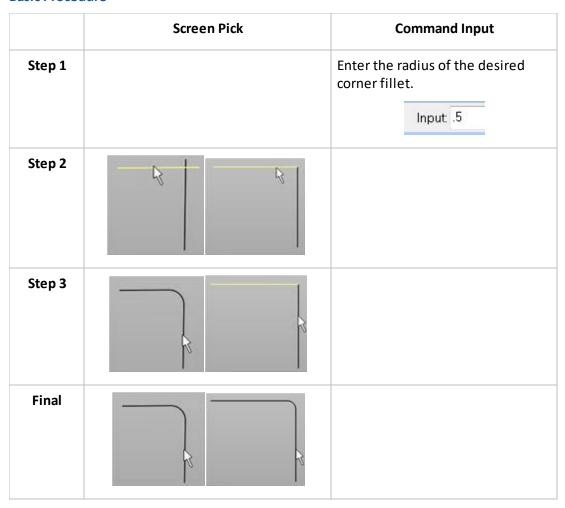

## Notes

- 1. If necessary, the ends of the target curves will be trimmed back to meet the ends of the fillet arc.
- 2. Curve ends will not be extended to meet the intended fillet arc. If the ends are too short, the fillet will not be created.

# Related Topics

Edit Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.2.2 Offset



Create a new curve that is offset from a selected curve. The curve may be open or closed. **Corners may be rounded or sharp.** 

# **Command Prompts**

- 1. Offset:: Select convex corner type [r rounded; s sharp] or Pick curve to offset [convex corners will be rounded]
- 2. Pick curve to offset
- 3. Enter offset distance [D=1.000000]


### Basic Procedure

	Screen Pick	Command Input
Step 1		Select convex corner type [r - rounded; s - s Pick curve to offset [convex corners will be rounded]
Step 2		
Step 3	Use the cursor to indicate the offset side and offset distance.	(Optional) Enter the offset distance.  5  Note: Negative offset distances are not allo To offset toward the inside, position the cu inside the curve and enter a positive offset distance.
Final		

# Notes

1. The existing curve may be pre-selected.

2. Sharp, outside corners in the original curve will result in radius offset corners in the new curve.

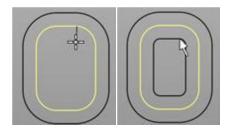

An example of offsetting on the inside of the curve using the cursor pick position.

## Related Topics

Edit Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.2.3 Trim



Modify a curve by trimming away part of it. The curve can be trimmed in the following two cases:

- 1. Between its end point and an intersection with another curve, or
- 2. Between two intersections with other curves.

## Command Prompts

Prompt: Trim:: Pick curve to trim

	Screen Pick	Command Input
Step 1	or 2	none
Final	1 or 2	

# Notes Notes

1. Where you select the curve also selects the segment to be trimmed away.

# Related Topics

Edit Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.2.4 Extend



Extend a curve along its tangency to its nearest intersection with another geometry object.

The curve is extended only on the end where it is picked. To extend the other end, the EXTEND function must be used again by picking the other end.

# **Command Prompts**

Extend:: Pick Curve to Extend

#### Basic Procedure

	Screen Pick	Command Input
Step 1		none
Final		

# Related Topics

Edit Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.2.5 Merge



Convert two or more curves into one curve. The adjacent endpoints must be within VisualCAD tolerance. See **Note 1** below.

## **Command Prompts**

Merge:: Pick curves to merge. Hit Right Mouse Button/Enter when done.

#### Basic Procedure

	Screen Pick	Command Input
Step 1		none
Step 2		
Final		

## Notes

- 1. To set the system tolerance for curve hookup, go to: Home > Options > Tolerance and Units > Curve Hookup Tolerance.
- 2. If curves do not merge as expected, check to see if their end point proximity exceeds the system hookup tolerance.

# Related Topics

Edit Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.2.6 Change Start



Move the start/end position on a closed curve.

**Command Prompts** 

Change Start: Pick closed curve to change start point

#### Basic Procedure

	Screen Pick	Command Input	
Step 1	Start	none	
Final	Start		

## Notes

- 1. This function has no effect on open curves.
- 2. To show curve start point, go to Home > Options > <u>Display</u> > Curve Display Style. Check the box Display Curve / Region Start Point.
- Related Topics

Edit Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.2.7 **Boolean**



Use this command to perform boolean operations on selected curves. The curves must intersect each other and lie on the construction plane. Also be sure to read the notes section below.

# **Command Prompts**


Boolean:: Pick curves to boolean and hit Right Mouse Button/Enter when done.

Boolean:: Pick point or enter coordinates x,y and z.

# Basic Procedure

	Screen Pick	Command Input
Step 1		Select the curves to boolean and hit Right Mouse Button/Enter when done.
Step 2		Make desired selections from the Curve Boolean options dialog. (see below)
Final		Delete input curves: All Combine Regions: Yes Output: Curves

Curve Boolean Options Dialog

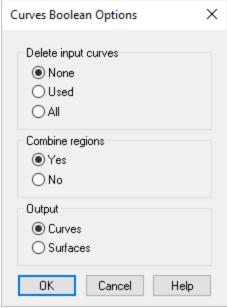

Corve Booleam Dialog

#### **Delete input curves**

- None: Do not delete the input curves.
- Used: Delete only the affected input curves. Leave all other selected curves intact.
- All: Delete ALL selected input curves, even those that are unaffected by the operation.

#### **Combine regions**

- Yes: Merge all affected curves into one curve region.
- No: Do not merge the affected curves.

#### **Output**

- Curves: The resulting regions should be curves.
- Surfaces: The resulting regions should be planar surfaces.

#### **Notes**

- 1. All selected curves must be planar and lie on the construction plane.
- 2. Experiment with each dialog option until you understand the expected results.

# Related Topics

Edit Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.2.8 Split by Curve



Split a curve(s) by another curve. If the curves to split are nested, you can choose to honor the nest (Y) or not (N).

# **Command Prompts**

Split:: Pick Splitting curve


Split:: Pick curves to split. Hit Right Mouse Button/Enter when done.

Split:: Honor Nesting option(Y/N)?


Split:: Done

	Screen Pick / Command Input
Geometry to split	Splitting Curve Curves to Split
Step 1	
	Split:: Pick Splitting curve
Step 2	
	Split:: Pick curves to split. Hit Right Mouse Button/Enter when done.


Step 3

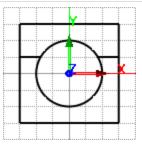


Split:: Honor Nesting option(Y/N)? Y (Results)

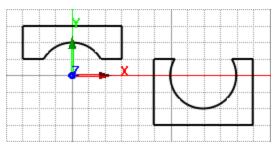

Split:: Honor Nesting option(Y/N)? Y (Results separated)

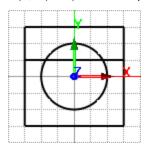

Split:: Honor Nesting option(Y/N)? N (Results)

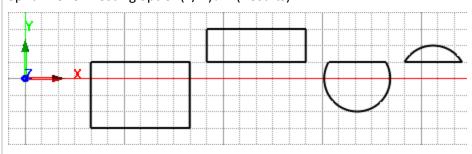

Split:: Honor Nesting option(Y/N)? N (Results separated)



<u>Curves Pane, Curve Modeling Ribbon Bar</u>

#### 5.4.2.9 Close Curve




Use this command to close a curve by automatically connecting its endpoints. Note that this command will not close multiple curves. There needs to be a single curve and multiple curves that have been merged into a single curve. Also **Note**: You can use the Merge Curve command to close multiple curves as long as the Curve Hookup Tolerance is

larger than the gap you are attempting to close. You can find the Curve Hookup Tolerance parameter on the <u>Tols. & Units</u> tab of the <u>VisualCAD Options</u> dialog.

# **Command Prompts**

Close:: Pick curve to close and Hit Right Mouse Button/Enter when done.

# Basic Procedure

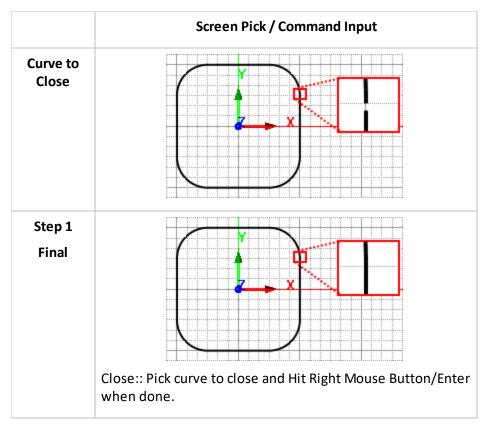

# Related Topics

<u>Curves Pane, Curve Modeling Ribbon</u> Bar

#### 5.4.2.10 Chamfer



Create a chamfer at the intersection of two curves. The length of the chamfer is user specified.

## **Command Prompts**

Chamfer:: Enter chamfer length [C=0.500000]

Chamfer:: Pick first curve

Chamfer:: Pick second curve

### **Basic Procedure**

	Screen Pick	Command Input
Step 1		Enter the length of the desired chamfer.
Step 2	R	
Step 3		
Final		

# Notes

- 1. If necessary, the ends of the target curves will be trimmed back to meet the ends of the chamfer line.
- 2. Curve ends will not be extended to meet the intended chamfer. If the ends are too far apart, the chamfer will not be created.

## Related Topics

Edit Curves Pane, Curve Modeling Ribbon Bar

#### **5.4.2.11 Extend by Dist**

Extend a curve along its tangency by the specified distance. The curve is extended only on the end where it is picked. To extend the other end, the EXTEND function must be used again by picking the other end.

### **Command Prompts**

Extend by Dist:: Enter extension distance::[L=1.000000]

Extend by Dist:: Pick Curve to Extend

#### Basic Procedure

	Screen Pick	Command Input
Step 1		Enter extension distance
		.5
Final	7	
	R	

#### Notes

1. This command can be used with arcs, polylines, poly-curves and Nurbs curve.

# Related Topics

Edit Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.2.12 Reverse



Reverse the definition direction of curves.

Command Prompts

Reverse:: Pick curves to reverse and hit Right Mouse Button/Enter when done

#### Basic Procedure

	Screen Pick	Command Input
Step 1		none
Final	R S	

## Notes

1. To show curve direction arrow: Home > Options > Display > Curve Display Style. Check the box Display Curve / Region Direction Arrow.

# Related Topics

Edit Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.2.13 Auto Fillet



Rounds the corners of Polycurves and Polylines with arcs of a specified radius at the intersection of two curves.

# Command Prompts

Auto Fillet:: Enter fillet radius::[0.250000]

Auto Fillet:: Pick polylines for corners rounding. Hit Right Mouse Button/Enter when done.

### Basic Procedure

	Screen Pick	Command Input
Step 1		Enter the radius of the desired corner fillet.
Step 2		
Final		


## Notes Notes

1. The prompt displays the filleted corner count.

# Related Topics

Edit Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.2.14 Arc Fit

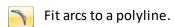

# **Command Prompts**

Arc Fit:: Enter fillet radius::[0.010000]

Arc Fit:: Pick polylines for corners rounding . Hit Right Mouse Button/Enter when done.

# Basic Procedure

	Screen	Pick	Command Input
Step 1			Enter the fillet radius and press enter.
Step 2	Projection:  1 1 10 1 10 1 1 1 1 1 1 1 1 1 1 1 1 1	R	
Final	Properties  \$ 1		

## Notes Notes

- 1. The properties dialog is displayed to show the geometry type as polyline before arc fit and as a curve after the arc fit command is executed.
- Related Topics

Edit Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.2.15 Smooth

6

Modify a curve to smooth sharp corners.

# **Command Prompts**

Smooth:: Pick curve(s) to smooth and hit Right Mouse Button/Enter when done

Smooth:: Enter curve smoothing tolerance::[0.002000]

# Basic Procedure

	Screen Pick	Command Input
Step 1		
Step 2		Enter the smoothing tolerance. A smaller number produces greater smoothing.
Final	S. S	

# Notes

- 1. Curves may be pre-selected.
- 2. Highly smoothed curves will contain many underlying segments. This increases computation when these curves are used in calculations.

# Related Topics

Edit Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.2.16 Project to CPlane




Projects the selected curves to active construction plane. Split an existing curve into two segments at the pick point.

Command Prompts

Project to CPlane:: Pick curves to be projected. Hit Right Mouse Button/Enter when done.

	Screen Pick	Command Input
Step 1	Pick curves to be projected with left mouse click selection or dragging a window with left mouse hold.	none
Final	Hit right mouse button or hit Enter on keyboard to accept selection.  Selected geometry is now projected to the C-Plane coordinate.	

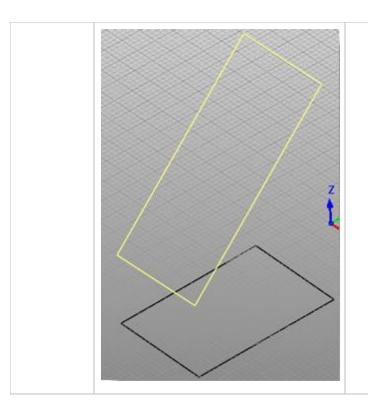


# Related Topics

Edit Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.2.17 Chain

Create a single curve out of multiple curves that form a closed loop. You can automatically select a chain of curves or edges using the <Shift> key while selecting. The curve chain does not have to be created using this command. See <a href="Chain Select">Chain Select</a> for more information.

Command Pro	ompts	
Chain:: Pick co	urve to start chain	
Basic Procedu	re	
	Screen Pick	Command Input

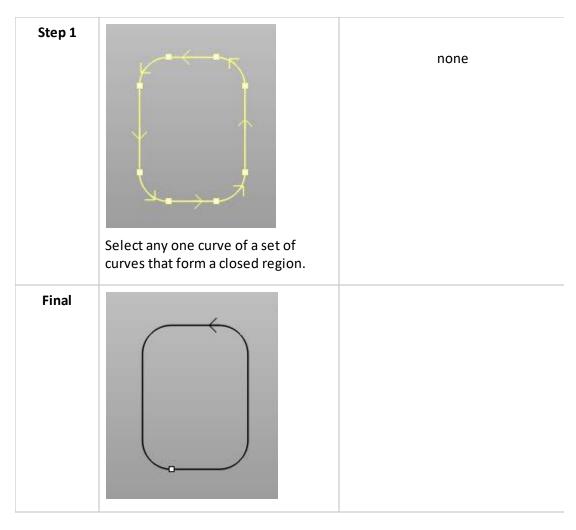

## Notes

 To show curve direction arrow and start point: Home > Options > <u>Display</u> > Curve Display Style. Check the box Display Curve / Region Direction Arrow and Display Curve / Region Start Point.

# Related Topics

Edit Curves Pane, Curve Modeling Ribbon Bar Chain Select

#### 5.4.2.18 Split

Split an existing curve into two segments at the pick point.

**Command Prompts** 

Split: Pick curve to split

# Basic Procedure

	Screen Pick	Command Input
Step 1		none
Step 2	Move the cursor to determine the split position. Left click causes split.	
Final		

# Notes Notes

- 1. If the curve is pre-selected, the function will begin at Step 2 above.
- 2. If the curve is not pre-selected, then the pick point becomes the split point.
- 3. If the curve is picked very near a sharp corner, the split will be at the corner.



To create breaks in curves at multiple corners that have a given angle size, see the <u>Break</u> command.

# Related Topics

Edit Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.2.19 Break



Break a curve into segments at its sharp corners, where the corners are equal or less than a user-entered angle value.

# Command Prompts

Prompt: Break:: Pick curve(s) to break and hit Right Mouse Button/Enter when done

Prompt: Break:: Enter limiting angle for breaking curves::[90.000000]

#### Basic Procedure

	Screen Pick	Command Input
Step 1		
Step 2		Enter the angle where breaks should occur.
Final		

## Notes

- 1. Curves may be pre-selected.
- 2. **Tip**: If you wish to break a curve at selected corners and are not concerned about the corner angle, then use the <u>Curve Modeling</u> > <u>Edit Curves</u> > <u>Split</u> command to directly select a corner of the curve where you want the curve break to occur.

# Related Topics

Edit Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.2.20 Explode



Convert one curve into multiple curve segments.

Command Prompts

Explode:: Pick curves to explode. Hit Right Mouse Button/Enter when done.

## Basic Procedure

	Screen Pick	Command Input
Step 1		none
Final	Gaps are magnified to show separation into independent curves.	

# Related Topics

Edit Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.2.21 Reduce




Modify a curve by reducing the number of underlying segments which make up the curve.

# Command Prompts

Reduce:: Pick curve(s) to reduce and hit Right Mouse Button/Enter when done

Reduce:: Enter curve reduction tolerance::[0.020000]

#### **Basic Procedure**

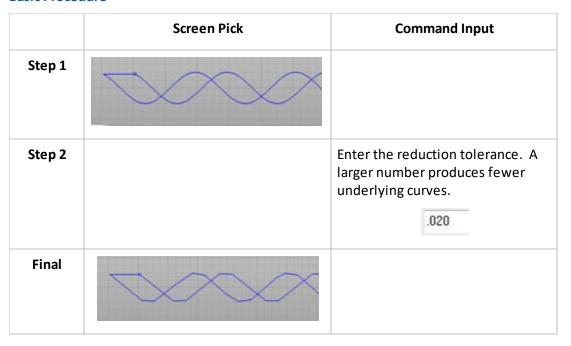

#### Notes

- 1. Curves may be pre-selected.
- 2. This function will improve the speed of computation for curves that have had their underlying segments reduced.
- 3. Reducing the number of underlying segments of a curve will result in less accurate calculations with that curve.

# Related Topics


Edit Curves Pane, Curve Modeling Ribbon Bar

#### 5.4.2.22 Wrap



Wrap curves onto a construction cylinder whose center-line is aligned with one of the principle axes of the CPlane.

Dialog Box: Wrap Curve on a Cylinder

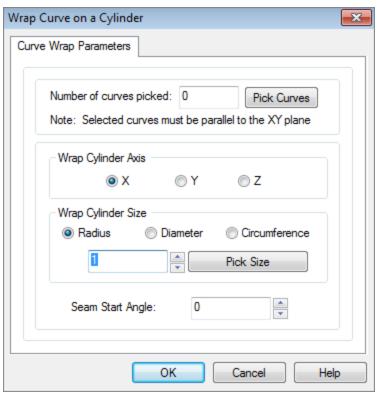

Dialog Box: Wrap Curve on a Cylinder

#### Number of curves picked

The number of curves selected is displayed. Select the Pick Curves button to add more curves to the selection.


- Wrap Cylinder Axis
   Select X, Y or Z to determine the cylinder axis.
- Wrap Cylinder Size

Select Radius, Diameter or Circumference to determine the size of the cylinder to wrap the selected curves on. Then enter the appropriate value or select the Pick Size button to select two points to set the size value.

• Seam Start Angle

Specify the start angle for the seam of the cylinder according to the right-hand rule (counter-clockwise).



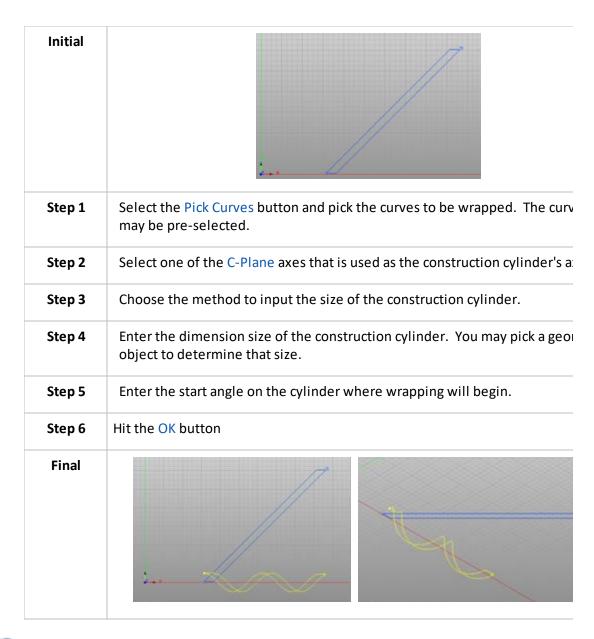

#### Notes

- 1. The curves to be wrapped must be co-planar and parallel to the CPlane.
- 2. The curves will be wrapped in a positive direction around the construction cylinder according to the right-hand rule (counter-clockwise).

# Related Topics

Edit Curves Pane, Curve Modeling Ribbon Bar

## 5.5 Surface Modeling

The Surface Modeling Ribbon Bar contains Surfaces and Edit Surfaces panes and associated functions.

The Surface Modeling Ribbon Bar



Surface Modeling Ribbon Bar

# Related Topics

Surfaces Pane, Surface Modeling Ribbon Bar

Edit Surfaces Pane, Surface Modeling Ribbon Bar

The Ribbon Bar


Customize Quick Access Toolbar

**Customize Dialog** 

**VisualCAD Options** 

#### 5.5.1 Surfaces

The Surface Modeling Ribbon Bar contains the following Surfaces pane with associated functions.

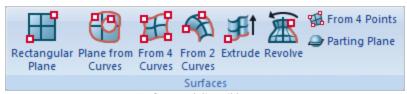

Surface Modeling Ribbon Bar Surfaces Pane

# Related Topics

Create a Rectangular Plane

Create a Plane from Curves

Create a Surface from 4 Curves

Create a Surface from 2 Planar Curves

**Create an Extruded Surface** 

**Create a Revolved Surface** 

Create a Surface from 4 Points
Create a Parting Line Surface
Surface Modeling Ribbon Bar

#### 5.5.1.1 Rectangular Plane



Create a rectangular plane parallel to the Construction Plane.

## **Command Prompts**

Rectangular Plane:: Pick first corner point or enter coordinates xy and z

Rectangular Plane:: Pick second corner point or enter coordinates xy and z

	Screen Pick	Command Input
Step 1	First	(Optional) Enter X, Y, [Z] coordinates for the first point.  0.0.0  Note: This point will determine a level (parallel to the Construction Plane), on which the final rectangular plane will be created.
Step 2	Last	(Optional) Enter X, Y, [Z] coordinates for the second point.  1.1.0  Note: This point will be projected onto the parallel <u>level</u> of the first point.
Final		

#### Notes

1. The created plane will be parallel to the Construction Plane and through the first point.

Coordinate entry can be in absolute coordinates or in relative coordinates. An example of absolute coordinate is shown above.

Example of coordinate entry Input for relative coordinates.

- a) Pick first point or enter coordinates x,y and Z: 2,0
- b) Pick second point or enter coordinates x,y and Z: R6,4
- 2. For the second point, the coordinate input can also be entered as @6,4 This creates a rectangular plane that is 6 units in length and 4 units in width from 2,0 to 8,4 in X Y coordinates.

# Related Topics

Surfaces Pane, Surface Modeling Ribbon Bar

#### 5.5.1.2 Plane from Curves




Create a plane from curves (or surface edges) that define a closed region. Internal closed regions may also be selected to create voids or holes in the plane.

# Command Prompts

Plane from Curves:: Pick planar curve(s) and hit Right Mouse Button/Enter when done

	Screen Pick	Command Input
Step 1		none

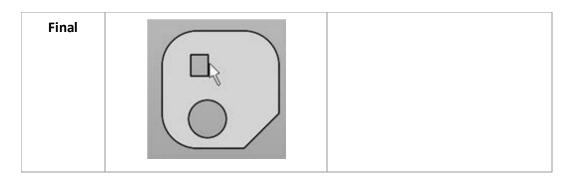

#### Notes

1. If the curves (or surface edges) are pre-selected, the plane will automatically be created from those curves.

# Related Topics

Surfaces Pane, Surface Modeling Ribbon Bar


#### 5.5.1.3 Surface by 4




Create a surface from four chain curves (or surface edges) that form a closed region.

# **Command Prompts**

Surface by 4:: Pick four (chain) curves

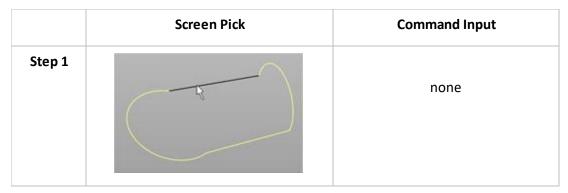

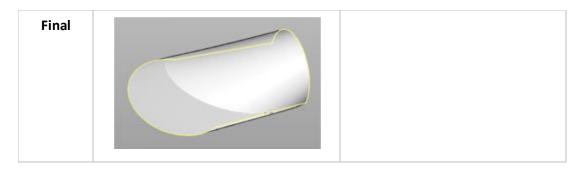

#### Notes N

- 1. The curves (or surface edges) may be pre-selected.
- 2. The curves (or surface edges) do not need to be co-planar.
- The endpoints of adjacent curves (or surface edges) must be within the hookup tolerance. See Home > Options > Tolerance and Units > Curve Hookup Tolerances.

# Related Topics

Surfaces Pane, Surface Modeling Ribbon Bar


#### 5.5.1.4 Surface by 2




Create a surface between two planar curves (or surface edges).

# **Command Prompts**

Surface by 2:: Pick two planar curve(s) and hit Right Mouse Button/Enter when done

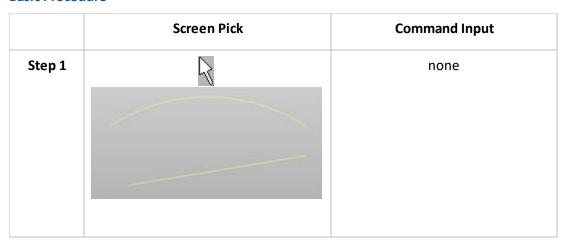

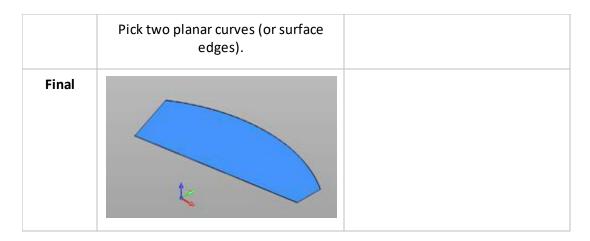

## Related Topics

Surfaces Pane, Surface Modeling Ribbon Bar

#### 5.5.1.5 Surface of Extrusion




Create a surface by extruding a curve (or surface edge). Multiple curves (or surface edges) may be selected, which will create multiple surfaces.

# **Command Prompts**

Surface of Extrusion:: Pick curves to extrude and hit right mouse when done

Surface of Extrusion:: Enter extrusion distance::[L=1.000000]

	Screen Pick	<b>Command Input</b>
Step 1		
	Hit right mouse button when done.	

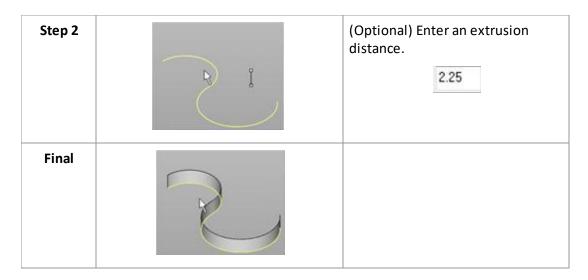



1. The curves (or surface edges) may be pre-selected.

## Related Topics

Surfaces Pane, Surface Modeling Ribbon Bar


#### 5.5.1.6 Surface of Revolution



Create a surface by revolving a curve (or surface edge) around an axis. Start and end angles may be entered according to the right-hand rule of positive rotation, as determined by the direction that the axis line is defined.

# Command Prompts Surface of Revolution:: Pick curve to revolve Surface of Revolution:: Pick start point of axis of revolution or enter coordinates xy and z Surface of Revolution:: Enter start angle of revolution::[sA=0.000000] Surface of Revolution:: Enter end angle of revolution::[eA=360.000000]

Screen Pick	Command Input

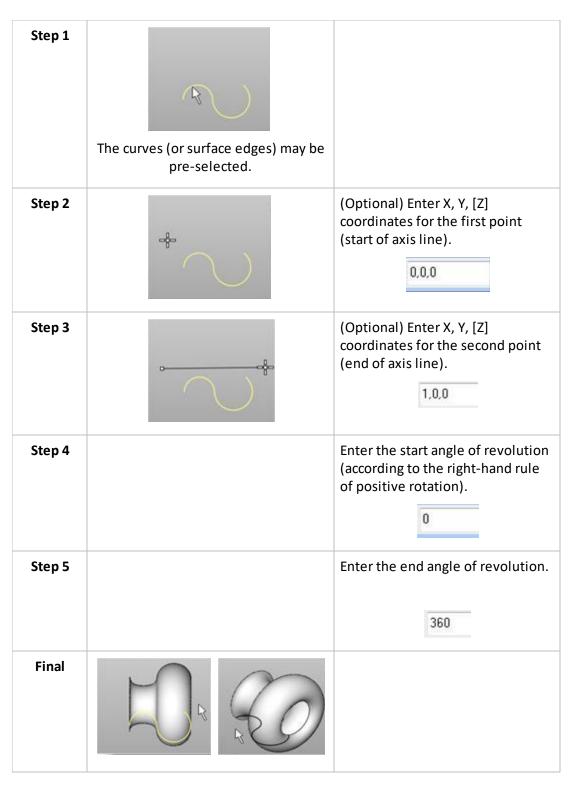


# Notes

1. The direction of definition of the axis line is important because it determines the right-hand rule of positive rotation for the start and end angles of the revolved

surface.

2. The curve's (or surfaces edge's) existing position defines the zero degree position for angles.

Here is an example doing a partial rotation from 20 to 100 degrees.

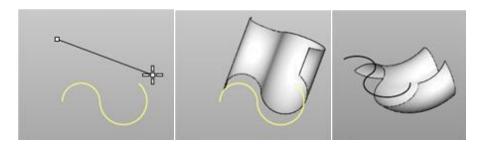

## Related Topics

Surfaces Pane, Surface Modeling Ribbon Bar

#### 5.5.1.7 Bi-linear Surface from 4 Points

From 4 Points Create a surface by specifying four corner points.

# Command Prompts


Bilinear Surface from 4 Points:: Pick first corner point or enter coordinates xy and z

Bilinear Surface from 4 Points:: Pick second corner point or enter coordinates xy and z

Bilinear Surface from 4 Points:: Pick third corner point or enter coordinates xy and z

Bilinear Surface from 4 Points:: Pick fourth corner point or enter coordinates xy and z

	Screen Pick	Command Input
Steps 1-4		(Optional) Enter X, Y, [Z] coordinates for any of the points 1-4.

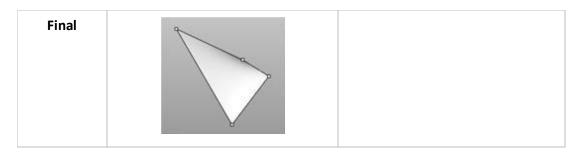

#### Notes Notes

1. Pre-selected points are not allowed.

# Related Topics

Surfaces Pane, Surface Modeling Ribbon Bar

#### 5.5.1.8 Parting Plane

Create a parting plane positioned relative to a volumetric box around selected surfaces or meshes. VisualCAD creates a volumetric box around the surfaces and/or meshes. The box is oriented to either the Construction Plane of the World Coordinate System (your choice). The parting plane will then be created at the top, middle, or bottom of that volumetric box (your choice).

# **Command Prompts**


Parting Plane:: Pick Objects for command. Hit Right Mouse Button/Enter when done.

Parting Plane:: Enter Orientation [CPlane=C,World=W]

Parting Plane:: Enter offsets in X & Y Direction [X=0.000000,Y=0.000000]

Parting Plane:: Enter Location [Bottom=B,Mid=M,Top=T]

Step 1		
Step 2		Enter 'C' or 'W'.  'C' orients the parting plane parallel to the Construction Plane.  'W' orients the parting plane parallel to the World Coordinate System.
Step 3		Enter X and Y offsets into the Command Input Bar. These are incremental offsets that will enlarge the parting plane in the X and Y directions respectively. Negative values are not allowed.
Step 4	T M	Enter 'T', 'M', or 'B'.  'T' creates the parting plane at the top of the volumetric box.  'M' creates the parting plane at the middle of the volumetric box.  'B' creates the parting plane at the bottom of the volumetric box.  :B

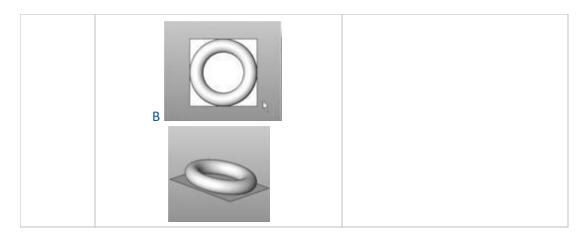


Related Topics

Surfaces Pane, Surface Modeling Ribbon Bar

#### 5.5.2 Edit Surfaces

The Surface Modeling Ribbon Bar contains the following Edit Surfaces pane with associated functions.

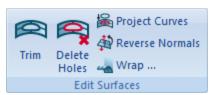

Surface Modeling Ribbon Bar Edit Surfaces Pane

# Related Topics

**Trim Surfaces with Curves** 

**Delete Holes from Surfaces** 

**Project Curves onto a Surface** 

**Reverse Surface Normals** 

Wrap a Surface

#### 5.5.2.1 Trim




Trim away sections of surfaces by selecting closed curves that bound those sections.

**Command Prompts** 

Trim:: Select cutting objects. Hit Right Mouse Button/Enter when done.

Trim:: Pick an object to be trimmed.

### **Basic Procedure**

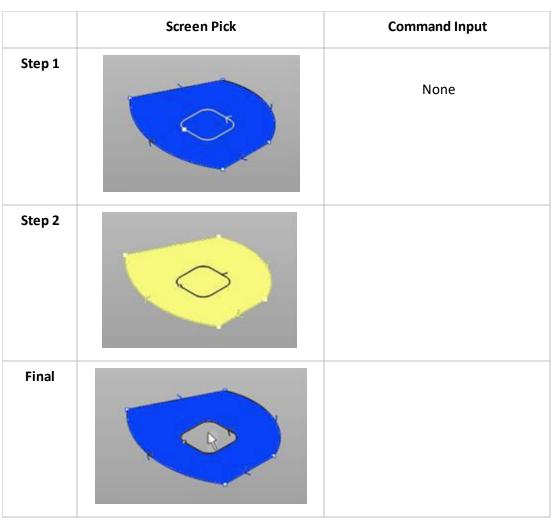

#### **Notes**

1. When you pick the surface to be trimmed, select the piece of the surface that you want trimmed away. The pick point determines which surface region is trimmed away.

# Related Topics

Edit Surfaces Pane, Surface Modeling Ribbon Bar

#### 5.5.2.2 Delete Holes



This function will remove holes from a surface.

Command Prompts

Delete Holes:: Pick hole edges to delete. Hit Right Mouse Button/Enter when done.

### Basic Procedure

	Screen Pick	Command Input
Step 1	Select the edges of the holes that you want removed.	None
Step 2	When the selection is complete, hit the Right-Mouse Button or Enter to remove the holes.	

## Notes

1. This function will not remove holes in mesh surfaces.

## Related Topics

Edit Surfaces Pane, Surface Modeling Ribbon Bar

#### 5.5.2.3 Project Curves

Rroject Curves

Project curves along the surface normals onto a surface.

## Command Prompts

Project Curves:: Pick curves to be projected. Hit Right Mouse Button/Enter when done.

Project Curves:: Pick surface for projection.

#### Basic Procedure

	Screen Pick	Command Input
Step 1		none
Step 2		
Final		

Notes Notes

1. Meshes are not allowed as the projection surface.

## **Related Topics**

Edit Surfaces Pane, Surface Modeling Ribbon Bar

#### 5.5.2.4 Reverse Normals


Reverse Normals

This function will reverse the normal vectors for each surface selected.

### **Command Prompts**

Reverse Normals:: Pick surfaces to reverse and hit Right Mouse Button/Enter when done

	Screen Pick	Command Input	
Initial		None	
Step 1			

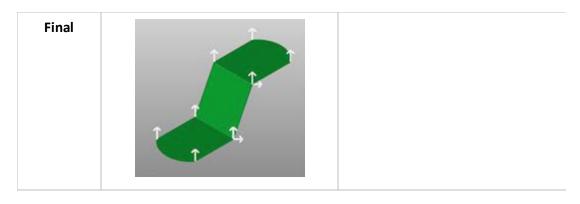


Edit Surfaces Pane, Surface Modeling Ribbon Bar

#### 5.5.2.5 Wrap



Wraps a surface onto a construction cylinder whose center line is aligned with one of the principle axes of the CPlane.

Dialog Box: Edit Surface Wrap

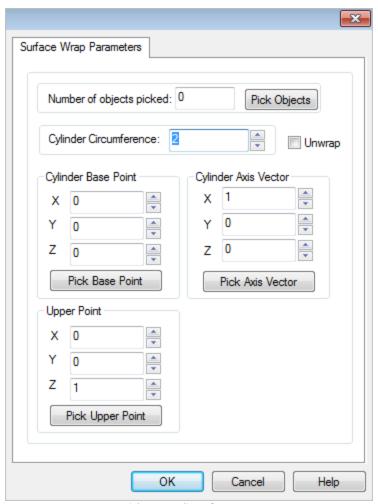

Dialog Box: Edit Surface Wrap

#### • Number of objects picked

The number of curves selected is displayed. Select the Pick Curves button to add more curves to the selection.

## Cylinder Circumference

Enter a circumference for the wrapped cylinder.

#### Uliwiap

Check this box to unwrap the selected surface.

#### • Cylinder Base Point

Enter the Cylinder Base Point XYZ coordinates or select the Pick Base Point button and then select a point to locate the base of the cylinder.

#### Cylinder Axis Vector

Enter the Cylinder Axis Vector XYZ coordinates or select the Pick Axis Vector button and then select a start point and end point to define the axis.

Upper point
 Enter the Cylinder Upper Point XYZ coordinates or select the Pick Upper Point button and then select a point to locate the upper point of the cylinder.

### Basic Procedure

	Dialog Interaction	
Step 1	Select the Pick Objects button and pick the surface to be wrapped. The su may be pre-selected.	
Step 2	Specify the cylinder circumference.	
Step 3	Select one of the C-Plane axes that is used as the construction cylinder's a	
Step 4	Set the cylinder base point	
Step 5	Set the cylinder upper point	
Step 6	Hit the OK button	

## Notes Notes

- 1. The surface to be wrapped must be co-planar and parallel to the C-Plane.
- 2. The surface will be wrapped in a positive direction around the construction cylinder according to the right-hand rule (counter-clockwise).

## Related Topics

Edit Surfaces Pane, Surface Modeling Ribbon Bar

## 5.6 Solid Modeling

The Solid Modeling Ribbon Bar contains Solid Modeling and Edit Solids panes and associated functions.

## The Solid Modeling Ribbon Bar



Solid Modeling Pane, Solid Modeling Ribbon Bar

Edit Solids Pane, Solid Modeling Ribbon Bar

The Ribbon Bar

Customize Quick Access Toolbar

**Customize Dialog** 

**VisualCAD Options** 

#### 5.6.1 Solid Modeling

The Solid Modeling Ribbon Bar contains the following Solid Modeling pane with associated functions. See What is a Solid? for information about Meshes and Solids in VisualCAD.



Surface Modeling Ribbon Bar Solid Modeling Pane

## Related Topics

What is a Solid?

Create a Solid Box

Create a Solid Sphere

Create a Solid Cylinder

Create a Solid Cone

**Create a Solid Torus** 

Create an Extruded Solid

Create a Revolved Solid

Create a Solid Rectangular Tube

Create a Solid Circular Tube

Create a Solid Bounding Box

Solid Modeling Ribbon Bar

#### 5.6.1.1 Solid Box




Create a Mesh Solid in the shape of a rectangular box. See What is a Solid? for information about Meshes and Solids in VisualCAD.


## Command Prompts

Box:: Pick first corner point or enter coordinates x,y and z::[0.000,0.000,0.000]

Box: Pick second corner point or enter coordinates xy and z

Box:: Enter extrusion distance::[L=1.000000]

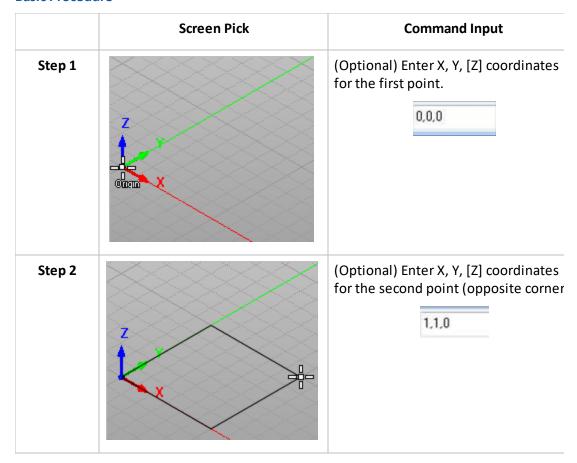

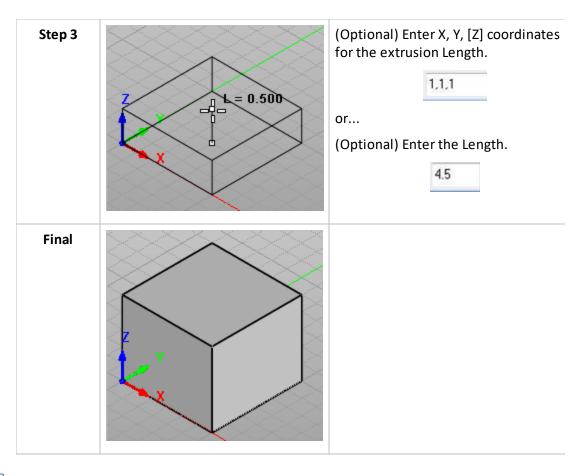

#### Notes Notes

- 1. The bottom of the box will lie in a base plane (parallel to the Construction Plane of the active view) with its corner at the first point defined.
- 2. If the second point does not lie on the base plane, it will be projected onto that base plane.

## Related Topics

Solid Modeling Pane, Solid Modeling Ribbon Bar

#### 5.6.1.2 Solid Sphere




Create a solid in the shape of a sphere. See What is a Solid? for information about Meshes and Solids in VisualCAD.

## **Command Prompts**

Sphere:: Pick center point or enter coordinates x,y and z::[0.000,0.000,0.000]

Sphere:: Enter radius or pick radius point::[R=1.000000]

#### Basic Procedure

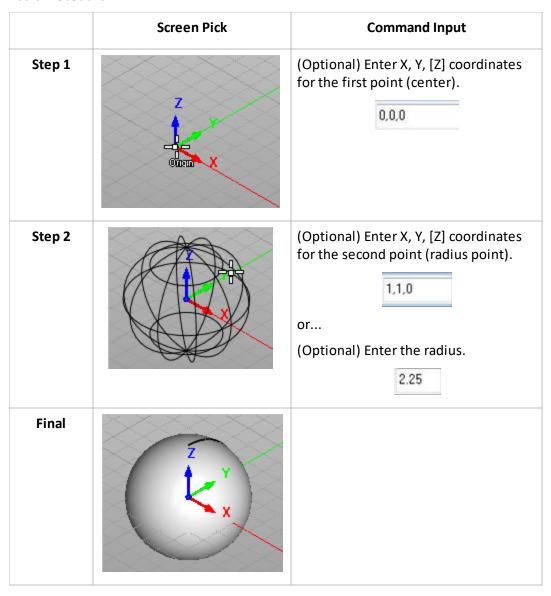

### Notes Notes

1. In Step 2, if a single number is entered, it will be interpreted as the radius. If 2 or 3 numbers are entered, they will be interpreted as the coordinates of the radius point.

## Related Topics

#### Solid Modeling Pane, Solid Modeling Ribbon Bar

#### 5.6.1.3 Solid Cylinder



Create a solid in the shape of a cylinder. See What is a Solid? for information about Meshes and Solids in VisualCAD.


### **Command Prompts**

Cylinder:: Pick center point or enter coordinates x,y and z::[0.000,0.000,0.000]

Cylinder:: Enter radius or pick radius point::[R=1.000000]

Cylinder:: Enter extrusion distance::[L=1.000000]

	Screen Pick	Command Input
Step 1	Z	(Optional) Enter X, Y, [Z] coordinates for the first point (center).  0,0,0
Step 2	Z +11-	(Optional) Enter X, Y, [Z] coordinates for the second point (radius point).  1,1,0  or  (Optional) Enter the radius.  2.25

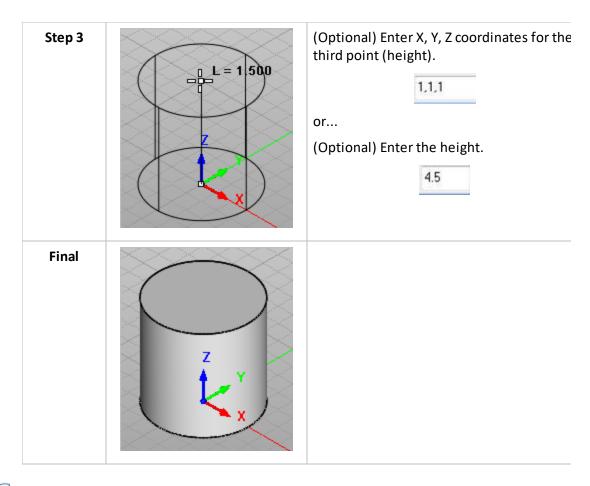

#### **Notes**

1. The axis of the cylinder will be normal (perpendicular) to the Construction Plane.

## Related Topics

Solid Modeling Pane, Solid Modeling Ribbon Bar

#### 5.6.1.4 Solid Cone



Create a mesh that is the shape of a cone. See What is a Solid? for information about Meshes and Solids in VisualCAD.


## Command Prompts

Cone:: Pick center point or enter coordinates x.y and z::[0.000,0.000,0.000]

Cone:: Enter radius or pick radius point::[R=1.000000]

Cone:: Enter extrusion distance::[L=1.000000]

	Screen Pick	Command Input
Step 1	Z Current	(Optional) Enter X, Y, [Z] coordinates for the first point (center).
Step 2	Z 1	(Optional) Enter X, Y, [Z] coordinates for the second point (radius point).  1,1,0  or (Optional) Enter the radius.  2.25
Step 3	L = 1.500	(Optional) Enter X, Y, Z coordinates for the third point (height).  1.1.1  or (Optional) Enter the height.

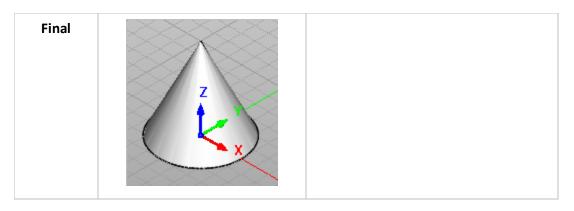

#### Notes

- 1. The base plane for the cone will be parallel to the Construction Plane of the active view when the second point (radius point) is defined.
- 2. The axis of the cone will be normal (perpendicular) to the base plane.
- 3. The height of the cone is measured from the base along the axis of the cone.

## Related Topics

Solid Modeling Pane, Solid Modeling Ribbon Bar

#### 5.6.1.5 Solid Torus



Create a mesh that is the shape of a ring torus. See What is a Solid? for information about Meshes and Solids in VisualCAD.


## **Command Prompts**

Torus:: Pick center point or enter coordinates x,y and z::[0.000,0.000,0.000]

Torus:: Enter radius or pick radius point::[R=1.000000]

Torus:: Enter extrusion distance::[L=1.000000]

Screen Pick	Command Input
Screen Pick	Command Input

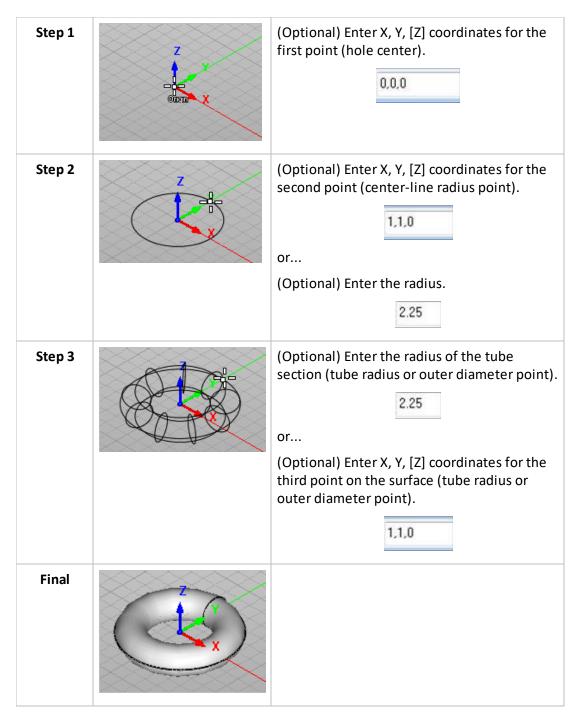

### Notes Notes

1. The plane of the circular center line of the torus will be parallel to the Construction Plane of the active view when the second point (center line radius point) is defined.

## Related Topics

#### Solid Modeling Pane, Solid Modeling Ribbon Bar

#### 5.6.1.6 Solid Extrusion




Create a solid by extruding a closed curve (or surface edge) set. See What is a Solid? for information about Meshes and Solids in VisualCAD.

## Command Prompts

Extrude:: Pick curves to extrude and hit right mouse when done

Extrude:: Enter extrusion distance::[L=1.000000]

	Screen Pick	Command Input
Step 1	Z X X	none
Step 2	L = 1.500	(Optional) Enter the extrusion distance.  2.25  or  (Optional) Enter X, Y, Z coordinates for the extrusion distance point.

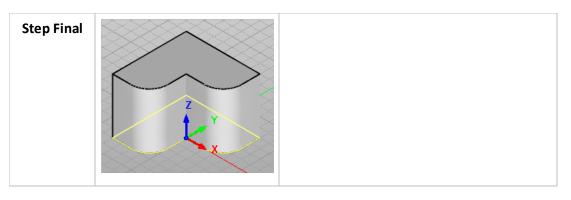

#### Notes

- 1. The curve (or surface edge) set may be pre-selected.
- 2. If the curve (or surface edge) set is not coplanar, each curve (or surface edge) is projected onto the Construction Plane.
- 3. The extrusion is performed normal to the Construction Plane.

### Related Topics

Solid Modeling Pane, Solid Modeling Ribbon Bar

#### 5.6.1.7 Solid Revolve



Create a solid by revolving a closed curve (or surface edge) around an axis. See What is a Solid? for information about Meshes and Solids in VisualCAD.


## **Command Prompts**

Revolve:: Pick curve to revolve

Revolve:: Pick start point of axis of revolution or enter coordinates xy and z


Revolve:: Pick end point of axis of revolution or enter coordinates xy and z

Screen Pick	Command Input
-------------	---------------

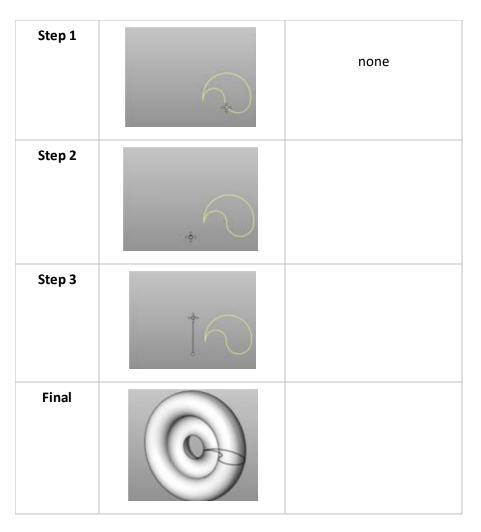

Solid Modeling Pane, Solid Modeling Ribbon Bar

#### 5.6.1.8 Solid Rectangular Tube

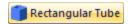

Create a solid that is the shape of a rectangular tube with constant wall thickness. See What is a Solid? for information about Meshes and Solids in

VisualCAD.

## Command Prompts

Rectangular Tube:: Pick first comer point or enter coordinates x.y and z::[0.000,0.000,0.000]

Rectangular Tube:: Pick second corner point or enter coordinates xy and z

Rectangular Tube:: Enter offset distance::[O=0.000000]

Rectangular Tube:: Enter extrusion distance::[L=1.000000]

	Screen Pick	Command Input
Step 1	-de-	(Optional) Enter X, Y, [Z] coordinates for the first point.
Step 2	*	(Optional) Enter X, Y, [Z] coordinates for the second point (opposite corner).
Step 3		(Optional) Enter X, Y, Z coordinates for the third point (wall thickness).  .25,.25,0  or (Optional) Enter the wall thickness.
Step 4		(Optional) Enter X, Y, Z coordinates for the fourth point (height).  1.1.1  or (Optional) Enter the extrusion distance.  4.5



Solid Modeling Pane, Solid Modeling Ribbon Bar

#### 5.6.1.9 Solid Circular Tube



Create a solid that is the shape of a circular tube (pipe). See What is a Solid? for information about Meshes and Solids in VisualCAD.

### Command Prompts


Circular Tube:: Pick center point or enter coordinates x,y and z::[0.000,0.000,0.000]

Circular Tube:: Enter radius or pick radius point::[R=1.000000]

Circular Tube:: Enter radius or pick radius point::[R=1.250000]

Circular Tube:: Enter extrusion distance::[L=1.000000]

	Screen Pick	Command Input
Step 1		(Optional) Enter X, Y, [Z] coordinates for the first point (hole center).
	< ĝa	0,0,0
Step 2		(Optional) Enter the first radius of the tube.
		2.25
		or
		(Optional) Enter X, Y, [Z] coordinates for the second point (first radius point).

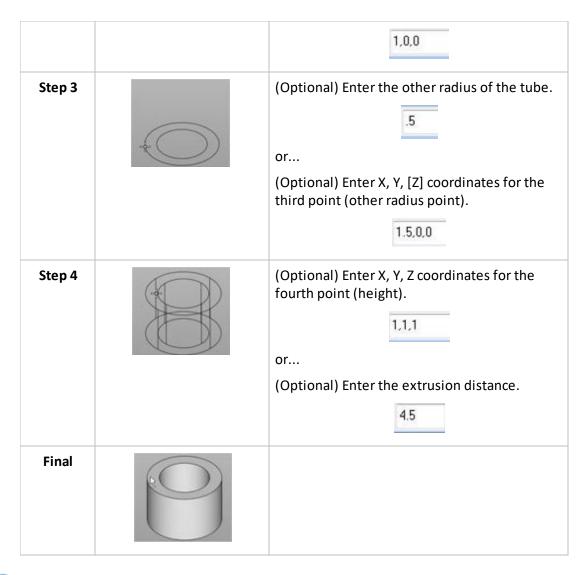

## Notes Notes

- 1. The base plane for the circular tube will be parallel to the Construction Plane of the active view when the second point (radius point) is defined.
- 2. The axis of the circular tube will be normal (perpendicular) to the base plane.

## Related Topics

Solid Modeling Pane, Solid Modeling Ribbon Bar

#### 5.6.1.10 Solid Bounding Box



Create a rectangular box solid that encompasses selected geometry objects. See What is a Solid? for information about Meshes and Solids in VisualCAD.

## **Command Prompts**

Bounding Box: Pick Objects for command. Hit Right Mouse Button/Enter when done.

Bounding Box:: Enter Orientation [CPlane=C,World=W]

Bounding Box: Enter offsets in X & Y Direction [X=0.000000,Y=0.000000,Z=0.000000]

	Screen Pick	Command Input
Step 1	Select all objects to be included in the volumetric box. Hit Right Mouse Button or ENTER to end the selection.	
Step 2		Enter 'C' or 'W'.  'C' orients the volumetric box to the Construction Plane.  'W' orients the volumetric box to the World Coordinate System.
Step 3		Enter X, Y and Z offsets. These are incremental offsets that will enlarge the volumetric box in the X, Y and Z directions respectively. Negative values are not allowed.
Final		

Notes

1. All geometry types are permitted.

Related Topics

Solid Modeling Pane, Solid Modeling Ribbon Bar

#### 5.6.2 Edit Solids

The Solid Modeling Ribbon Bar contains the following Edit Solids pane with associated functions. See What is a Solid? for information about Meshes and Solids in VisualCAD.



#### Related Topics

What is a Solid?


**Unify Surface Normals** 

**Explode Surfaces** 

Stitch Surfaces into a Solid

Solid Modeling Ribbon Bar

#### 5.6.2.1 Unify Normals

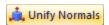


For a set of surfaces that are adjacent and share edges, this function will make all surface normals consistent in direction, relative to the other surfaces.

## Command Prompts

Unity Normals:: Pick surfaces to be oriented uniformly and hit Right Mouse Button/Enter when done

Screen Pick	Command Input

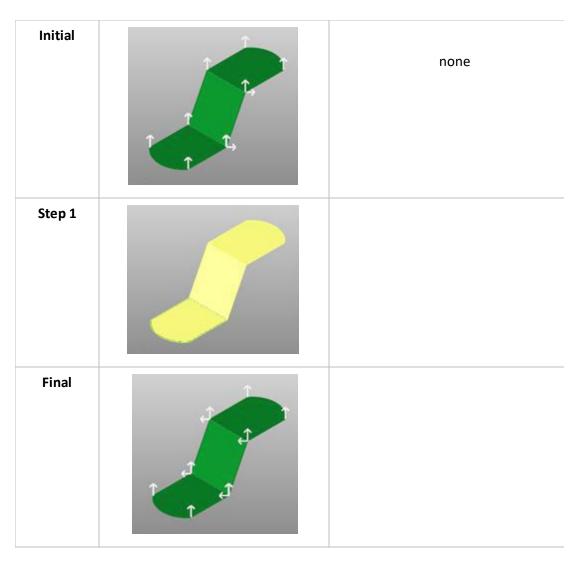

Edit Solids Pane, Solid Modeling Ribbon Bar


#### 5.6.2.2 Explode



This function will separate all the surfaces of a shell or poly-surface into independent surfaces with no topological relationships to each other.

## **Command Prompts**

Explode:: Pick surfaces to explode. Hit Right Mouse Button/Enter when done.

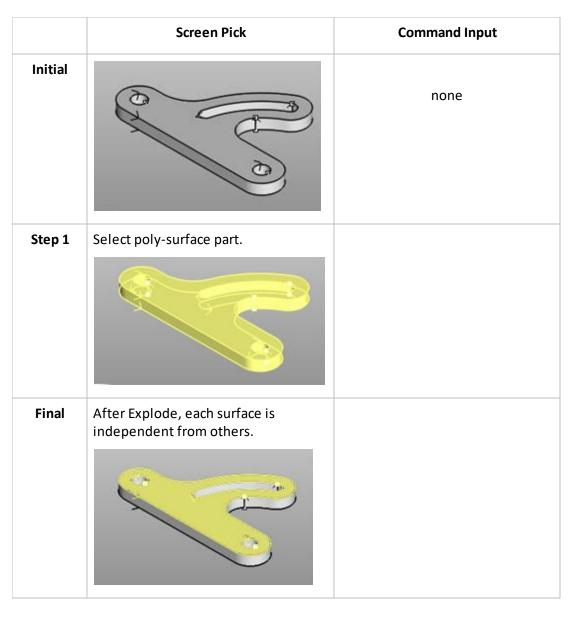

## Notes

1. Meshes are not allowed for the Explode function.

## Related Topics

Edit Solids Pane, Solid Modeling Ribbon Bar

#### 5.6.2.3 Stitch


Stitch

This function will join selected surfaces to form a shell or poly-surface.

**Command Prompts** 

Stitch:: Pick surfaces to Stitch. Hit Right Mouse Button/Enter when done.

	Screen Pick	Command Input
Initial		none
Step 1	Select surface(s) part. You can either use single select and pick individual surfaces or draw a window to select all surfaces.	
	Selected surface(s) are now highlighted.	
Final	After Stitch, selected surfaces are merged to shell or poly-surface.	

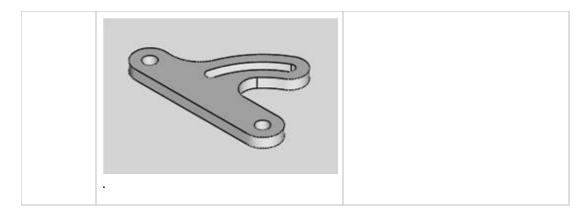

- Notes
  - 1. Meshes are not allowed for the Stitch function.
- Related Topics

Edit Solids Pane, Solid Modeling Ribbon Bar

## 5.7 Mesh Modeling

The Mesh Modeling Ribbon Bar contains Meshes and Edit Meshes panes and associated functions.

The Mesh Modeling Ribbon Bar



Mesh Modeling Ribbon Bar

Related Topics

Meshes Pane, Mesh Modeling Ribbon Bar

Edit Meshes Pane, Mesh Modeling Ribbon Bar

The Ribbon Bar

**Customize Quick Access Toolbar** 

**Customize Dialog** 

**VisualCAD Options** 

#### 5.7.1 Meshes

The Mesh Modeling Ribbon Bar contains the following Meshes pane with associated functions.



Mesh Modeling Ribbon Bar Meshes Pane

## Related Topics

Create a Mesh Box

Create a Mesh Sphere

Create a Mesh Cylinder

Create a Mesh Cone

**Create a Mesh Torus** 

Create a Rectangular Tube Mesh

Create a Mesh Circular Tube

**Create Extruded Mesh** 

Create a Revolved Mesh

Create a Mesh Bounding Box


Mesh Modeling Ribbon Bar

#### 5.7.1.1 Box



Create a mesh that is the shape of a rectangular box. The bottom of the box will lie in a base plane (parallel to the Construction Plane of the selecting view) with its corner at the first point defined. If the second point does not lie on the base plane, it will be projected onto that base plane.

	Screen Pick	Command Input
Step 1	Pick the first corner of the base rectangle.	(Optional) Enter X, Y, Z coordinates for the first point.
		Example: 0,0,0

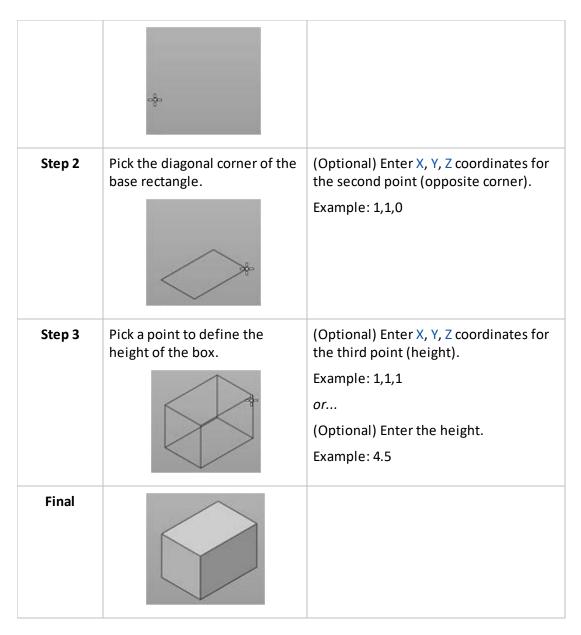

Meshes Pane, Mesh Modeling Ribbon Bar

#### 5.7.1.2 Sphere



Create a mesh that is the shape of a sphere. In Step 2 (see below), if a single number is entered, it will be interpreted as the radius. If 2 or 3 numbers are entered, they will be interpreted as the coordinates of the radius point.

	Screen Pick	Command Input
Step 1	Pick the center point for the sphere.	(Optional) Enter X, Y, Z coordinates for the first point (center).  Example: 0,0,0
Step 2	Pick the radius point for the sphere.	(Optional) Enter X, Y, Z coordinates for the second point (radius point).  Example: 1,1,0  or  (Optional) Enter the radius.  Example: 2.25
Final	T <sub>R</sub>	


Meshes Pane, Mesh Modeling Ribbon Bar

### 5.7.1.3 Cylinder



Create a mesh that is the shape of a cylinder. The axis of the cylinder will be normal (perpendicular) to the Construction Plane.

	Screen Pick	Command Input
Step 1	Pick the center point of the base circle.	(Optional) Enter X, Y, [Z] coordinates for the first point (center).
		Example: 0,0,0

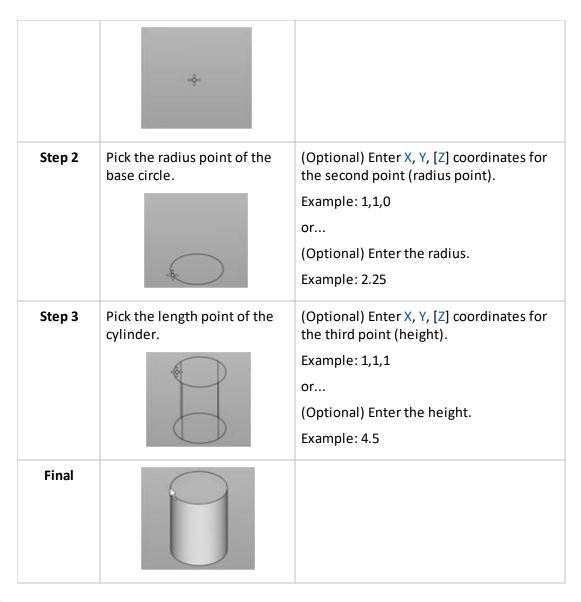

Meshes Pane, Mesh Modeling Ribbon Bar

#### 5.7.1.4 Cone



Create a mesh that is the shape of a cone. The base plane for the cone will be parallel to the Construction Plane of the active view when the second point (radius point) is defined. The axis of the cone will be normal (perpendicular) to the base plane. The height of the cone is measured from the base along the axis of the cone.

	Screen Pick	Command Input
Step 1	Pick the center point of the base circle.	(Optional) Enter X, Y, Z coordinates for the first point (center).
	«8»	Example: 0,0,0
Step 2	Pick the radius point of the base circle.	(Optional) Enter X, Y, Z coordinates for the second point (radius point).
		Example: 1,1,0
		or
		(Optional) Enter the radius.
		Example: 2.25
Step 3	Pick the length point of the cone.	(Optional) Enter X, Y, Z coordinates for the third point (height).
	<b>∤</b>	Example: 1,1,1
		or
	4	(Optional) Enter the height.
		Example: 4.5
Final		

Meshes Pane, Mesh Modeling Ribbon Bar

#### 5.7.1.5 Torus



Create a mesh that is the shape of a ring torus. The plane of the circular center line of the torus will be parallel to the Construction Plane of the active view when the second point (center line radius point) is defined.


## **Basic Procedure**

	Screen Pick	Command Input
Step 1	Pick the center point of the torus.	(Optional) Enter X, Y, Z coordinates for the first point (hole center).  Example: 0,0,0
Step 2	Pick the radius point of the torus.	(Optional) Enter X, Y, Z coordinates for the second point (center line radius point).  Example: 1,1,0  or  (Optional) Enter the radius.  Example: 2.25
Step 3	Pick the second radius (i.e., cross-section radius) point of the torus.	(Optional) Enter the radius of the tube section.  Example: 2.25  or  (Optional) Enter X, Y, Z coordinates for the third point on the surface (tube radius point).  Example: 1,1,0
Final		

## Related Topics

Meshes Pane, Mesh Modeling Ribbon Bar

#### 5.7.1.6 Rectangular Tube

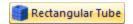

Create a mesh that is the shape of a rectangular tube with constant wall thickness.

	Screen Pick	Command Input
Step 1	-8-	(Optional) Enter X, Y, [Z] coordinates for the first point.
Step 2	*	(Optional) Enter X, Y, [Z] coordinates for the second point (opposite corner).  1.1.0
Step 3		(Optional) Enter X, Y, [Z] coordinates for the third point (wall thickness).  .25,.25,0  or (Optional) Enter the wall thickness.
Step 4		(Optional) Enter X, Y, [Z] coordinates for the fourth point (height).  1.1.1  or  (Optional) Enter the extrusion distance.  4.5
Final		

Rectangular Ture ate a mesh that is the shape of a rectangular tube with constant wall thickness.

	Screen Pick	Command Input
Step 1	-8-	(Optional) Enter X, Y, [Z] coordinates for the first point.
Step 2	*	(Optional) Enter X, Y, [Z] coordinates for the second point (opposite corner).
Step 3		(Optional) Enter X, Y, [Z] coordinates for the third point (wall thickness).  .25,.25,0  or (Optional) Enter the wall thickness.
Step 4		(Optional) Enter X, Y, [Z] coordinates for the fourth point (height).  1.1.1  or (Optional) Enter the extrusion distance.



Meshes Pane, Mesh Modeling Ribbon Bar

#### 5.7.1.7 Circular Tube

Greate a mesh that is the shape of a circular tube (pipe).

	Screen Pick	Command Input
Step 1	eĝ.	(Optional) Enter X, Y, [Z] coordinates for the first point (hole center).
Step 2		(Optional) Enter the first radius of the tube.  2.25  or  (Optional) Enter X, Y, [Z] coordinates for the second point (first radius point).
Step 3		(Optional) Enter the other radius of the tube.  5  or  (Optional) Enter X, Y, [Z] coordinates for the third point (other radius point).

	1.5,0.0
Step 4	(Optional) Enter X, Y, [Z] coordinates for the fourth point (height).  1.1.1  or  (Optional) Enter the extrusion distance.  4.5
Final	

# Notes

- 1. The base plane for the circular tube will be parallel to the Construction Plane of the active view when the second point (radius point) is defined.
- 2. The axis of the circular tube will be normal (perpendicular) to the base plane.

## Related Topics


Meshes Pane, Mesh Modeling Ribbon Bar

#### 5.7.1.8 Extrude



Create a mesh by extruding a closed curve (or surface edge) set.

	Screen Pick	Command Input
Step 1	Pick curves (or surface edges) to extrude and hit right mouse when done	

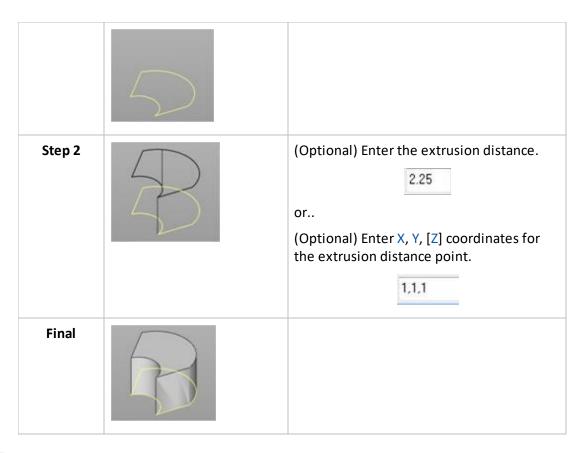

## Notes

- 1. The curves (or surface edges) may be pre-selected.
- 2. If the curves (or surface edges) are not coplanar, they are projected onto the Construction Plane.
- 3. The extrusion is performed normal to the Construction Plane.

# Related Topics


Meshes Pane, Mesh Modeling Ribbon Bar

#### 5.7.1.9 Revolve




Create a mesh by revolving a closed curve (or surface edge) around an axis.

Screen Pick	Command Input
-------------	---------------

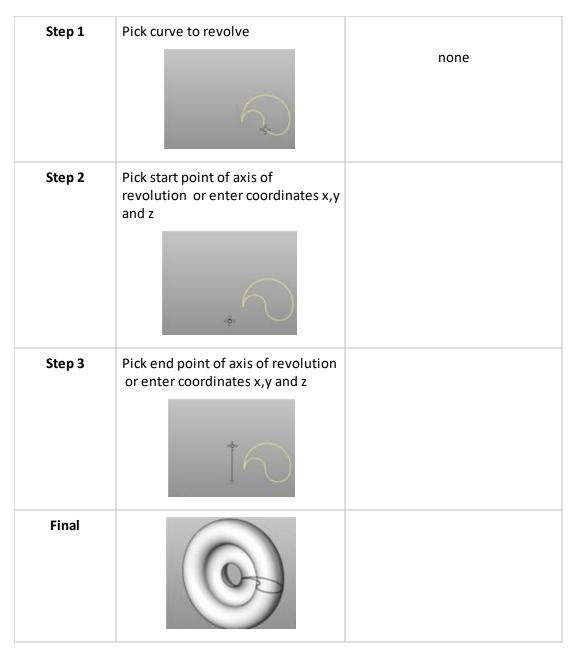

Meshes Pane, Mesh Modeling Ribbon Bar

### 5.7.1.10 Bounding Box

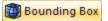

Create a rectangular box mesh that encompasses selected geometry objects.



	Screen Pick	Command Input
Step 1	Select all objects to be included in the volumetric box. Hit Right Mouse Button or ENTER to end the selection.	
Step 2		Enter 'C' or 'W'.  'C' orients the volumetric box to the Construction Plane.  'W' orients the volumetric box to the World Coordinate System.
Step 3		Enter X, Y and Z offsets. These are incremental offsets that will enlarge the volumetric box in the X, Y and Z directions respectively. Negative values are not allowed.
Final		

# Notes

1. All geometry types are permitted.

# Related Topics

Meshes Pane, Mesh Modeling Ribbon Bar

#### 5.7.2 Edit Meshes

The Mesh Modeling Ribbon Bar contains the following Edit Meshes pane with associated functions.



### Related Topics

**Unite Two Mesh Solid Bodies** 

Subtract one Mesh Solid Body from another

**Intersect 2 Mesh Solids** 

Mesh Modeling Ribbon Bar


#### 5.7.2.1 Unite



Unite two mesh objects into one mesh object. The first mesh object may be preselected. Unite two or more mesh objects into one mesh object. The first set of mesh objects may be pre-selected. A Mesh Revolve that is open-ended (not a full 360 degrees) cannot be used in this function.

Meshes Must be Closed: If any selected mesh does not form closed volume (i.e., there are any open edges) the Mesh Boolean operations (i.e., Unite, Subtract or Intersect) will fail. This can sometimes occur with imported data files. If this occurs, use the Auto Fix command on each mesh before using the Unit, Subtract or Intersect Mesh commands. You can also use the Diagnose command to check for mesh errors.

	Screen Pick	Command Input
Step 1	Pick the first mesh to unite.	none

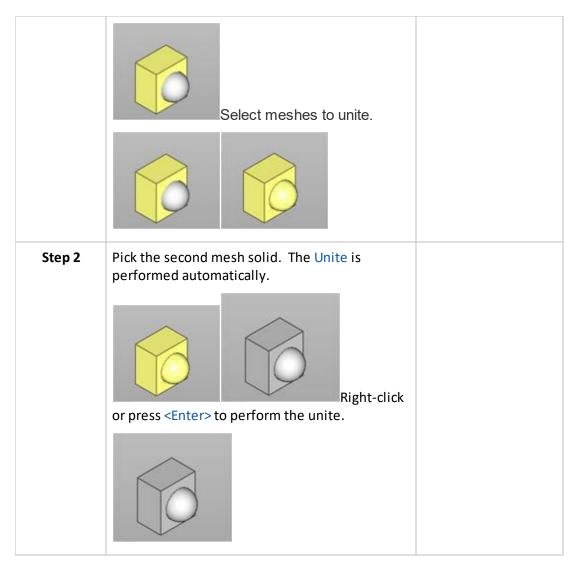

Edit Meshes Pane, Mesh Modeling Ribbon Bar

#### 5.7.2.2 Subtract



Subtract one mesh volume from another. The two mesh objects must intersect. The first mesh may be pre-selected. The second mesh will be deleted after the Subtract subtraction. Subtract one or more mesh volumes from another. At least one mesh in each selection must intersect. The first set of meshes may be pre-selected. The second

set of meshes will be deleted after the subtraction. A Mesh Revolve that is open-ended (not a full 360 degrees) cannot be used in this Subtract function.



Meshes Must be Closed: If any selected mesh does not form closed volume (i.e., there are any open edges) the Mesh

Boolean operations (i.e., Unite, Subtract or Intersect) will fail. This can sometimes occur with imported data files. If this occurs, use the Auto Fix command on each mesh before using the Unit, Subtract or Intersect Mesh commands. You can also use the Diagnose command to check for mesh errors.

	Screen Pick	Command Input
Step 1	Select the mesh object to subtract from. Select one or more mesh objects to subtract from. Right-click or press < Enter> when done.	none
Step 2	Select the mesh object to subtract. Select one or more mesh objects to subtract. Right-click or press <enter> when done.</enter>	
Final	The Subtract is performed automatically.	

Edit Meshes Pane, Mesh Modeling Ribbon Bar

#### 5.7.2.3 Intersect




Create a mesh that represents the volume that is shared between two intersecting meshes. The first mesh may be pre-selected. Both of the original meshes will be deleted after the Intersect function is completed. Only their shared volume will remain. Create a mesh that represents the volume that is shared between two or more

intersecting meshes. The first set of meshes may be pre-selected. Each of the original meshes will be deleted after the Intersect function is completed. Only their one shared volume mesh will remain. A Mesh Revolve that is open-ended (not a full 360 degrees) cannot be used in this Intersect function.

Meshes Must be Closed: If any selected mesh does not form closed volume (i.e., there are any open edges) the Mesh Boolean operations (i.e., Unite, Subtract or Intersect) will fail. This can sometimes occur with imported data files. If this occurs, use the Auto Fix command on each mesh before using the Unit, Subtract or Intersect Mesh commands. You can also use the Diagnose command to check for mesh errors.

	Screen Pick	Command Input
Step 1	Select the first mesh object to intersect.  Select the first set of mesh objects to intersect. Right-click or press <enter> when done.</enter>	none
Step 2	Select the second mesh object.	

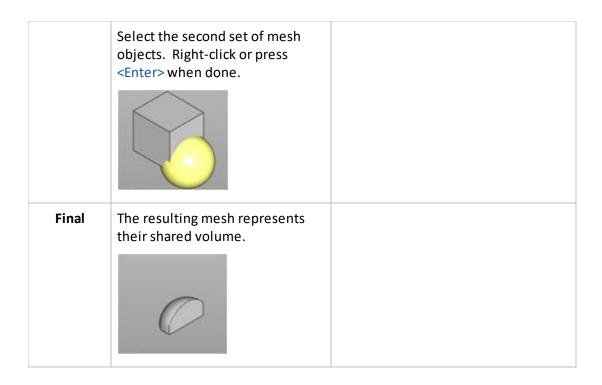


Edit Meshes Pane, Mesh Modeling Ribbon Bar

### 5.8 Dimensions

The Dimensions Ribbon Bar contains Linear Dimensions, Radial Dimensions, Angular Dimensions and Annotations panes and associated functions.

The Dimensions Ribbon Bar

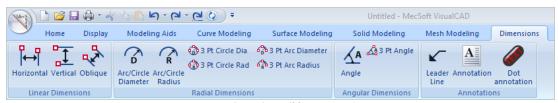

Dimensions Ribbon Bar

# Related Topics

<u>Linear Dimensions Pane, Dimensions Ribbon Bar</u>

<u>Radial Dimensions Pane, Dimensions Ribbon Bar</u>

<u>Angular Dimensions Pane, Dimensions Ribbon Bar</u>

Annotations Pane, Dimensions Ribbon Bar


The Ribbon Bar

**Customize Quick Access Toolbar** 

**Customize Dialog** 

**VisualCAD Options** 

#### 5.8.1 Linear Dimensions

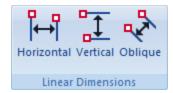

The Dimensions Ribbon Bar contains the following Linear Dimensions pane with associated functions.

Related Topics

**Create a Horizontal Dimension** 

<u>Create a Vertical Dimension</u>

**Create an Oblique Dimension** 

<u>Dimensions Ribbon Bar</u>

#### 5.8.1.1 Horizontal Dimension



Creates a linear dimension label horizontally.

More Information

Depending on the view, the horizontal will be parallel to different principle axes (x, y, or z). The horizontal direction is whichever axis is horizontal when a view is first started. For example, the Iso-view has the z-plane as a construction plane and the horizontal direction is parallel to the x-axis. Meanwhile, the right-view has the x-plane as a construction plane with the horizontal direction parallel to the y-axis. If the view is rotated, the horizontal stays with the construction plane. If the construction plane is modified, then horizontal direction is then modified.

Two points are selected and they are projected onto a horizontal line. The dimension is measured from the separation of these projected points. In other words, only the distance along the horizontal direction is measured.


The label can be slid vertically so that its projection line intersects the mouse. The picked point determines where the label appears. The units are included.

# Command Prompts

Horizontal:: Pick first point or enter coordinates x,y and z


Horizontal:: Pick second point or enter coordinates x,y and z

	Screen Pick	Command Input	
Step 1 Pick the first point or type in t coordinates into the Comman Input Bar.		None	
Step 2	Pick the second point or type in the coordinates.		

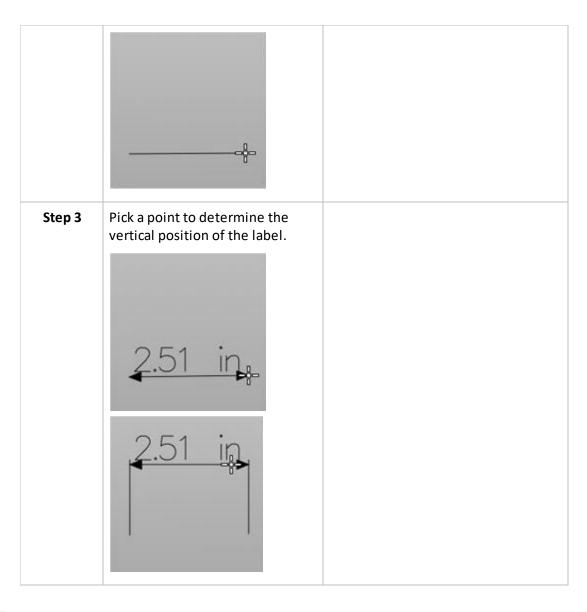


# Notes

1. Even if the picked points are not at the same level, the points will be projected down onto a horizontal line.

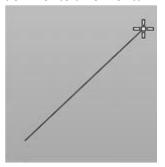

#### 2. Here is the result.

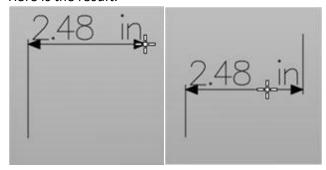

### Related Topics

<u>Linear Dimensions Pane, Dimensions Ribbon Bar</u>

#### 5.8.1.2 Vertical Dimension



Creates a linear dimension label vertically.

### More Information

Depending on the view, the vertical will be parallel to different principle axes (x, y, or z). The vertical direction is whichever axis is vertical when a view is first started. For example, the Iso-view has the z-plane as a construction plane and the vertical direction is parallel to the y-axis. Meanwhile, the right-view has the x-plane as a construction plane with the vertical direction parallel to the z-axis. If the view is rotated, the vertical stays with the construction plane. If the construction plane is modified, then vertical direction is then modified.

Two points are selected and they are projected onto a vertical line. The dimension is measured from the separation of these projected points. In other words, only the distance along the horizontal direction is measured.

The label can be slid horizontally so that its projection line intersects the mouse. The picked point determines where the label appears. The units are included.

## Command Prompts

Vertical:: Pick first point or enter coordinates x,y and z


Vertical:: Pick second point or enter coordinates x, y and z

Screen Pick	Command Input
Screen Pick	Command Input


Step 1 Pick the first point or type in the None coordinates into the Command Input Bar. Step 2 Pick the second point or type in the coordinates. Step 3 Pick a point to determine the vertical position of the label.

# Notes

1. Even if the picked points are not at the same level, the points will be projected down onto a horizontal line.

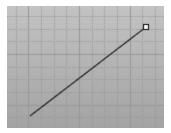

Here is the result.

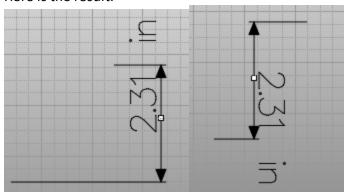

Linear Dimensions Pane, Dimensions Ribbon Bar

### 5.8.1.3 Oblique Dimension




Creates a linear dimension label at an angle. Two points are selected. The three-dimensional distance between them is computed and is the number displayed. The label can be slid normally (perpendicular) to the line connecting the two points. The units are included.

# **Command Prompts**

Oblique:: Pick first point or enter coordinates xy and z

Oblique:: Pick second point or enter coordinates x, y and z

	Screen Pick	Command Input
Step 1	Pick the first point or type in the coordinates into the Command Input Bar.	None

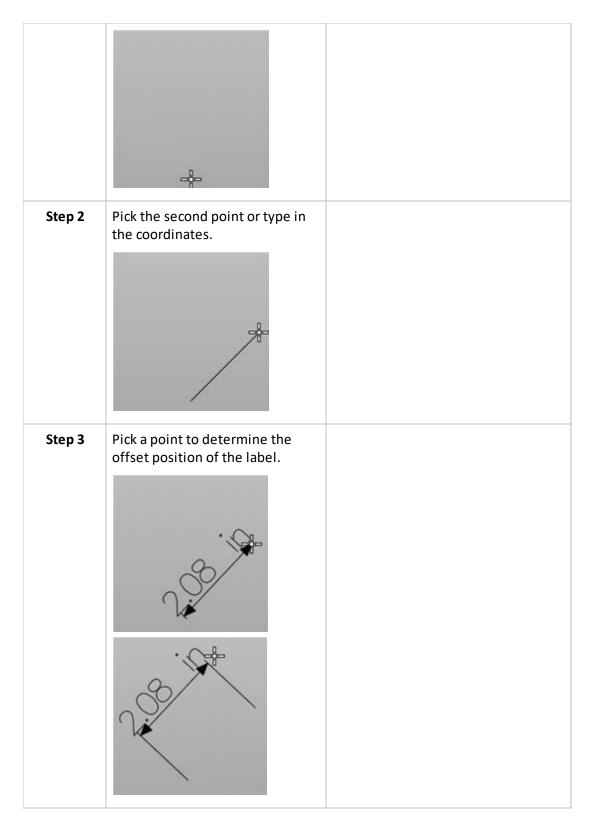

#### <u>Linear Dimensions Pane, Dimensions Ribbon Bar</u>

#### 5.8.2 Radial Dimensions

The Dimensions Ribbon Bar contains the following Radial Dimensions pane with associated functions.



Dimensions Ribbon Bar Radial Dimensions Pane

# Related Topics

Create an Arc Circle/Diameter Dimension

Create an Arc Circle/Radius Dimension

<u>Create a 3-Point Circular Diameter Dimension</u>

Create a 3-Point Circular Radius Dimension

Create a 3-Point Arc Diameter Dimension

Create a 3 Point Arc Radius Dimension

**Dimensions Ribbon Bar** 

#### 5.8.2.1 Arc/Circle Diameter


Arc/Circle

Diameter

Create a dimension label for an arc. It measures the diameter of the circle of which the arc is a part. The letter 'D' appears in the label to show that it is measuring the diameter.

An arrow specifies which arc is labeled. The text is always horizontal. Both are always in the plane of the arc. Both can be slid around the arc. The units are included.

Command Pro	ompts		
Circle:: Pick th	e arc to dimension		
Circle:: Enter o	limension point		
Basic Procedu	re		
		Screen Pick	Command Ir

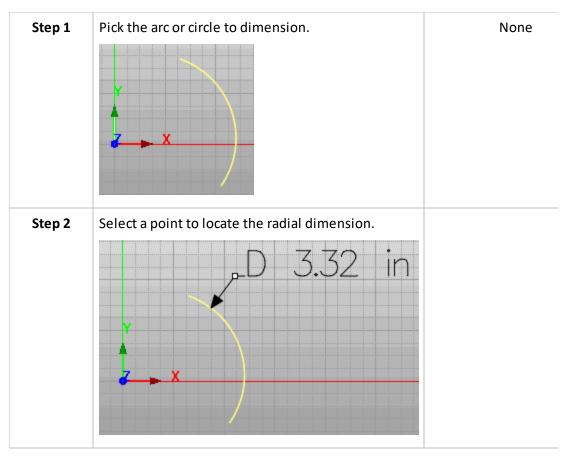

Radial Dimensions Pane, Dimensions Ribbon Bar

#### 5.8.2.2 Arc/Circle Radius




Create a dimension label for an arc. It measures the radius of the circle of which the arc is a part. The letter 'R' appears in the label to show that it is measuring the radius.

An arrow specifies which arc is labeled. The text is always horizontal. Both are always in the plane of the arc. Both can be slid around the arc. The units are included.

# Command Prompts

Arc Diameter:: Pick the arc to dimension

Arc Diameter:: Enter dimension point

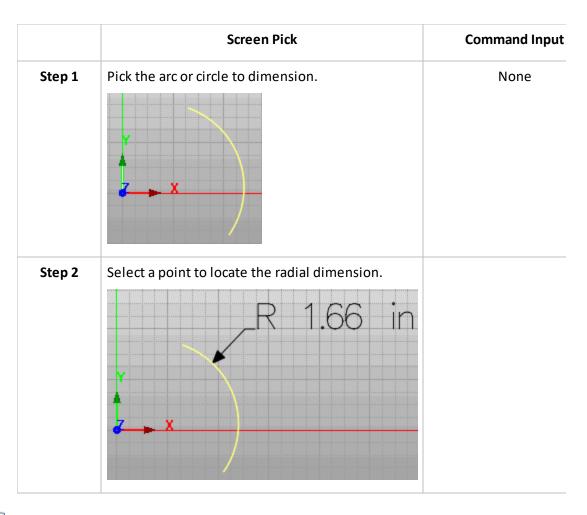

Radial Dimensions Pane, Dimensions Ribbon Bar

#### 5.8.2.3 3 Pt Circle Dia



Create a dimension label for a circle. It measures the diameter of the circle. The letter 'D' appears in the label to show that it is measuring the diameter.

An arrow specifies which circle is labeled and is always radial. The text is always horizontal. Both are always in the plane of the circle. Both can be slid around the circle. The units are included. **Note:** You can use points as input to this command.

# Command Prompts


3 Pt Circle Dia.: Pick first point or enter coordinates x,y,z

3 Pt Circle Dia:: Pick second point or enter coordinates x,y,z

3 Pt Circle Dia:: Pick third point or enter coordinates x,y,z

3 Pt Circle Dia:: Pick third point or enter the dimension point

	Screen Pick	Command Inp
Step 1	Pick the first point on the circle or type in the coordinates into the Command Input Bar.	None
Step 2	Pick the second point on the circle or type in coordinates.	
Step 3	Pick the third point on the circle or type in coordinates.	

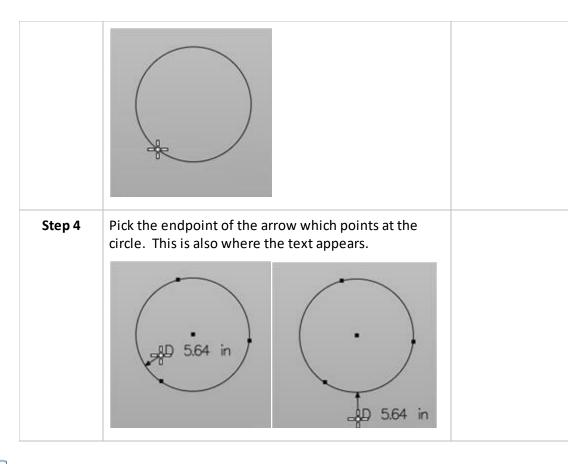

Radial Dimensions Pane, Dimensions Ribbon Bar

### 5.8.2.4 3 Pt Circle Rad



Create a dimension label for a circle. It measures the radius of the circle. The letter 'R' appears in the label to show that it is measuring the radius.

An arrow specifies which circle is labeled and is always radial. The text is always horizontal. Both are always in the plane of the circle. Both can be slid around the circle. The units are included. **Note:** You can use points as input to this command.

# Command Prompts


3 Pt Circle Rad:: Pick first point or enter coordinates x.y.z.

3 Pt Circle Rad:: Pick second point or enter coordinates x,y,z

3 Pt Circle Rad:: Pick third point or enter coordinates x,y,z

3 Pt Circle Rad:: Pick third point or enter the dimension point

	Screen Pick	Command Inpu
Step 1	Pick the first point on the circle or type in the coordinates into the Command Input Bar.	None
Step 2	Pick the second point on the circle or type in coordinates.	
Step 3	Pick the third point on the circle or type in coordinates.	
Step 4	Pick the endpoint of the arrow which points at the circle. This is also where the text appears.	

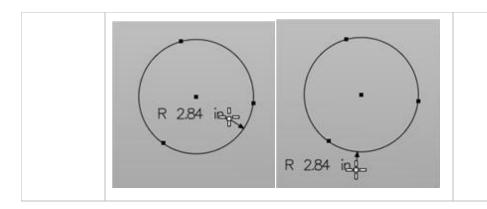

Radial Dimensions Pane, Dimensions Ribbon Bar

#### 5.8.2.5 3 Pt Arc Diameter

Create a dimension label for an arc. It measures the diameter of the circle of which the arc is a part. The letter 'D' appears in the label to show that it is measuring the diameter.

An arrow specifies which arc is labeled. The text is always horizontal. Both are always in the plane of the arc. Both can be slid around the arc. The units are included. **Note:** You can use points as input to this command.

## **Command Prompts**


3 Pt Arc Diameter:: Pick first point or enter coordinates x,y,z

3 Pt Arc Diameter:: Pick second point or enter coordinates x,y,z

3 Pt Arc Diameter:: Pick third point or enter coordinates x,y,z

3 Pt Arc Diameter:: Pick third point or enter the dimension point

	Screen Pick	Command Input
Step 1	Pick the arc. It can be pre-selected.	None

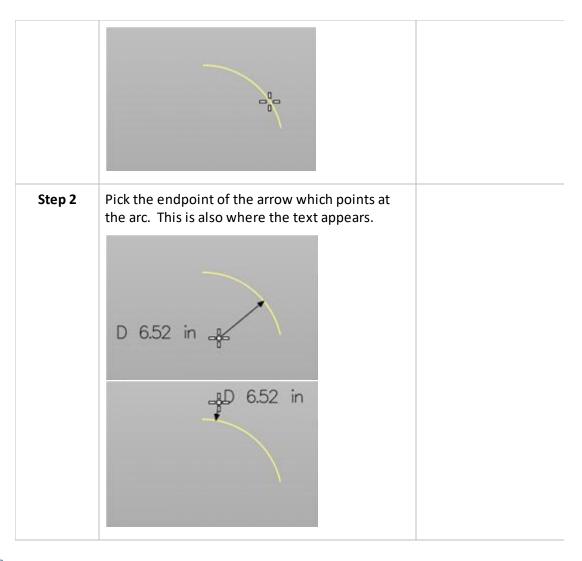

Radial Dimensions Pane, Dimensions Ribbon Bar

#### 5.8.2.6 3 Pt Arc Radius

3 Pt Arc Radius

Create a dimension label for an arc. It measures the radius of the circle of which the arc is a part. The letter 'R' appears in the label to show that it is measuring

the radius.

An arrow specifies which arc is labeled. The text is always horizontal. Both are always in the plane of the arc. Both can be slid around the arc. The units are included. **Note:** You can use points as input to this command.



3 Pt Arc Radius:: Pick first point or enter coordinates x,y,z

3 Pt Arc Radius:: Pick second point or enter coordinates x,y,z

3 Pt Arc Radius:: Pick third point or enter coordinates x,y,z

3 Pt Arc Radius:: Pick third point or enter the dimension point

### Basic Procedure

	Screen Pick	Command Input
Step 1	Pick the arc. It can be pre-selected.	None
Step 2	Pick the endpoint of the arrow which points at the arc. This is also where the text appears.  R 3.26 in 3.26 in	

# Related Topics

Radial Dimensions Pane, Dimensions Ribbon Bar

### 5.8.3 Angular Dimensions



The Dimensions Ribbon Bar contains the following Angular Dimensions pane with associated functions.

Related Topics

**Create an Angle Dimension** 

Create a 3 Point Angle Dimension

<u>Dimensions Ribbon Bar</u>

#### 5.8.3.1 Angle



Create a dimension label for the angle between line segments. The segments do not have to intersect; they will be extended into lines for the purposes of calculation.

The text is always along the dimension label and centered. The units are degrees and are included.

There are four possible arcs. Pick a point which will define the quarter of the labeling plane and how far away from the vertex to put the label.

### **Command Prompts**

Angle:: Pick first curve

Angle:: Pick second curve


Angle:: Enter dimension point

	Screen Pick	Command Input
Step 1	Pick the first line segment. It can be preselected.	None
	<del>-/</del>	


Step 2 Pick the second line segment. Step 3 Pick the radial distance where the label should be displayed. Arrows go along the arc and point at the two rays. The label appears on the outside of the arc.

# Notes

1. It is possible to choose an arc not inside the angle that was just made. For example, the defined angle was the 63 degree angle, but the supplementary 117 degree angle can also be dimensioned.

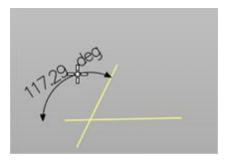

2. It is not necessary for the segments to intersect, the segments will be extended to intersection for the purpose of calculation.

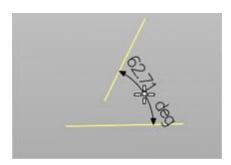

# Related Topics

Angular Dimensions Pane, Dimensions Ribbon Bar

#### 5.8.3.2 3 Pt Angle

A 3 Pt Angle

Create a dimension label for an arc. It measures the angle subtended.

An arrow specifies which arc is labeled. The text is always along the dimension label and centered. Both are always in the plane of the arc. Both can be slid radially. The units are degrees and are included.

Pick three points, the first of which is the vertex of the arc and two additional points which define lines going through the vertex point. There are now four possible arcs, one in each quarter of these intersecting lines. Pick another point which defines which quadrant and how far away from the vertex the label should be. **Note:** You can use points as input to this command.

## Command Prompts


3 Pt Angle:: Pick first point or enter coordinates x,y and z

3 Pt Angle:: Pick second point or enter coordinates x, y and z

3 Pt Angle:: Pick third point or enter coordinates x,y and z

3 Pt Angle:: Enter dimension point

	Screen Pick	Command Input
Step 1	Pick the first point on the arc to dimension or enter x,y,z coordinates.	None
Step 2	Pick the second point on the arc to dimension or enter x,y,z coordinates.	
Step 3	Enter the dimension point.	

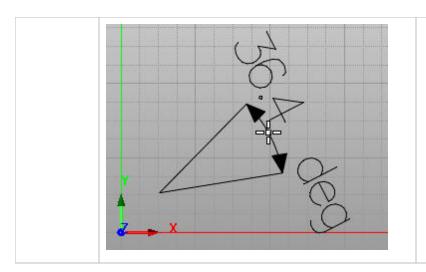

Angular Dimensions Pane, Dimensions Ribbon Bar

### 5.8.4 Annotations



The Dimensions Ribbon Bar contains the following Annotations pane with associated functions.

# Related Topics

Create a Leader Line Dimension

**Create a Text Annotation** 

**Dimensions Ribbon Bar** 

#### 5.8.4.1 Leader Line



Create a text label with an arrow pointing in a direction. It can be used to label various pieces of geometry or other items of interest.

### More Information

Type in the text into the Command Input Bar.

Create a dimension label for the angle between line segments. The segments do not have to intersect; they will be extended into lines for the purposes of calculation.

The text is always along the dimension label and centered. The units are degrees and are included.


There are four possible arcs. Pick a point which will define the quarter of the labeling plane and how far away from the vertex to put the label.

# **Command Prompts**

Leader Line:: Enter text string


Leader Line:: Pick point or enter coordinates x,y and z

	Screen Pick	Command Input
Step 1	Pick the point or type in coordinates. This is where the head of the arrow should go. The arrow is a polyline and so can have multiple sections at angles. This can be useful if having to label something in the middle of a collection of other items. The labeling arrow can bend its way through the collection to point at the correct item.	None
Step 2	Right-click the mouse to stop adding segments to the polyline. The text will appear at the last point selected.	

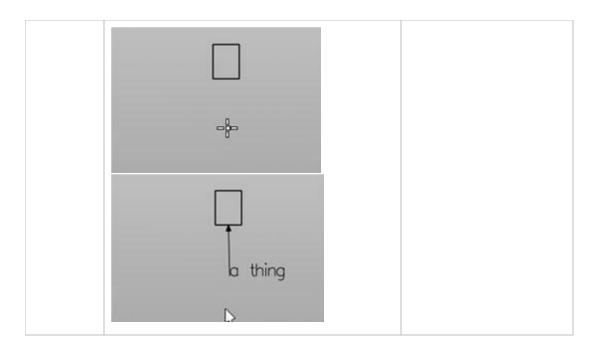


# Notes

1. Here is an example of a multiple segment polyline leader.

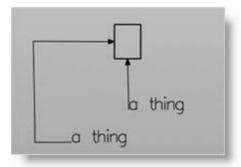

2. Text does not have to be included. This results in only an arrow. When asked for text, start picking the endpoints of the leader.

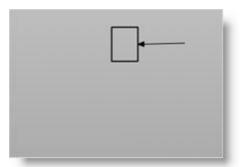

Annotations Pane, Dimensions Ribbon Bar

#### 5.8.4.2 Annotation



Create annotation text. It can be used to put in notes or other information in your drawing. The text Font Height can be edited individually for each annotation. See Editing Annotation Text Font Height below for more information on how to do this.

### Command Prompts

Leader Line:: Enter text string

Leader Line:: Pick point or enter coordinates x,y and z


### Basic Procedure

	Screen Pick	Command Input
Step 1	Type in the text into the Command Input Bar.	None
Step 2	Pick the point or type in coordinates. This is where the text will appear.	

# Editing Annotation Font Text Height


The height of annotation text can be edited individually for each annotation entity. Here's how its done:

1. Select the Text Annotation that you wish to edit.

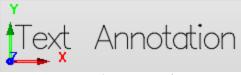


**Annotation Text Example** 

2. Right-click and select Properties.

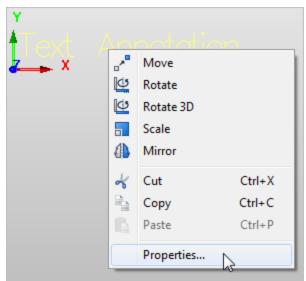


Right-click & select Properties

3. From the Properties dialog, change the Use global height value to False.

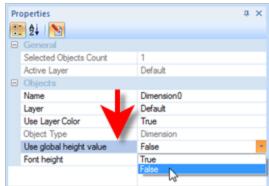

The Properties dialog

4. Then edit the Font Height.

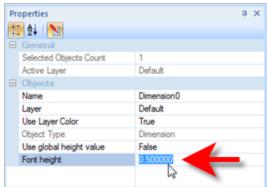

The Properties dialog

Related Topics

#### Annotations Pane, Dimensions Ribbon Bar

#### 5.8.4.3 Dot Annotation




Create graphical dot text at a selected point. This can be used to identify geometry in VisualCAD without using a geometric element.

# Command Prompts

Dot annotation:: Enter start point of text

### Basic Procedure

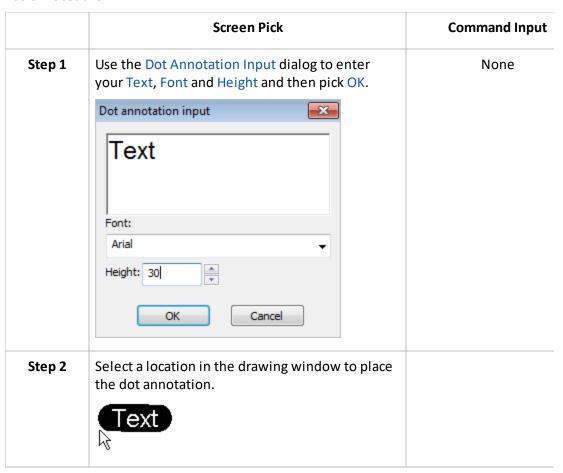

# Related Topics


<u>Annotations Pane, Dimensions Ribbon Bar</u>

**Annotation** 

### 5.9 Analyze

The Analyze Ribbon Bar contains Measure and Anal panes and associated functions.

The Analyze Ribbon Bar

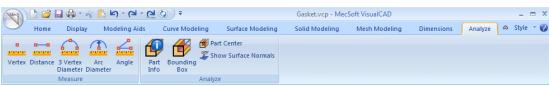

Analyze Ribbon Bar

# Related Topics

Measure Pane, Analyze Ribbon Bar

Analyze Pane, Analyze Ribbon Bar

The Ribbon Bar

**Customize Quick Access Toolbar** 

**Customize Dialog** 

**VisualCAD Options** 

#### 5.9.1 Measure

The Analyze Ribbon Bar contains the following Measure pane with associated functions.



# Related Topics

Measure a Vertex

Measure a Distance

Measure a 3 Vertex Diameter

Measure an Arc Diameter

Measure an Angle

**Analyze Ribbon Bar** 

#### 5.9.1.1 Vertex



Get the X, Y, Z coordinates of a selected point (vertex). Move the cursor over a point with one of the object snaps active. The coordinates of the point are displayed dynamically. After you select the point, the coordinates are displayed in the command prompt window.

# Command Prompts Co-ordinates:: Pick vertex point Vertex: {0.500000,1.250000,0.0000000}

#### Basic Procedure

	Screen Pick	Command Input
Step 1	-60.370, 59.942, 0.000	Pick a vertex point.

#### Notes Notes

1. Unless a point on an existing object is selected, the picked point will be in the Construction Plane of the currently selected view.

## Related Topics

Measure Pane, Analyze Ribbon Bar

#### **5.9.1.2** Distance



Get the 3D distance between two points. The point coordinates and the distance between them are displayed dynamically. The distance is also displayed in the command prompt window.

## Command Prompts

Distance:: Pick first point or enter coordinates xy and z

Distance:: Pick second point or enter coordinates x, y and z

D: 1.414214 in, Dz: 0.000000 in; {-2.000000,1.000000,0.000000} - {-1.000000,2.000000,0.000000}

#### **Basic Procedure**

	Screen Pick	Command Input
Step 1	Coordinate Pt1 -60.370, 59.942, 0.000	Pick first point or enter x,y
Step 2	Pt1 = -60.370, 59.942, 0.000  D = 12.000 mm  -52.657, 50.749, 0.000	(Optional) Enter X, Y, [Z] coordinates for the second

### Notes Notes

- 1. The distance is displayed with a letter 'D' and the units. The 3D coordinates of the two picked points will also be displayed after the distance.
- 2. Unless points on an existing object are selected, picked points will be in the construction plane of the currently selected view.

## Related Topics

Measure Pane, Analyze Ribbon Bar

#### 5.9.1.3 3 Vertex Diameter




Get the diameter and center coordinates of a temporary arc through three points. The coordinates of each of the three points are dynamically displayed. The calculated diameter between the three points is also dynamically displayed on the arc as well as in the command prompt window. The arc center coordinates are displayed in the

command prompt window. Note: You can select arcs, Circles or surface edges.

#### **Command Prompts**

(Optional) Enter X, Y, [Z] coordinates for the second point (intermediate point on arc). (Optional) Enter X, Y, [Z] coordinates for the second point (intermediate point on arc). (Optional) Enter X, Y, [Z] coordinates for the second point (intermediate point on arc). Arc Diameter: 10.010000 mm, Center: {-52.656830,50.749151,0.000000}

#### Basic Procedure

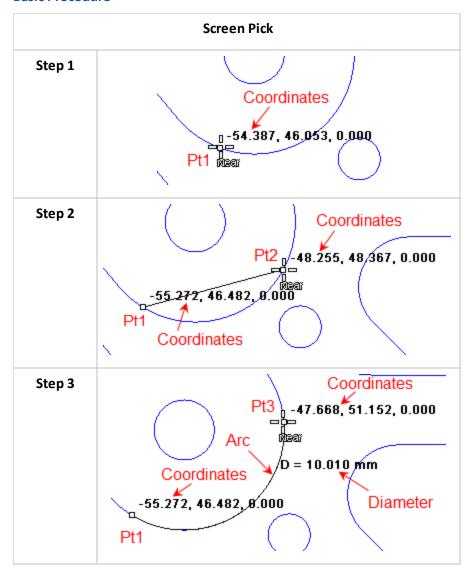

#### Notes Notes

1. The diameter (with units) and center information is from the circle that contains the temporary arc.

2. Unless points on an existing object are selected, picked points will be in the construction plane of the currently selected view.



Measure Pane, Analyze Ribbon Bar

#### 5.9.1.4 Arc Diameter



Get the diameter of an arc or circle. Pick an arc or circle and the diameter and center will be displayed in the Prompt Input Bar. **Note**: You can select arcs, Circles or surface edges.

## Command Prompts

Arc Diameter:: Pick Arc/Closed Curve to measure

Arc Diameter: 6.000000 in, Center: {-12.000000,7.000000,0.000000}

#### Basic Procedure

	Screen Pick	Command Input
Step 1	Select an arc or circle.	
		none

## Related Topics

Measure Pane, Analyze Ribbon Bar

#### 5.9.1.5 Angle



Get the angle formed between a vertex point and two other points.

The coordinates of the points are dynamically displayed along with the included angle.

## Command Prompts


Pick first point or enter coordinates x,y and z

Pick second point or enter coordinates x,y and z

Pick third point or enter coordinates x,y and z

Angle: 48.089217 deg

#### Basic Procedure

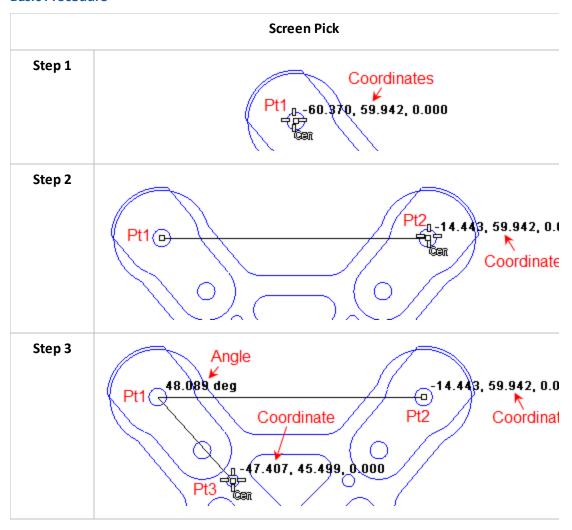

#### Notes

- 1. The resultant angle is always between 0 and 180 degrees.
- 2. The picked points will be in the Construction Plane of the currently selected view.

## Related Topics

Measure Pane, Analyze Ribbon Bar

#### 5.9.2 Analyze

The Analyze Ribbon Bar contains the following Analyze pane with associated functions.



Analyze Ribbon Bar Analyze Pane

Related Topics

Analyze the Part Information

Analyze the Bounding Box

**Analyze the Part Center** 

**Show Surface Normals** 


**Analyze Ribbon Bar** 

#### 5.9.2.1 Part Info.



When this function is selected, all geometry is evaluated and important information is reported in a dialog, as shown below:

Dialog Box: Part Information

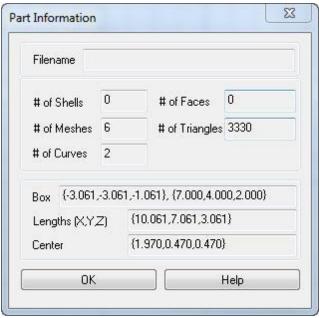

Part Information dialog box

#### Filename

Shows the saved location of the current part file. This field will be empty if the part file has not yet been saved.

#### Shells

Refers to poly-surface geometry objects.

#### Faces

Refers to surface geometry objects.

#### Meshes

Refers to a Box, Sphere, Cylinder, Cone Torus, Rectangular Tube, Circular Tube, Extrude, and Revolve.

#### Curves

Refers to the number of points, lines, polylines, arcs, circles, and other curves in the part geometry.

#### Faces

Refers to the number of surfaces in the part geometry.

#### Triangles

Refers to the number of triangles in all mesh geometry.

#### • Box, Lengths, Center

This information is the same as described in the <u>Bounding Box</u> function and <u>Part Center</u> function.

#### Ok

Closes the dialog.

 Help Brings up the on-line Help.

## Related Topics

Analyze Pane, Analyze Ribbon Bar

#### 5.9.2.2 Bounding Box



When this function is selected, VisualCAD will analyze all existing geometry, will create an internal minimum, volumetric box that contains all that geometry, and will return the following information about the box:

- {minimum X, Y, Z} equals the lower left bottom vertex of the box.
- {maximum X, Y, Z} equals the upper right top vertex of the box.
- {lengths along X, Y, Z} of the box.

This information is oriented to the World Coordinate System (WCS).



#### Notes

1. Existing geometry is required for the Analyze functions. If none exists, a message is returned.



Analyze Bounding Box Message

- 2. Geometry objects do not need to be selected since the bounding box will automatically contain all existing objects.
- 3. All geometry is evaluated, including points, curves, surfaces, meshes, etc.
- 4. Geometry on all layers, visible or invisible, is contained in the box.

## Related Topics

Analyze Pane, Analyze Ribbon Bar

#### 5.9.2.3 Part Center



This function will return the coordinates of the center of the bounding box that contains all the part geometry, as referred to in the Bounding Box function above.

#### **Command Prompts**

Center: {1.969670,0.469670,0.469670}

#### **Notes**

1. Refer to the Notes in the Bounding Box function above.

#### Related Topics

Analyze Pane, Analyze Ribbon Bar


#### 5.9.2.4 Show Surface Normals

Selecting this function will cause normal vector arrows to display on every surface on the screen. Geometry objects do not need to be selected. Mesh objects do not apply.

#### **Command Prompts**

Press Escape to abort

#### Basic Procedure

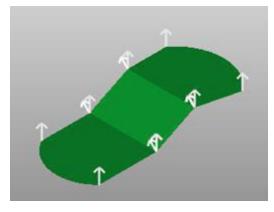

Press the ESC key to abort the display of surface normals.

#### Notes

1. Surface normals are also displayed for objects that are locked. If no valid surfaces are found, the following error message will be displayed.



## Related Topics


Analyze Pane, Analyze Ribbon Bar

#### 5.10 Transform

The Transform Ribbon Bar contains a Transform pane and associated functions.

## Enabling the Transform Ribbon Bar

When a geometry selection is made VisualCAD enter Edit Mode and allows access to the Transform Ribbon Bar.

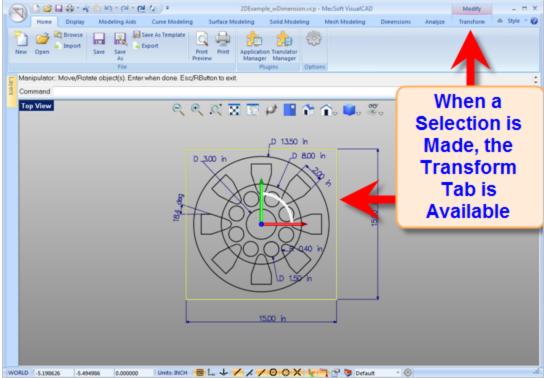

The Transform Ribbon Bar is Enabled

Selecting Transform will display the Transform Ribbon Bar.

Selecting a Transform command will act upon the selected geometry.



Transform Ribbon Bar

## Context Transform Menu (Right-click)

Selecting geometry in a viewport and by using right mouse button click also provides access to transformation tools.



Context Transform Menu (Right-click)

If you do not see the above options when you Right mouse button click, enable Show pop-up menu under <u>Home</u> > <u>Options</u>.

## Related Topics

Move Objects by Mouse

Rotate Selected Object in 2D

Rotate Selected Object in 3D

**Graphically Scale Selected Objects** 

Rectangle Scale selected Objects

Move Objects in 3D

**Rotate Selected Objects** 

Orient the Entire Part

**Scale Selected Objects** 

**Mirror Selected Objects** 

**Array Selected Objects** 

**Polar Array Selected Objects** 

#### **Graphical Manipulator**

**Transform Ribbon Bar** 

## 5.10.1 Move by Mouse



All selected items will be moved in 3D. The direction and distance to move is specified by picking a starting and ending point. All selected items will be moved that direction and distance.

# Command Prompts

Select objects and hit Right Mouse Button/Enter when done


Move by mouse:: Pick from point or enter coordinates x,y and z

Move by mouse:: Pick to point or enter coordinates x,y and z

Added # objects to selection!

#### Basic Procedure

	Screen Activity	Comments
Step 1	Select items to move. The items could be pre-selected. If a mesh is selected, choose from the pop-up selection options provided.	
	Selections Face Edge Shell None	
Step 2	Pick a starting point or type in coordinates into the <b>Command Bar</b> .	

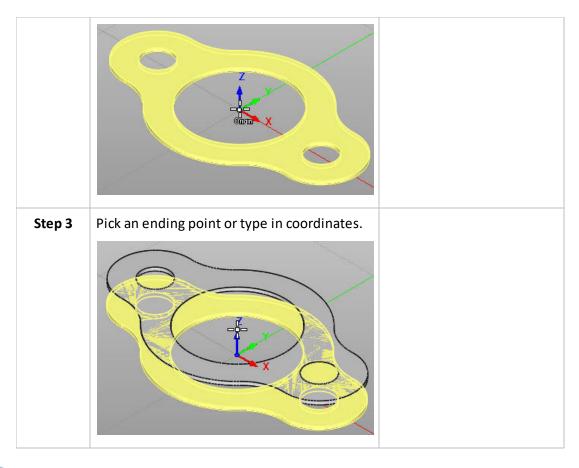

## Related Topics

**Transform Ribbon Bar** 

#### 5.10.2 Rotate 2D



Rotate selected objects around a picked point a given angle. The plane of rotation is parallel to the construction plane in the currently selected view.

# Command Prompts

2D Rotate by mouse:: Select objects - hit right mouse to end

2D Rotate by mouse:: Enter rotation center point

2D Rotate by mouse:: Enter first reference point or rotation angle

2D Rotate by mouse:: Enter second reference point


#### Basic Procedure

Screen Activity	Comments
-----------------	----------

Step 1	Pick objects to be rotated. They can be preselected.	
Step 2	Pick a center of rotation or type in the coordinates into the Command Input Bar.	
Step 3	Pick a starting point or type in the coordinates. A temporary ray from the center of rotation going through the starting point will be made.	
Step 4	Pick an ending point or type in the coordinates. A temporary ray from the center of rotation going through the ending point will be made. The angle of rotation will be measured from the starting ray.	

# **Example**

In the example below, a rectangle was selected and is highlighted yellow. A center point of rotation was picked to the left of the rectangle. The picture on the right side shows that the starting point was picked inside the rectangle. The cursor has moved to just above the rectangle and its position is marked by a white dot. A temporary line segment goes from the center of rotation to that point. The effects of the rotation on the selected geometry (rectangle) are displayed in black.

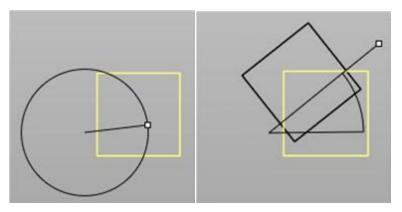

Once the final point is selected, the geometry is rotated and all the temporary line segments, circles, rays, and points disappear. The final result is a rotated rectangle.

# Related Topics

Transform Ribbon Bar

#### 5.10.3 Rotate 3D



Rotate selected objects around a picked point a given angle.

# **Command Prompts**

3D Rotate by mouse:: Enter number of copies or Pick rotation axis base point

3D Rotate by mouse:: Pick axis head point

3D Rotate by mouse:: Enter angle or reference point

3D Rotate by mouse:: Enter second reference point


#### Basic Procedure

	Screen Activity	Comments
Step 1	Pick objects to be rotated. They can be preselected.	
Step 2	Type in the number of copies to be made. If no copies are to be made, just go to step 3.	
Step 3	Pick the axis basis point or type in the coordinates into the Command Input Bar.	
Step 4	Pick the axis head point or type in the coordinates. A temporary segment will connect the axis base and axis head points.	
Step 5	Pick a starting point or type in the coordinates. A temporary ray from the center of rotation going through the starting point will be made.	
Step 6	Pick an ending point or type in the coordinates. A temporary ray from the center of rotation going through the ending point will be made. The angle of rotation will be measured from the starting ray	


# **Example**

In the example below, a box was selected and is highlighted yellow. The axis base point and head point were picked. The axis is the vertical line to the left of the box. The starting point for the angle is being picked in the second picture. The cursor location is

the white dot below the box at the intersection of the rotary circle and a ray from the axis base point.

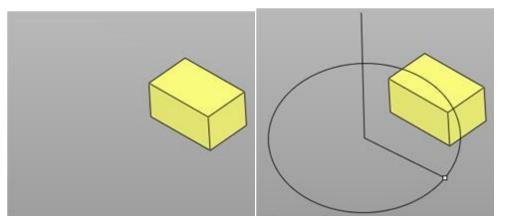

In the first image below, the starting point was picked. The current cursor position is to the right of the selected box and is marked by a white dot. The effects of the rotation are displayed by the gray box. Once the endpoint is picked the geometry is rotated and all the temporary line segments, circles, rays, and points disappear.

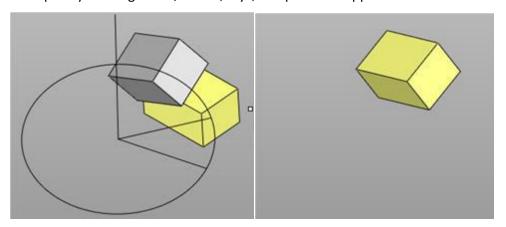

## Related Topics

Transform Ribbon Bar

#### 5.10.4 Scale



This function will interactively scale selected 2D/3D geometry about a point. The scale factor can be directly keyed-in to the Command Bar or will be determined by the ratio of two user-defined radial distances. This method of scaling will maintain a constant aspect ratio of the part model size.

## **Command Prompts**

Graphical Scale:: Enter scale center point

Graphical Scale:: Enter first reference point or scale factor


Graphical Scale:: Enter second reference point

# Basic Procedure (also see Example below)


	Screen Activity	Comments
Step 1	Select Graphical Scale from Transform menu.	None
Step 2	Select the 2D and/or 3D geometry objects that you want to be scaled.	
Step 3	Enter the scale reference point (or scale focus point).	
Step 4	Determine the scaling factor (factor or distance ratios).	
Step 5	Select a second point for scaling.	
Step 6	ESC or Right Mouse Button to quit.	

## **Example**


1. Select the 2D and/or 3D geometry objects that you want to be scaled. They may also be pre-selected. After the desired geometry is selected and right-click to close the selection.

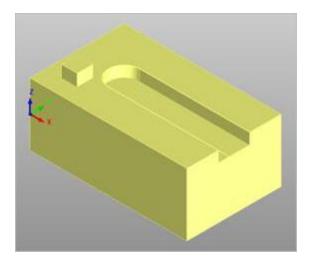


2. Enter the scale reference point (or scale focus point). This can be any point on the model or the grid or you can key-in World coordinates, etc. Scaling will be done toward or away from this point.

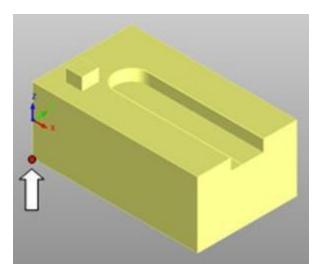

- 3. Determine the scaling factor in one of two ways described below:
  - a. Enter scale factor: A scale factor (decimal value) may be directly entered into the Command Bar. When this value is accepted, the geometry will immediately be scaled and the function will end.

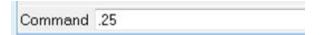


b. Distance ratios: Select a point away from the scale reference point (from Step 3). The distance between this point and the scale reference point represents 100% or the full scale of the selected geometry.

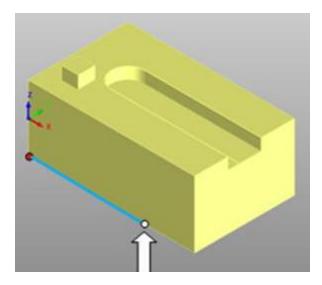

4. Select a second point for scaling. The distance between this second point and the scale reference point (from **Step 3**) is compared to the first distance and this ratio determines the scale factor for the geometry. If this second point is selected using

the cursor, you will see the geometry being scaled dynamically until this second point is finally determined.

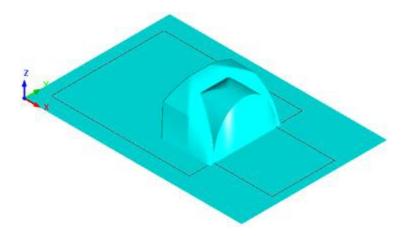

5. Finally, after the second point is picked, the geometry will be scaled and the function will end. Scaling larger or smaller are both permitted. The function can be canceled at any time before completion by using ESC or the Right Mouse Button.

#### Related Topics

Transform Ribbon Bar

#### 5.10.5 Rectangular Scale



This function will scale selected 2D/3D geometry by interactively changing the size of a 'minimum rectangle' around the geometry. This scaling method performs 2D scaling oriented to the C-Plane and does not maintain a constant aspect ratio of the part model size.

## **Command Prompts**

Rectangle Scale:: Select objects - hit right mouse to end

Rectangle Scale:: Move corners of rectangle to scale. Enter when done. ESC/Right-Mouse to quit


## Basic Procedure

	Screen Activity	Comments
Step 1	Select Rectangular Scale from Transform menu.	None
Step 2	Select the geometry objects to scale.	


Step 3	Interactively move the rectangle corners/mid-points to reshape the rectangle.	
Step 4	ESC or Right-click to quit.	

## **Example**


1. Select the 2D and/or 3D geometry objects that you want to be scaled. They may also be pre-selected. After the desired geometry is selected, hit the Right Mouse Button to close the selection.

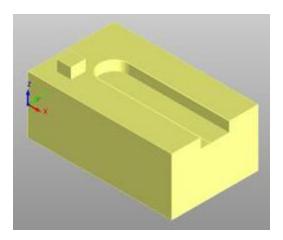

2. VisualCAD will immediately create a minimum rectangle in the C-Plane that surrounds the selected geometry.

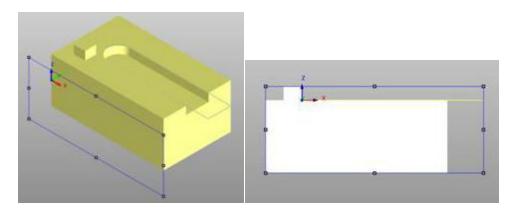

3. Interactively move the rectangle corners/mid-points to reshape the rectangle. As the rectangle is changed, a temporary duplicate of the geometry will be shown to help you visualize the resultant model change. When all changes are made to the rectangle, select ENTER to accept the changes or ESC/Right Mouse Button to cancel the function.

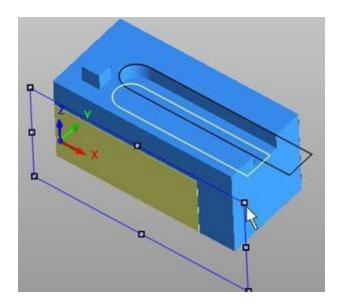

## Related Topics

**Transform Ribbon Bar** 

#### 5.10.6 Move ...

All selected items will be moved in 3D. The direction and distance to move is specified by picking a starting and ending point. All selected items will be moved that direction and distance. A dialog will appear where you can input parameters for the move.

## Command Prompts

Select objects and hit Right Mouse Button/Enter when done

## Basic Procedure

	Screen Activity	Comments
Step 1	From the Move select text by mouse dialog box, select Pick Objects and select the objects to move.	
Step 2	Enter the Move From XYZ coordinates or select the Pick From Point button and then select a point.	

Step 3	Enter the Move To XYZ coordinates or select the Pick To Point button and then select a point.	
Step 4	Select the Pick Translation Axis button to define the translation axis.	Optional
Step 5	Enter the Number of Copies and then pick OK to complete the Move.	

# Dialog Box: Move select text by mouse



## Number of objects picked

The number of items to be moved is displayed. If more items need to be moved, use the Pick Objects button.

# Move From / Move To

The starting point is defined in the Move From area, and the ending point is defined in the Move To area. The coordinates can be entered or a point can be picked. All picked points are projected down into the view's construction plane.

## Pick Translation Axis

The Pick Translation Axis can be used to define the starting and ending points. Once the button is pushed, you make a temporary line segment: the endpoints of that segment are the start and end points of the move.

# Number of Copies

The Number of Copies allows you to make additional copies of the objects, each separated by the move vector. For example, a point at the origin is moved from (0,0,0) to (5,0,0) with three copies. The result is four points at (0,0,0), (5,0,0), (10,0,0), and (15,0,0). The original point is unaffected, and the other points were copied using the movement vector.

## Related Topics

**Transform Ribbon Bar** 

#### 5.10.7 Rotate ...

All selected objects will be rotated in 3D. The axis and angle of rotation are specified, and all selected items will be that angle about the axis. Refer to the Basic Procedure below. Note additional information under the Dialog Box below.

# Command Prompts

Select objects and hit Right Mouse Button/Enter when done

## Basic Procedure

	Screen Activity	Comments
Step 1	From the Rotate selected objects dialog box, select Pick Objects and select the objects to rotate.	
Step 2	Enter the Rotate About XYZ coordinates or select the Pick About Point button and then select a point.	Default is 0,0,0 origin.
Step 3	Enter the Axis Vector XYZ coordinates or select the Pick Rotation Axis button and then select a start point and end point to define the axis.	
Step 4	Enter the Rotation Angle.	
Step 5	You can Copy and Rotate at the same time if desired. Enter the Number of Copies and then pick OK to complete the Rotate.	Optional

# Dialog Box: Rotate selected objects

**\*** 

# Number of objects picked

The number of items to be rotated is displayed. If more items need to be rotated, use the Pick Objects button.

# Rotate About

The point of reference is defined in the Rotate About section. The coordinates can be entered or an About Point can be picked.

#### Axis Vector

The axis of rotation is defined with a point and a vector. The point allows the axis to be offset from the origin. The vector is parallel to the axis, and the direction of the vector tells which rotation is a positive angle. This is the Right Hand Rule. For example, an axis of rotation at the origin (point is (0,0,0)) and a vector (0,0,1) has positive angle going counterclockwise from the top view (from positive x-axis to positive y-axis). Alternatively, if the axis of rotation was at the origin (0,0,0) but went the other way with a vector (0,0,-1) has positive angle going clockwise (from positive x-axis to negative y-axis).

# Rotation Angle

The rotation angle is measured from the current location.

# Number of Copies

This allows you to make additional copies of the objects, each separated by the rotation angle. The original object is unaffected, and the other points were copied using the rotation angle.

## Related Topics

Transform Ribbon Bar

#### 5.10.8 Part Orient ...


This dialog allows user to orient the part to have it aligned parallel to World Coordinate System (WCS). The dialog offers a convenient way of selecting each of the six principal directions to set the cutting direction.

## **Command Prompts**


None.

#### Basic Procedure

	Screen Activity	Comments
Step 1	Open part file.	

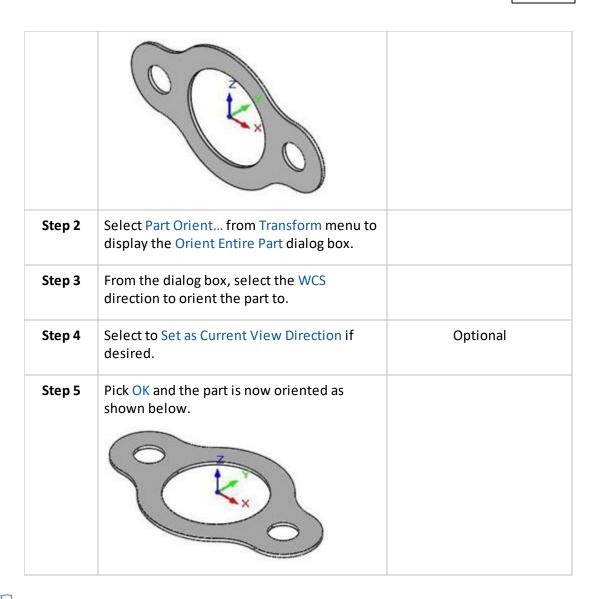

Dialog Box: Rotate selected objects

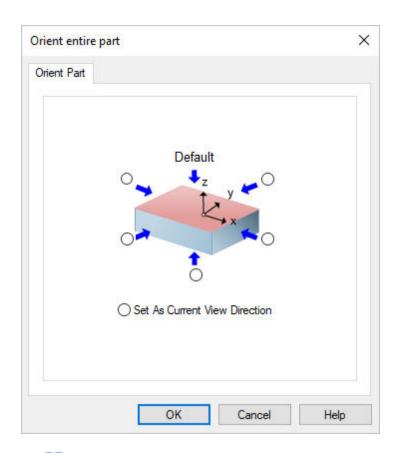

# World Coordinate System (WCS)

Once you select a WCS direction, all of the geometry will be rotated to an orientation where the selected cutting direction becomes the negative Z axis.

# Set as Current View Direction

Orients the part parallel to the current view orientation.


## Related Topics

**Transform Ribbon Bar** 

#### 5.10.9 Orient by 3 Pts

Orient by 3 pts ...

This command allows you to transform the currently selected objects using three reference points and three target points.

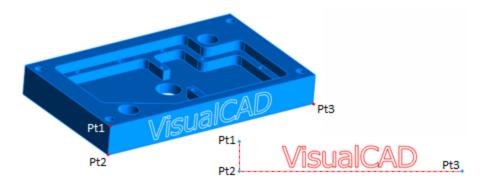

# **Command Prompts**

Pick or enter first reference point.

Pick or enter second reference point.

Pick or enter third reference point.

Pick or enter first target point.

Pick or enter second target point.

Pick or enter third target point.

#### Basic Procedure

	Screen Activity	Comments
Step 1	Pick three reference points in relation to the selected objects.	The selected objects are re-oriented.
Step 2	Pick three target points to re-orient the objects.	

## Related Topics

**Transform Ribbon Bar** 

#### 5.10.10 Scale ...



All selected objects will be magnified, shrunk, or stretched the same way. A dialog will appear where you can input parameters for the scaling.


**Command Prompts** 

None.

Basic Procedure

	Screen Activity	Comments
Step 1	Select Scale from the Transform menu to display the Scale selected objects dialog box.	
Step 2	The number of objects is displayed. Use Pick Objects to add more to the selection.	
Step 3	Select either Uniform or Non-Uniform Scaling and enter the XYZ scale factors.	
Step 4	Pick OK to Scale the selected objects.	Optional

## Dialog Box: Scale selected objects

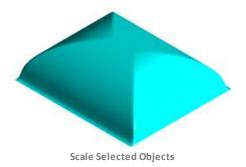

# Number of objects picked

The number of objects to be scaled is displayed. If more items need to be scaled, use the Pick Objects button.

# Scale Units

This converts the units associated with the geometry to a different set of units. Conversions can go from millimeters to inches or from inches to millimeters. The object's size remains constant, but the numbers associated with the size change. A one-inch object will be scaled into a 25.4 mm object. The units of the display view are not affected, so the object appears to grow or shrink. When the units of the display are changed, the object will appear as it did before the scaling.

# Uniform scaling

This will magnify or shrink all dimensions equally. A scaling of 1.0 is no change. A scaling of 0.5 will make the object half as small, and a scaling of 3 will make the object 3 times bigger.

## Non-Uniform Scaling

This will stretch the object. The coordinates of the object are what are scaled. This will cause an object not at the origin to move. For example, if a point is at (5,0,0) and is uniformly scaled by a factor of 3, the point will be at (15, 0, 0).

Related Topics

**Transform Ribbon Bar** 

#### 5.10.11 Mirror ...



Reflects all selected objects in a plane parallel to one of the principal planes. A dialog will appear where you can input parameters for the mirroring.


**Command Prompts** 

None.

#### Basic Procedure

	Screen Activity	Comments
Step 1	Select Mirror from Transform menu.	
Step 2	The number of objects is displayed. Use Pick Objects to add more to the selection.	
Step 3	Define the Mirror Plane and Pick (P) point.	
Step 4	Check the box to mirror a copy if desired.	Optional

Dialog Box: Mirror selected objects

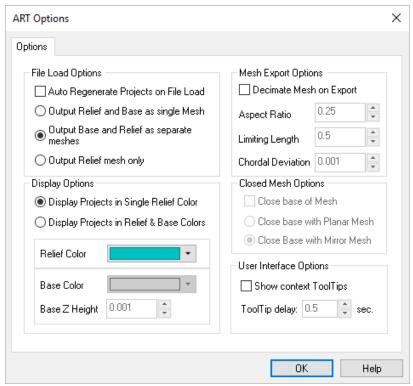

Mirror Selected Objects

## Number of objects picked

The number of objects to be mirrored is displayed. If more items need to be scaled, use the Pick Objects button.

# Mirror Plane / Point (P)

Mirror Plane is parallel to one of the principal planes: XY Plane, XZ Plane, or YZ Plane.

Point (P) is defined to allow the planes to be offset. This point is on the mirroring plane. You may also select Pick Plane Point.

# Create Copy

This allows a copy to be made and leaves the original object in place and puts a copy at the mirrored location.

## Related Topics

**Transform Ribbon Bar** 

#### 5.10.12 Array ...

Array ...

All selected objects will be copied into a uniform grid of objects offset from each other specified distances in x, y, and z. A dialog will appear where you can input parameters.


**Command Prompts** 

None.

#### **Basic Procedure**

	Screen Activity	Comments
Step 1	Select Array from Transform menu.	
Step 2	The number of objects is displayed. Use Pick Objects to add more to the selection.	
Step 3	Define the XYZ Spacing and # of Copies.	
Step 4	Pick OK to complete the Mirror command.	

## **Dialog Box: Array selected objects**

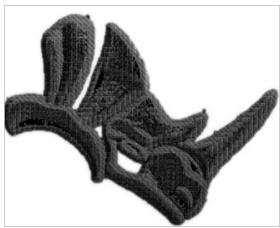

Array selected objects

# Number of objects picked

The number of objects to be arrayed is displayed. If more items need to be scaled, use the Pick Objects button.

**XYZ Spacing** 

The XYZ Spacing is the separation of a given point on an object and the corresponding point on the copied objects. The object's size is not considered during this command.

# # of Copies

There can be a different Number of X, Y or Z Copies made in each direction.

#### Notes

1. If the spacing numbers are all positive, the original object will be the one with the lowest (x, y, z) coordinates.

## Related Topics

**Transform Ribbon Bar** 

#### 5.10.13 Polar Array ...



All selected objects will be copied into a uniform ring of objects around a circle. A dialog will appear where you can input parameters.


## **Command Prompts**

None.

#### Basic Procedure

	Screen Activity	Comments
Step 1	Select Polar Array from Transform menu.	
Step 2	Enter or pick the point to Rotate About.	
Step 3	Enter the Angle to Fill. and total Number of Copies to array.	
Step 4	Pick OK to complete the Polar Array command.	

Dialog Box: Polar array selected objects

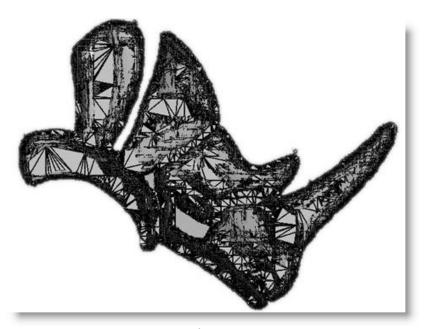

**Polar Array** 

#### Number of objects picked

The number of objects to be polar arrayed is displayed. If more items need to be scaled, use the Pick Objects button.

## Rotate About

This is defined with a point and a vector. Pick About Point allows the axis to be offset from the origin.

## Axis Vector

This is parallel to the axis, and the direction of the vector tells which rotation is a positive angle. This is the Right Hand Rule. For example, an axis of rotation at the origin (point is (0,0,0)) and a vector (0,0,1) has positive angle going counterclockwise from the top view (from positive x-axis to positive y-axis). Alternatively, if the axis of rotation was at the origin (0,0,0) but went the other way with a vector (0,0,-1) has positive angle going clockwise (from positive x-axis to negative y-axis).

# Angle to Fill

The rotation **Angle to Fill** measured from the current location.

# Number of Copies

The **Number of Copies** is evenly distributed about the Angle to Fill.

## Related Topics

#### **Transform Ribbon Bar**

## 5.10.14 Along Path ...



All selected objects will be copied along a path curve. A dialog will appear where you can input parameters.


**Command Prompts** 

None.

## **Basic Procedure**

	Screen Activity	Comments
Step 1	Select Along Path from Transform menu.	
Step 2	Select options from the dialog for Method, Orientation and Move Instances.	
Step 3	Pick OK to complete the Polar Array command.	

Dialog Box: Polar array selected objects

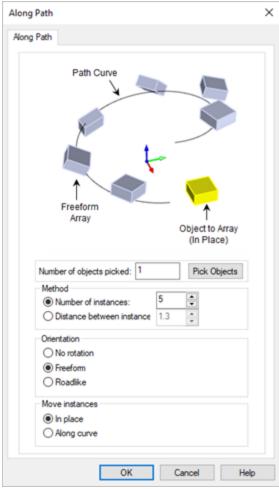

Trabsform Along Path

## Number of objects picked


The number of objects to be transformed along the path curve. If more items need to be scaled, use the Pick Objects button.

#### Method

This option allows you to specify the distance between the copied objects. You either specify the number of instances or specify the number of objects.

## Orientation

This specifies how the object instances should be oriented. The illustrations below show the different options. There can be No Rotation where the objects are fixed in place. There can also be a Freeform or a Road like orientation. Again the illustrations below provides some guidance on how the transformation will apply.

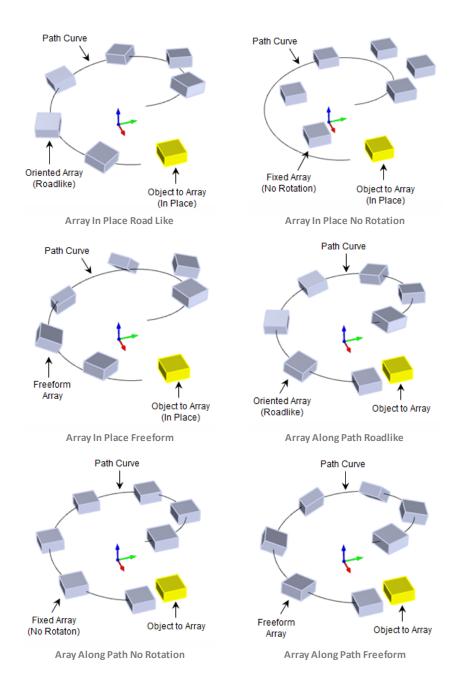


# Move Instances

This specifies how the objects are moved. Select either In Place or Along Curve. Refer to the illustrations above for guidance.

## Related Topics

**Transform Ribbon Bar** 

## 5.10.15 Graphical Manipulator

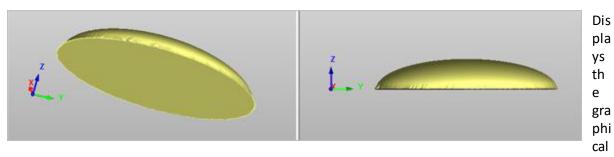

manipulator widget on selected object(s) facilitating move, scale, and rotate transformations around the graphical manipulator origin. This can be toggled on and off by selecting Manipulator on the Status bar.






# About the Graphical Manipulator

Graphical Manipulator can be used for graphical transform of objects by selecting the icon on the Status Toolbar. This feature can be used to move or rotate objects. The orientation of the graphical manipulator is in the same orientation as the World Coordinate System (WCS).

The arrows displayed on the graphical manipulator can be selected and a numerical value placed to move the geometry in either X, Y or Z direction. Or the arrows can be selected and simply dragged in either the X, Y or Z direction.

To rotate the geometry, use the arcs on display of the graphical manipulator. The arcs displayed on the graphical manipulator can be selected and a numerical value placed to rotate the geometry in either X, Y or Z direction. Or the arcs can be selected and simply rotated by dragging with the left hold of mouse.

Graphical Manipulator can also be enabled by selecting Transform on the Menu bar and then selecting Manipulator.

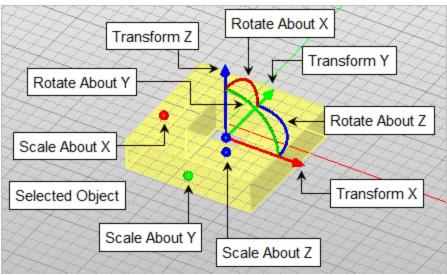

**Graphical Manipulator** 


## **Command Prompts**

Manipulator:: Move/Rotate object(s). Enter when done. Esc/RButton to exit.


## Basic Procedure


	Screen Activity	Comments
Step 1	Select an object to manipulate.	
Step 2	Select Manipulator from <u>Transform</u> menu or from the <u>Status Toolbar</u> . to display the manipulator widget.	
Step 3	Left-click on one of the manipulator widgets. There are three for each axis. They are Scale, Transform and Rotate. Refer to the illustration above.	
Step 4	Enter a value in the pop-up window and press ENTER. Alternately you can drag the widget to dynamically transform the object.	
	Left click on the origin of the Manipulator to display additional options. See below.	Optional


## **Examples**

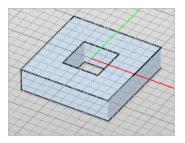


**Original Geometry** 

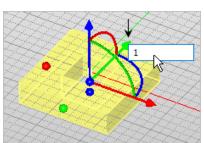


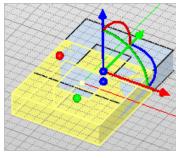


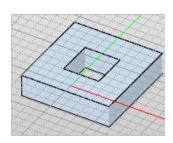


Move 1" along the positive Y Axis

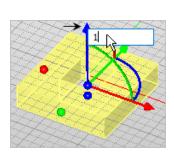


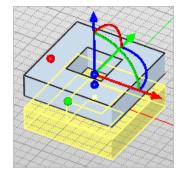


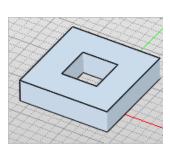


Move 1" along the positive Z Axis

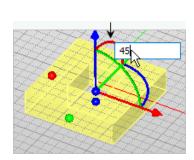


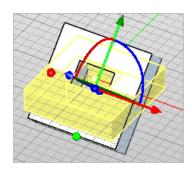


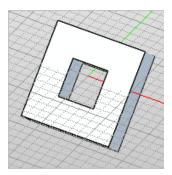


Rotate 45 degrees about the positive X Axis

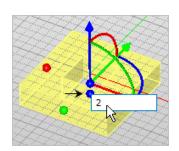


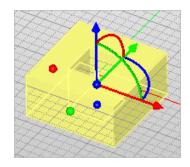

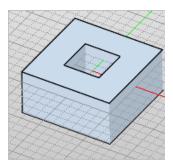


Scale by 2 about the positive Z Axis

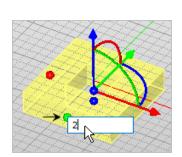

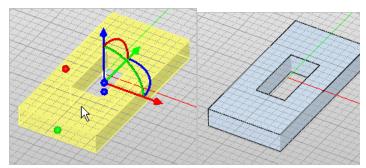

Scale by 2 about the positive Y Axis

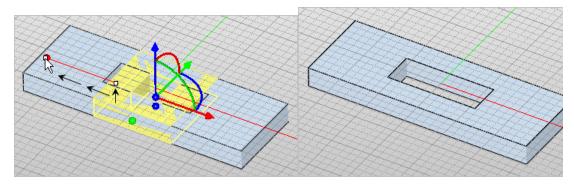


Scale by Dragging equal distance about the X Axis

## Graphical Manipulator options

Graphical Manipulator options can be invoked by left clicking on the origin of the manipulator.


This allows for the selection of additional manipulator options such as Set to World CSYS, Set to CPlane CSYS, Smooth Dragging, Snappy Dragging and Set Drag Strength<100.000%>

The below example shows the options after left click of mouse on origin of the manipulator.

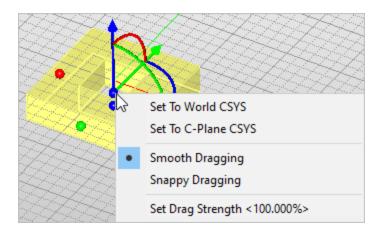


### Set to World CSYS

**Set to World CSYS** - In the below example, the Graphical Manipulator is set to the World Coordinate System (WCS).

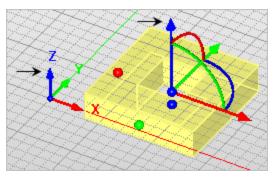

# Set to C-Plane CSYS


This sets the Graphical Manipulator to the Construction Plane Coordinate System In the below example, the C-Plane is set to 45 degrees on the X axis coordinate and the manipulator is also set to that CPlane.

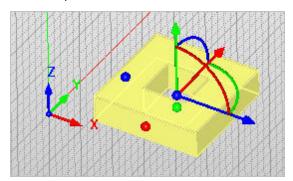

## Smooth Dragging

This allows the Graphical Manipulator to glide freely when being manipulated.


In the below example, please note that the geometry is gliding freely in between cells.

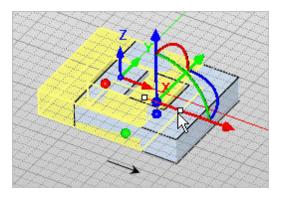

# Snappy Dragging

This allows the Graphical Manipulator to move in increments by snapping from cell to cell for each move.


In the below example, please note that the geometry is snapping directly on to the cells

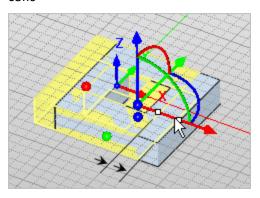

# Set Drag Strength<100.000%>

This value by default is set to 100%. This sets the percentage of the speed by which the Graphical Manipulator moves when being dragged or rotated. The lower the value, the slower the speed.

In the below example the drag strength is set at 100%.

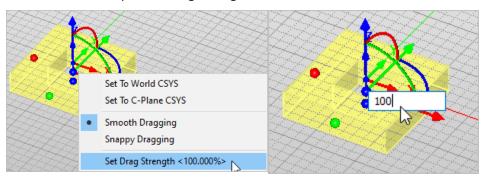


## Related Topics

**Transform Ribbon Bar** 

### 5.11 Print Preview

The Print Preview Ribbon Bar contains Print, Zoom, and Preview panes and associated functions. This Ribbon Bar is only displayed when the <u>Print Preview</u> command is executed.

# The Print Preview Ribbon Bar

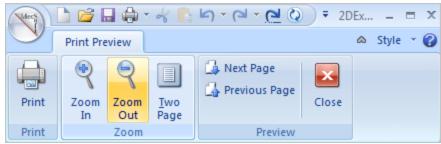

Print Preview Ribbon Bar

# Related Topics

The Ribbon Bar


VisualCAD Menu

Print ...

Print Preview ...

Print Setup ...

## Status Toolbar

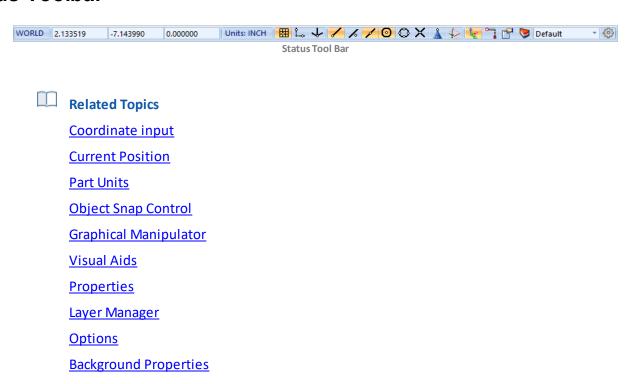

## 6.1 Coordinate input

Coordinate input for geometry creation can be set to World coordinates or Construction Plane (C-Plane coordinates). To toggle between WORLD and C-PLANE, click WORLD on status bar.

WORLD World Coordinates


C-PLANE Construction Plane Coordinates

Construction Plane coordinates

Construction Plane coordinates can be used for inputting coordinates for geometry creation. This comes in handy when the C-plane is transformed from the WCS orientation. User can toggle between C-PLANE and WORLD coordinates by selecting C-PLANE or WORLD icon located on the Status bar.

**Example: Construction Plane coordinates** 

Example above shows the construction plane transformed from the World origin.

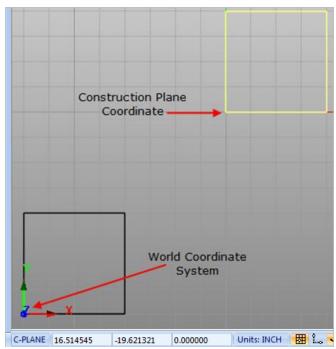

**Example: Construction Plane coordinates** 


# Basic Procedure

To input coordinates in C-Plane, activate the C-Plane from the status bar by toggling this from WORLD to C-Plane.

Under the <u>Curve</u> pane of the <u>Curve Modeling Ribbon Bar</u>, select the <u>Rectangle</u> icon.

- Step 1 Rectangle :: Pick first corner point or enter coordinates x,y and z
- Step 2 Rectangle :: Pick second corner point or enter coordinates x,y and z



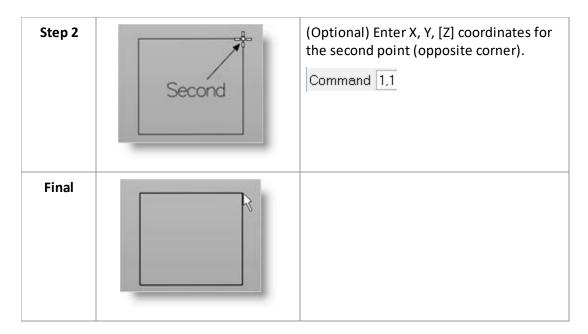

Related Topics
Status Tool Bar

## 6.2 Current Position

Displays information on current settings. It also has controls for the picking of points.


Current Position (X, Y, Z)

Displays the coordinates of the current cursor position in the view. The cursor is projected down into the current view's construction plane.

Related Topics
Status Tool Bar

## 6.3 Part Units

Units: INCH Displays the current model units. If it is picked, it will attempt to change units from inches to millimeters or from millimeter to inches. If objects are already in the model, a dialog will verify if you really want to change units. The objects keep the same size but their measured dimensions change.

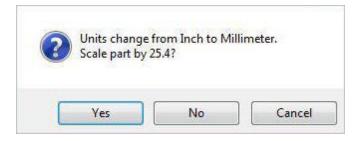

Related Topics
Status Tool Bar

## 6.4 Object Snap Control

The Object Snap controls are located on the <u>Status Tool Bar</u>. They allow you to select objects by their snap locations. The available <u>Object Snaps</u> are listed in the <u>Related Topics</u> section below.



Related Topics

**Status Tool Bar** 

**Grid Snap** 

Ortho Snap

**Origin Point Snap** 

**End Point Snap** 

**Near Point Snap** 

Mid Point Snap

**Center Point Snap** 

**Quad Point Snap** 

**Intersection Point Snap** 

Vertex Point Snap

Project C-Plane Snap

### 6.4.1 Grid Snap

Points picked near construction plane grid intersection will be snapped to that grid point. This can be toggled on and off by selecting Grid Snap on the Status bar.





On Off

Related Topics

**Object Snap Control** 

### 6.4.2 Ortho Snap

Switches on and off the display of the construction plane in the currently selected view. The default is to show the construction plane (grid). This can be toggled on and off by selecting Ortho Snap on the Status bar.





Related Topics

**Object Snap Control** 

### 6.4.3 Origin Point Snap

Points picked near the origin will be snapped to the origin. This can be toggled on and off by selecting Origin Snap on the Status bar.





Related Topics

**Object Snap Control** 

## 6.4.4 End Point Snap

Points picked near the end points of objects will be snapped to that end point. This can be toggled on and off by selecting End Point Snap on the Status bar.





Related Topics

**Object Snap Control** 

### 6.4.5 Near Point Snap

Points picked near objects will be snapped to the nearest point. The nearest point is the closest point on the object to the cursor. This can be toggled on and off by selecting Near Point Snap on the Status bar.





Related Topicscs
Object Snap Control

## 6.4.6 Mid Point Snap

Points picked near the midpoints of a curve will be snapped to that point. This can be toggled on and off by selecting Mid Point Snap on the Status bar.





Related Topicsics
Object Snap Control

## 6.4.7 Center Point Snap

Points picked near the center point of a circle, arc, or closed polygon will be snapped to that point. This can be toggled on and off by selecting Center Point Snap on the Status bar.





Related Topics
Object Snap Control

### 6.4.8 Quad Point Snap

Points picked near the quadrant points of circles and arc will be snapped to that point. Quadrant points are the points on the circle at 0, 90, 180, and 270 degrees. This can be toggled on and off by selecting Quad Point Snap on the Status bar.







**Object Snap Control** 

## 6.4.9 Intersection Point Snap

Points picked near the intersection of curves will be snapped to that point. This can be toggled on and off by selecting Intersection Point Snap on the Status bar.





Related Topics

**Object Snap Control** 

### 6.4.10 Vertex Point Snap

Points picked near the vertex of a mesh will be snapped to that point.





Related Topics

**Object Snap Control** 

## 6.4.11 Project to C-Plane Snap

All selected points will be projected to the construction plane.






Related Topics

**Object Snap Control** 

## 6.5 Visual Aids


This provides tools for the construction of geometry.

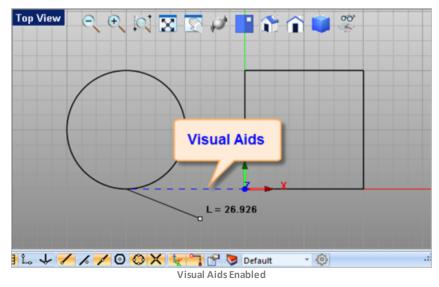

This can be toggled on and off by selecting Visual Aids on the Status bar.



This feature can serve as a construction aid or a tool for referencing geometry. With Visual Aids enabled, it will allow viewing of construction lines as it references geometry. This allows for easier visual placement of new geometry. Curve creation using Visual Aids can be enabled by selecting the Visual Aids icon on the Status Toolbar.

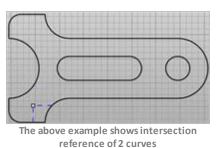


The above example shows tangent reference to 2 circles

Related Topics
Status Tool Bar

## 6.6 Properties ...

Information about a selected object will be displayed. This includes the name, layer that it's on, the item's color, number of selected objects, object type, and attributes related to the selected object. These properties can be modified.

# Object Properties Dialog

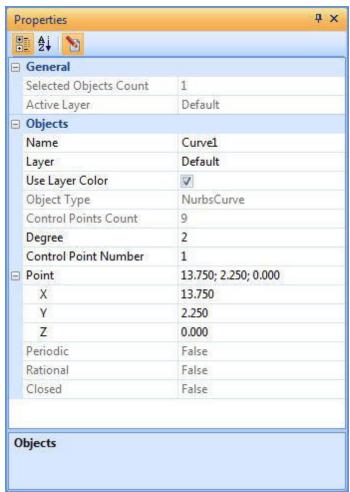

**Object Properties Dialog** 

The dialog shows the object name, layer that it's on, the item's color, object type, and attributes related to the selected object. It also shows the number of selected objects and the name of active layer.

The object name is automatically generated when the object was created but can be changed. Points, lines, arcs, circles, curves default to the geometry-type name (i.e.

points, lines, ...) with a number at the end. The number has no significance; it is just an internally generated number. Surface and poly-surfaces are named as Shells and polygonal meshes as Mesh.

The layer that the object is on is displayed.

The color of the object defaults to the construction color of the layer; however, it can be changed. Uncheck the "Use Layer Color" box and click the color bar underneath it. A color-picking dialog will appear. This color change only applies to that object.

This selects which of the existing layers to make the active layer. If that layer was not visible before being selected, it and all of the objects on that layer become visible. Any objects created after that will be the default color for that layer.



The information displayed in the properties dialog can be grouped or listed in alphabetical order.

When 2 or more objects are selected, the property manager displays the selected object count and the active layer information.

Selecting Edit mode allows editing of curve geometry.




#### 6.6.1 Edit Mode

Edit Mode can be enabled by clicking on the Edit Mode icon in the Properties dialog and can be toggled on and off by clicking it. With Edit Mode active, the points are visible in the viewport and coordinates displayed in the properties dialog. They are grayed out in the Properties tab if Edit Mode is not active.


You can use the Properties dialog to parametrically edit certain types of geometry such as the radius of a circle or the length and width of a rectangle. This allows you to quickly change geometry dimension values!


The Properties tab can be located in the Status Toolbar. The X, Y, and Z coordinates of the geometry can be modified by changing the Point values within the Properties tab under Objects or graphically by dragging them in the viewport. You can cycle through all the edit points and modify the X, Y and Z coordinates for each point by using the spinner increment. Cycling through these points highlights the points on the geometry in the viewport.



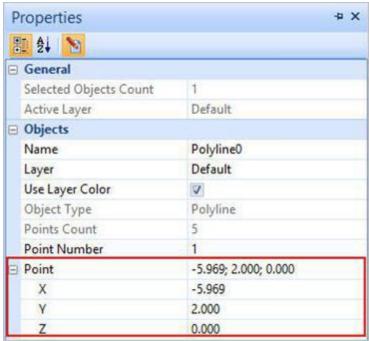


Properties tab

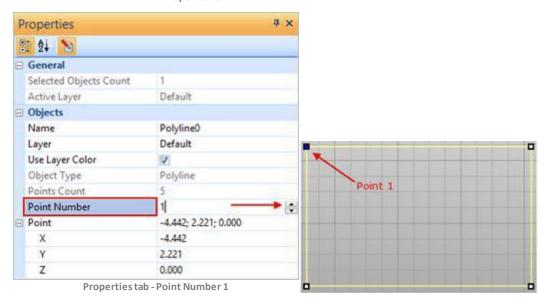


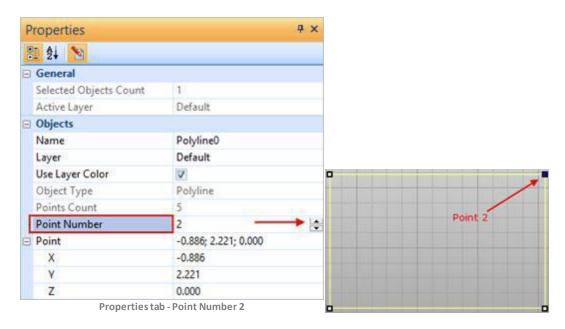

# Basic Procedure

Edit points can also be modified by picking the corner points graphically in the viewport with drag and drop.

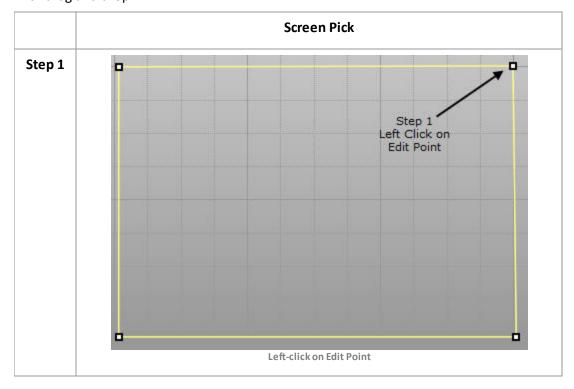


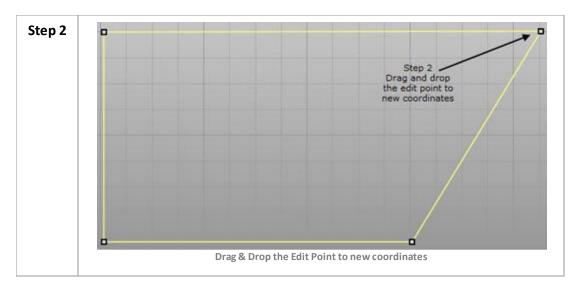


# Edit Geometry Parametrically

You can parametrically edit the dimensions of geometry using the Properties dialog.

Just select the Edit icon until the dimension values are activated. When you edit a dimension vales and close the Properties dialog the geometry to update automatically.

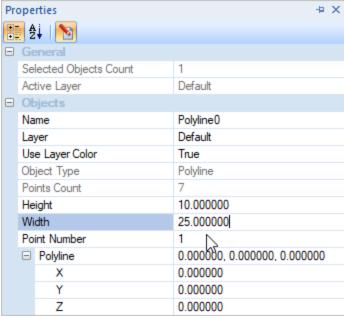

Edit the Length & Width of a Rectangle

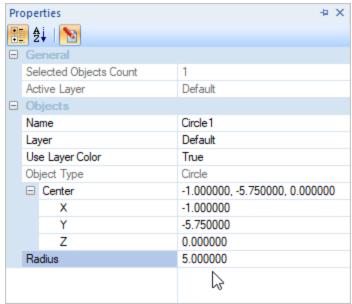


Edit the Radius of a Circle


# **Editing Line Widths**

You can edit the width of a line or curve using the Properties dialog.

Just select the Edit icon until the object properties are activated. Then set the Use Layer Thickness to False. This will activate the Thickness field. Drop down the Thickness menu and select a line width. When you edit a dimension vales and close the Properties dialog the geometry to update automatically.

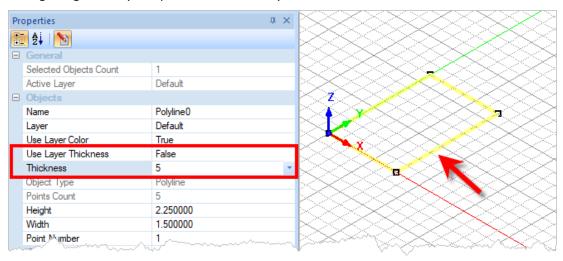

Edit the Width of a line or curve

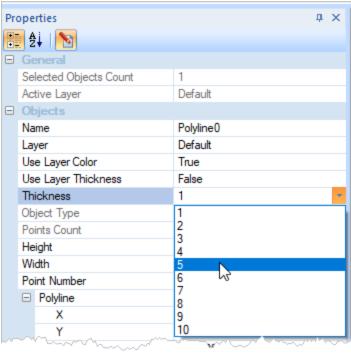


Line Width Property Selector

Related Topics

**Properties** 

## 6.7 Layer Manager

This button calls up a dialog to manage the layers.

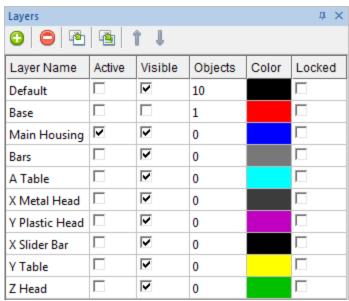

Layer Manager

Each layer has a name and color associated with it. There can be 0 or more geometric objects on any layer. A layer and all the geometry on it can be made invisible if you uncheck the **Visible** checkbox. The layer can be turned back on by rechecking the box. All layers are visible by default.

Related Topics

**Status Tool Bar** 

**Layer Visibility** 

**Lock Layer** 

**New Layer** 


**Delete Layer** 

**Duplicate Layer** 

**Duplicate Layer and Objects** 

### 6.7.1 Layer Visibility

Visibility of layers is useful in the construction of complicated models. Create multiple different layers, one for each subsection of the model. Then turn off all but the layer for the subsection currently being modified. This makes very complicated models much easier to see and work with. Otherwise, it can be difficult to see whatever was just created or picking particular items in the middle of lots of other objects from different subsections.

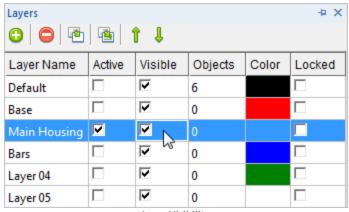

Layer Visibility

The visibility of the other layers can be periodically turned on and off to check the positioning of the current subsection with regards to the rest of the model. Visibility of active layer cannot be turned off.

Only one layer at a time is active. Any new objects created will be created on this layer and with the default layer color. Selecting objects by layer will select only the objects on the current layer.

You can change the active layer through this dialog or through the Status Toolbar drop-down list.




The current number of objects on each layer is also displayed.

Related Topics
Layer Manager

### 6.7.2 Lock Layer

Locks a layer when the Locked check box is selected.

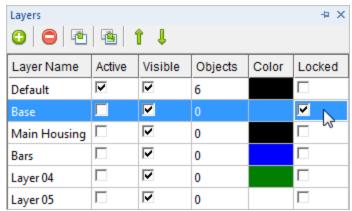

Lock Layer

Locking a layer does not allow selection, editing and snapping to objects. This would be useful where you would like to have the geometries visible but locked for selection and editing. The layer that is active cannot be locked.



## 6.7.3 New Layer

Creates a new layer. The default name is New Layer, but the name can be changed.

Related Topics
Layer Manager

### 6.7.4 Delete Layer



Deletes the selected layer.

Related Topicspics

**Layer Manager** 

## 6.7.5 Duplicate Layer



Copies the layer selected with its attributes.

Re

**Related Topics** 

**Layer Manager** 

## 6.7.6 Duplicate Layer and Objects




Copies the layer selected with its attributes and all of the objects on the layer.

**Related Topics** 

**Layer Manager** 

## 6.7.7 Reorder Layers

From the <u>Layer Manager</u>, select these icons to Reorder Layers within the Layer Manager list. First select a layer and then pick the Move Layer Up or Move Layer Down icon from the Layer Manager toolbar.

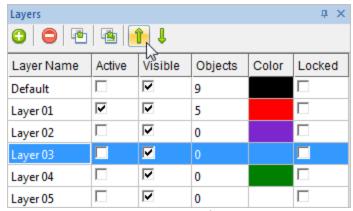

Layer Manager - Reorder Layer

## 6.8 Background Properties

Performing a Right mouse click in any of the view ports when no geometries are selected and selecting Properties from the menu display the Background Properties dialog.



**Background Properties** 

## Screen Background Color

Allows user to set the viewport background color. This is the color displayed when no objects are at that position.

## Screen Gradient

This is a smooth change of lighting. The direction specified is the lighter side. It starts slightly darker on the opposite side of the screen and gradually gets lighter until it reaches the specified side.

Related Topics
Layer Manager

## **Exercises**

## 7.1 #1: VisualCAD Preferences

In this exercise you will learn about many of the most commonly used system options in VisualCAD including how to access the online help, set display options, tolerances and units, system options, viewports and other VisualCAD display functionality.

# What you will learn:


In this exercise you will perform the following VisualCAD tasks:

- 1. Access the online help.
- 2. Set the Display Style.
- 3. Set the Units to Inches.
- 4. Set System Options.
- 5. <u>Set to Quad Viewports.</u>
- 6. <u>Viewing the Command Prompts.</u>
- 7. The Status Bar.

## 7.1.1 Accessing the Online Help

# Accessing the Online Help


At any time you can display the VisualCAD Online Help by selecting this icon or pressing the <F1> key during any command prompt or by selecting the Help icon shown below.

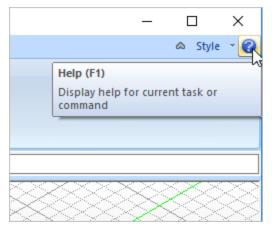

## 7.1.2 Set the Display Style

Set the Display Style


VisualCAD allows you to change the Style of the display. At the very top right of the VisualCAD display window, select the Style drop-down menu and select Office 2007 (Blue Style).

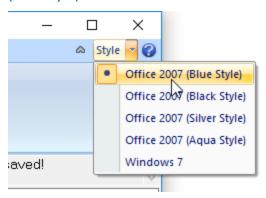

#### 7.1.3 Set the Units to Inches

## Set the Units to Inches

Open VisualCAD and check to see if the part unit is set to Inch.

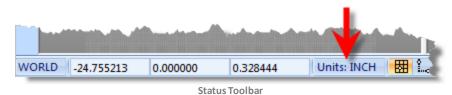


If Units is set to MM, double-click on it to change to INCH.

## 7.1.4 Set Systems Options

## Set Systems Options


In this exercise you will learn how to set some of the systems options in VisualCAD.

- 1. Select the Home tab.
- 2. Now select the Options icon to display the Options dialog. This icon is also located on the Status Bar.
- 3. Select Tolerance and Units from the left side of the dialog.
- 4. Under Part Faceting Tolerance set the Chordal Deviation / Chord Height Tolerance to 0.001".
- 5. Set the Units to Inches.

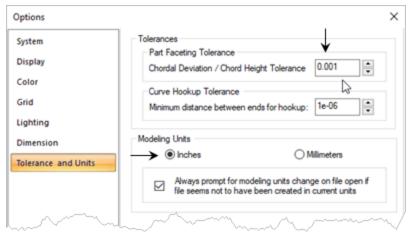


**System Options Dialog** 


6. Select System from the left side of the dialog.

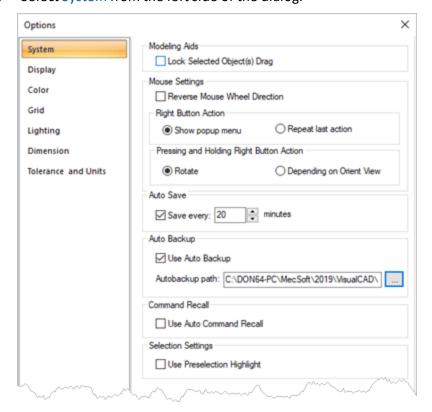


- 7. Under Auto Save, check the box and then set the value to save every 10 minutes.
- 8. Check the box to use Auto Backup and then select the ... box to display the Browse for Folder dialog.
- 9. Select the folder where you want backup files to be saved and then pick OK.

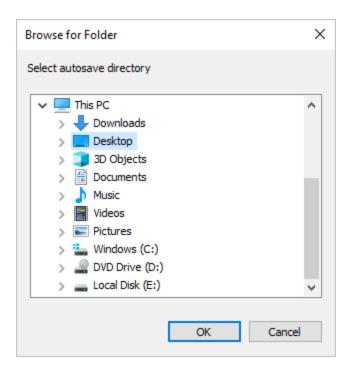

- 10. Set the remaining System Options as shown in the dialog above.
- 11. Now select Display from the left side of the dialog.
- 12. Under View Change Animation uncheck the box next to Speed.

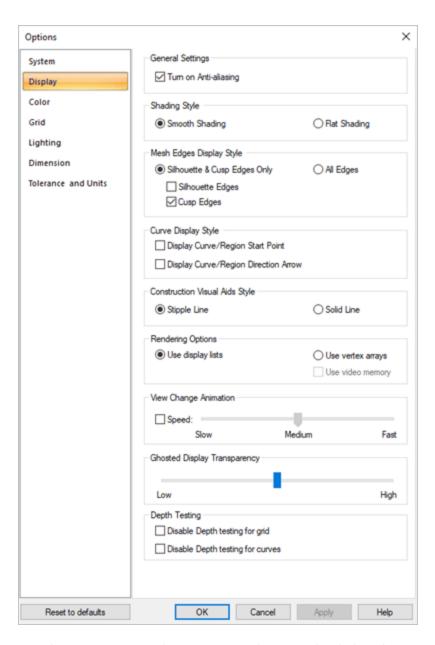


- 13. Set the remaining Display Options as shown in the dialog above.
- 14. Select Grid from the left side of the dialog. In these exercises we use the following Grid options.

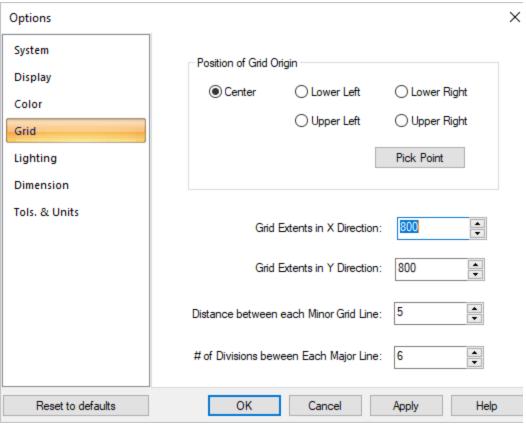

System Options Dialog

- 15. Select Dimension from the left side of the dialog.
- 16. Set the Dimension Preferences to those shown in the dialog below.
- 17. Pick OK to close the Options dialog.

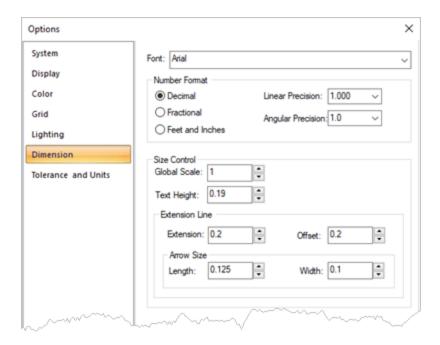


## 7.1.5 Set to Quad Viewports




It is much faster to draw and model in VisualCAD if you have multiple <u>Viewports</u> displayed.

Select the Home tab.

1. Right-click on the Viewport tab located in the upper left side of the window and select Quad Viewport.

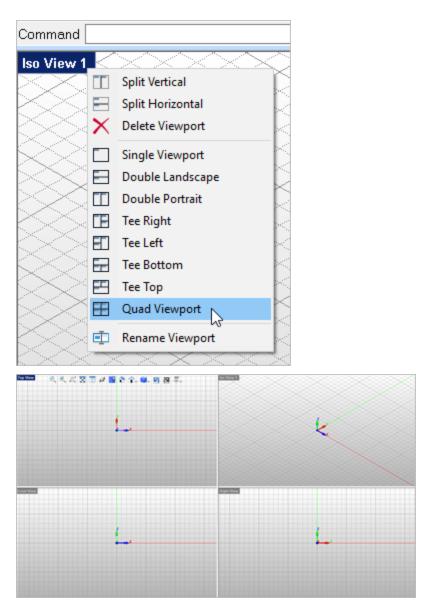

2. You can also select <u>Display</u> and Viewport commands from the Display tab of the VisualCAD Ribbon Bar.

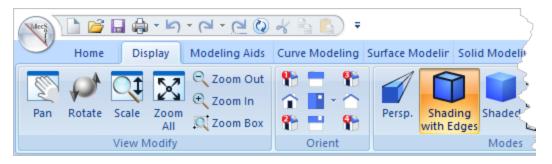


#### 7.1.6 The Quick Access Toolbar


## The Quick Access Toolbar

Located at the very top left of the VisualCAD window you will find the <u>Quick Access Toolbar</u>. It contains many of the most commonly used commands such as <u>Cut</u>, <u>Copy</u>, <u>Paste</u>, <u>Save</u>, <u>Undo</u>, <u>Redo</u>, etc. The cool thing is that you can customize this toolpath to add commands that YOU use regularly.

1. Pick the drop-down menu to the right of the Quick Access Toolbar.

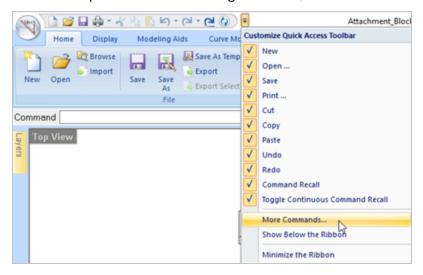

2. Select More Commands... from the menu to display the <u>Customize</u> dialog. You can use this dialog to add or remove commands to the <u>Quick Access Toolbar</u>.

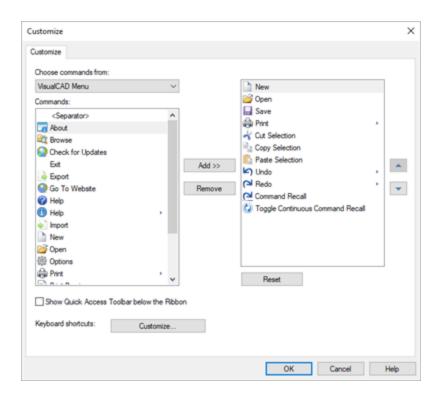


## 7.1.7 Viewing the Command Prompts

Viewing the Command Prompts

The Command Input bar Command is located just below the ribbon bar. You can drag the bar down to see the current and previous command prompts. This is helpful while learning how to use VisualCAD.

- Move the cursor onto the bottom of the Command Input bar Command until it changes.
- 2. Then left-click and drag the Command Input bar Command down to reveal to review the history of commands.

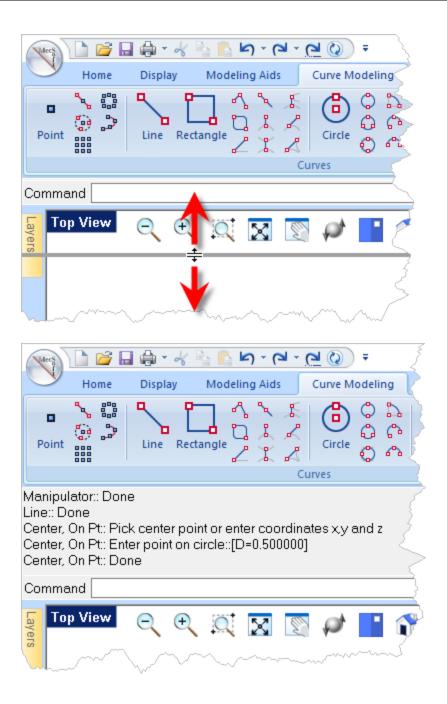

#### 7.1.8 The Status Bar

## The Status Bar


Located across the very bottom of the VisualCAD display you will find the <u>Status Bar</u>. It contains information and quick access to some very helpful commands. From left to right on the Status Bar you will find This is where you access the Layer Manager, Properties dialogs, <u>Graphic Manipulator</u> and more. Here is the list:



- World Coordinates tracker.
- 2. Units.
- 3. Grid, Ortho and Object Snaps.
- 4. Graphic Manipulator.
- 5. Construction Visual Aids.
- 6. Properties Manager.
- 7. Layer Manager.
- 8. Active Layer Selector.
- System Options.

#### 7.2 #2: 2D Drawing & Dimensioning

In this exercise you will learn about the Layer Manager and how to create and work with layers. You will also learn how to draw quickly in VisualCAD using the menus and command line shortcuts. You will also learn how to take advantage of the Visual Aids feature to speed up your drawing creating tasks including lines, arcs curves, fillets, chamfers, trimming, dimensioning and more.

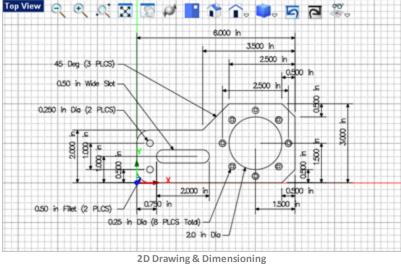

# What you will learn:

In this exercise you will perform the following VisualCAD tasks:

1. Create Layers.


- 2. Curve Drawing.
- 3. Using Visual Aids.
- 4. <u>Dimensioning</u>.

### 7.2.1 Create Layers


## Create new Layers

In this step you will use the <u>Layer Manager</u> to create some new layers and then set the active layer.


- 1. Display the <u>Layer Manager</u>. You can pick the <u>Layer Manager</u> icon located on the Status Bar.
- 2. From the <u>Layer Manager</u> select the Add <u>Layer icon</u> to add a new layer.

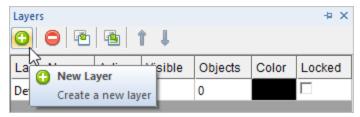

3. Now lets rename the new layer to Drawing. First double-left-click in the Name field to activate it, and enter Drawing as the new layer name.

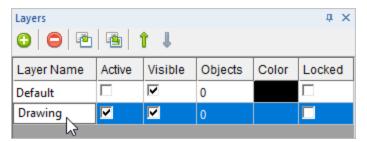


4. Repeat the procedure to create a new layer, this time named Dimensions.

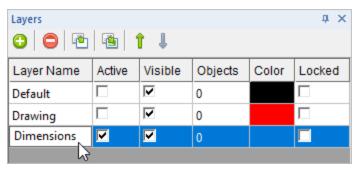


5. If the <u>Layer Manager</u> keeps Auto-Hiding to the left side of the display, you can select the Auto Hide pin icon at the top of the Layer Manager. to toggle this feature.

The pin down icon means that the dialog will stay displayed. The pin left icon means that the dialog will auto-hide.


6. Now let's change the color of these two layers. In the Color field left-click on the color box for the layer named Drawing. Again, this will display the Colors dialog.

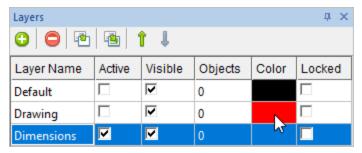


7. From the Colors dialog that displays, accept the default color black by pick OK to close the dialog.

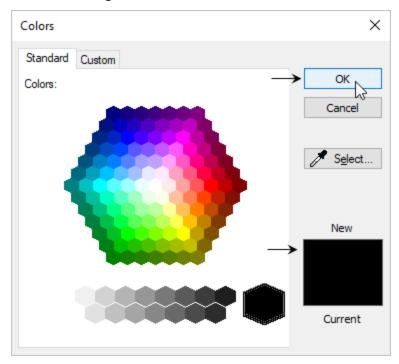

8. Repeat the procedure for the layer named Dimensions.

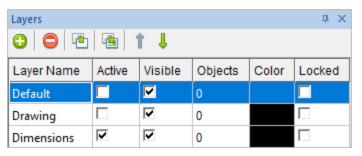

9. Now from the Active column, check the box to make the layer named Drawing as the Active Layer.

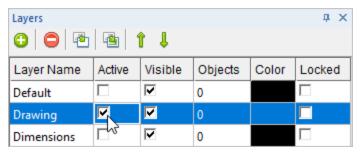

### 7.2.2 Curve Drawing



In this step you will learn how to use the keyboard to quickly drawing a polyline and then create some fillets and chamfers.


- 1. You only need the Top View displayed for this exercise so if you have multiple Viewports displayed, double-left-click on the Top View tab to change the display to that Viewport.
- 2. Alternately you can right-click on the Top View tab and select Single Viewport.
- 3. If you do not see the Top View tab on any of your Viewports, simply double-left-click on any viewport tab to set the display to that single Viewport and then select the Top View icon from the View Toolbar.



- 4. For visual purposes, we are displaying the construction Grid and the Grid options are set to those in the <u>Preferences Exercise</u>.
- 5. If the Grid is not displayed you can toggle it on by selecting Hide / Show Grid from the View Toolbar.



6. Scroll the middle mouse button to zoom in/out so that you see the World Origin WCS triad toward the bottom left of the screen. If you do not see the X (Red) and Y (Green) axes displayed, make sure you are in the Top View.

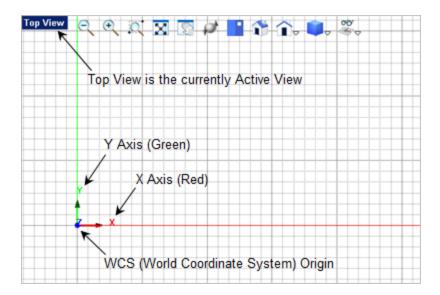


- 7. Now we can start curve drawing. From the Curve Modeling Curve Modeling tab, select the Polyline command.
- 8. The command prompt says:

  Polyline:: Pick point or enter coordinates x,y and z


  For the start point of the polyline, enter 0,0 in the command window

  Command and press <Enter>.

You will see the polyline is starting at the XY origin on the left.

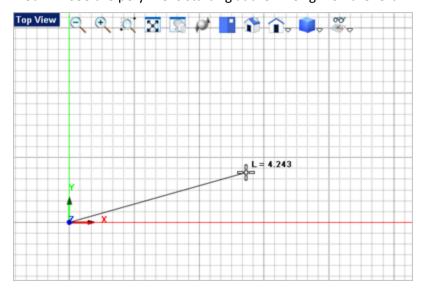

9. For the next point in the Polyline, enter 6,0 Command and press <Enter>. This is in Absolute World Coordinates, 6 units in X and 0 units in Y measured from the World Origin.

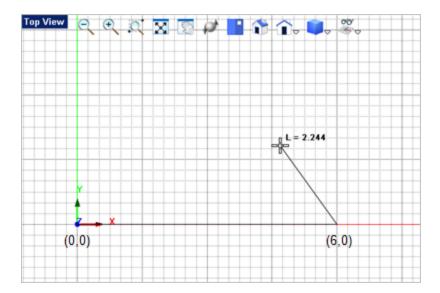

10. Now if you are drawing and you do not know the exact absolute coordinate values you can enter Relative Coordinate values in the command window.


For the next coordinate enter @0,3 in the command window and press <Enter>. This will place the next point in the polyline 3" from the last point in the positive Y Axis direction.

Listed below are the absolute and relative coordinate values for the entire polyline. Use them to complete the polyline, pressing <Enter> after each coordinate entered. If you make a mistake, just Undo and start again.

Polyline Absolute (Relative) coordinate values


- 0,0
- 6,0 (@6,0)
- 6,3 (@0,3)
- 3,3 (@-3,0)
- 3,2 (@0,-1)
- 0,2 (@-3,0)
- 0,0 (@0,-2)

Your polyline should like this:

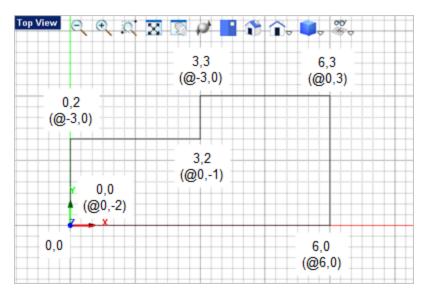


**Note:** In the future you can also specify a point at an angle and length from the previous point using the following format: @6<45 where the length of the line segment is 6 and the direction is 45 degrees from the previous point.

- 11. Always Save your work! Select the Save or Save As command from the Home tab or the VisualCAD Main Menu or press <Ctrl+S>.
- 12. Now let's add some fillets. From the Curve Modeling tab select the Fillet command.
- 13. For the fillet radius, enter 0.5 in the command window and press <Enter>.
- 14. For the two lines to fillet, select the lines marked in the illustration below. For filleting it is best to select the line on the end furthest from the end you want to fillet.

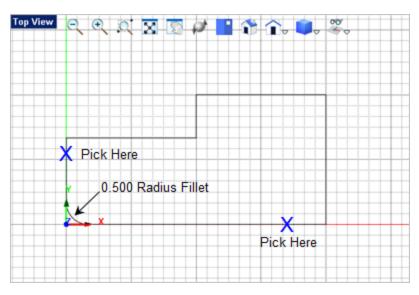




- 15. Press <Enter> to repeat the Fillet command.
- 16. The default fillet radius is now 0.5 so proceed directly to picking the two lines to fillet and press <Enter>.

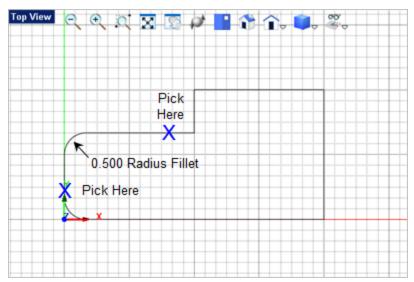


- 17. Next we will chamfer the three remaining outer corners. From the Curve Modeling tab select the Chamfer command.
- 18. For the chamfer length, enter 0.5 in the command window Command and press <Enter>.
- 19. For the lines to chamfer, select lines marked in the illustration below. For chamfers it is best to select the line on the end furthest from the end you want to chamfer.

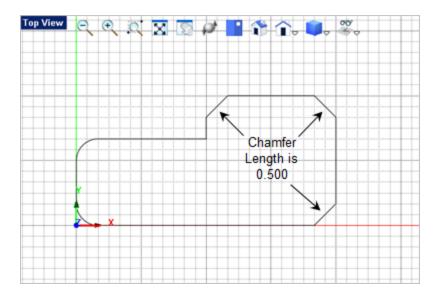

- 20. Currently our curves are still are one polyline. For this next step we need to explode the polyline. From the Curve Modeling Curve Modeling tab select the Explode curves command.
- 21. Select the polyline and the right-click the mouse or press <Enter>. The polyline is now individual curves.




- 22. Now from the Curve Modeling Curve Modeling tab select the Extend Curves command.
- 23. Select the change line marked below to extend it to the horizontal line.

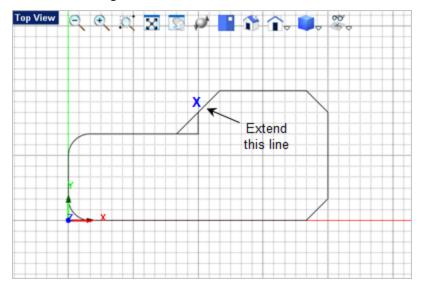




- 24. Now from the Curve Modeling Curve Modeling tab select the Trim Curves command.
- 25. Pick the line segment to trim. When using the Trim command, you do not need to select the trimming curve. Just select what curve you want trimmed.

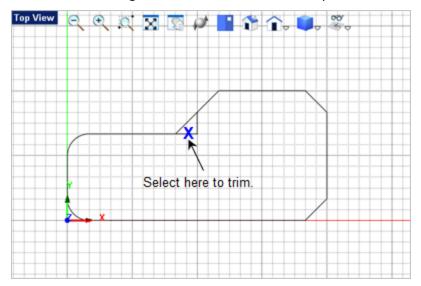

26. Next, delete the unneeded line. Just select it and then press the <Del> key or select the Cut <a href="Cut">Cut</a> command icon from the <a href="Quick Access Toolbar">Quick Access Toolbar</a>.

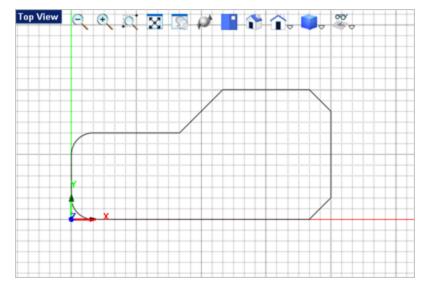

### 7.2.3 Using Visual Aids


Using Visual Aids

In this step you will learn how to draw with the use of the Visual Aids mode. With Visual Aids enabled, construction lines automatically appear as references geometry. This allows for easier visual placement of new geometry. Let's see how it works.

1. Curve creation using Visual Aids can be enabled by selecting the Visual Aids icon on the Status Toolbar.


While Visual Aids is toggled On, the currently active Object Snaps are referenced visually depending on where the cursor is located on the drawing.

- 2. For now, enable the Origin Point Snap , End Point Snap , Mid Point Snap , Center Point Snap and Quad Point Snap .
- 3. Also disable the Grid Snap . Your Status Bar should look like this:

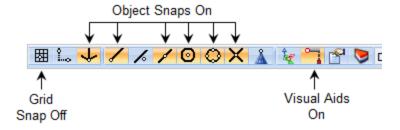





- 4. Now from the Curve Modeling Curve Modeling tab select the Circle on Point command.
- 5. For the circle center point move the cursor near geometry in your drawing. You will see Visual Aids appear (i.e., reference lines).

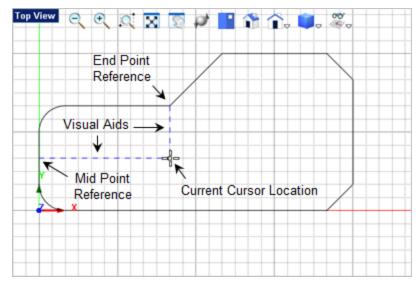

6. We want to locate the center of circle at the center of the fillet located in the upper left corner of the drawing. Move the cursor to this area and you will see two Visual Aids appear when the end points of the fillet are recognized.

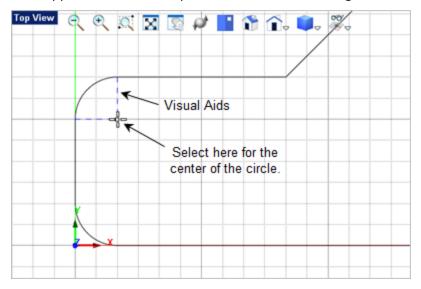

- 7. For the circle diameter enter 0.25 Command and press <Enter>.
- 8. Press <Enter> to repeat the command and draw a circle at the center of the lower left fillet.

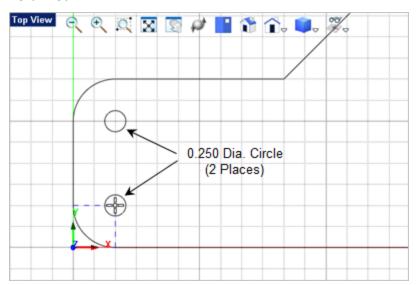

### 7.2.4 More Drawing Tools


More Drawing Tools

In this step you will learn a few additional curve creation and curve editing commands.

1. Lets draw another circle. From the Curve Modeling Curve Modeling tab select the



- 2. For the center point of the circle use the Visual Aids to locate and select the Mid Point intersection of the upper and right side lines.
- For the circle diameter enter 2.0 in the command window Command and press <Enter>.

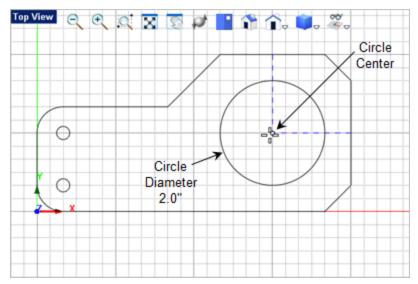


4. Next we will draw a polar array of points around the circle we just drew.

Why am I drawing Points? Because when machining Hole Making operations in CAM such as Drill, Tap, Bore, etc., you can select points as Control Geometry! The hole geometry DOES NOT have to be present in the 2D drawing or 3D model in order to drill at that location.

- 5. From the Curve Modeling tab select the Polar Grid of Points command.
- 6. For the total number of points on the circumference, enter 8.
- 7. For the angle of the first row about the X Axis enter 0.
- 8. Pick the center point for the polar grid or enter the coordinate values. We want the points centered around the 2" circle we just drew, so set you Object Snap to Center Point and move the cursor over the circle until the center point is highlighted and the select it.


9. For the polar grid radius, enter 1.250 and then press < Enter>. The polar grid of points will be created around the circle as shown below.

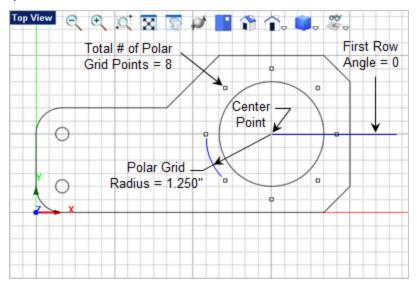

10. For this exercise we will also add the polar array of circles. From the Curve




- 11. For the center point, make sure the End Point Snap is on and then select the end point at the 12 o-clock position.
- 12. For the circle radius enter 0.25 and then press <Enter>.

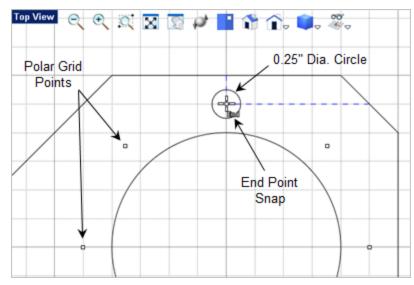

13. Now we will duplicate the circle by creating a polar array. First select the circle you just created.


14. Then from the Modify / Transform tab.

15. Select the Polar Array Polar Array command. The Polar array selected objects dialog will display.

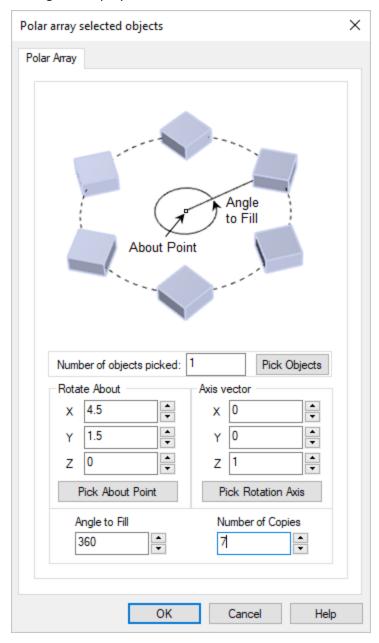


- 16. The Number of Objects field should be 1. This represents the circle that you have selected.
- 17. Under the Axis Vector, the values should be X0, Y0, Z1.


- 18. Under the Rotate About section, select the Pick About Point button. The dialog will minimize and wait for you to select a point.
- 19. From the <u>Status Bar</u> activate the Center Point Object Snap .
- 20. Now move the cursor over the 2" diameter circle until the center point is displayed and then selected it.

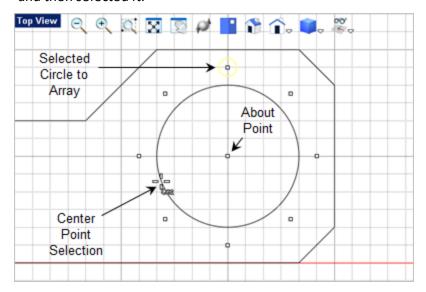

- 21. The dialog will re-appear with the XYZ coordinated entered for the Rotate About section. The value should be X4.5, Y1.5 and Z0.
- 22. For the Number of Copies field enter 7.
- 23. The Angle to Fill field should be 360.
- 24. Now pick OK to close the dialog and the array should be drawn and selected.
- 25. Press <Enter> to accept the array and your drawing should look like the illustration below. If not, select the Undo command and go back and repeat the previous steps.

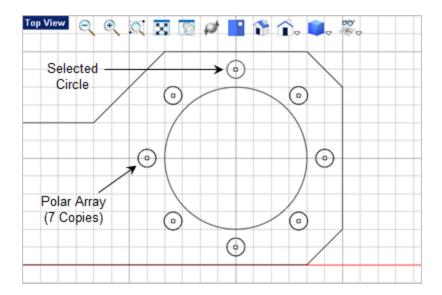


- 26. Now we will drawing a slot. From the Curve <u>Curve Modeling</u> tab select the <u>Arc Center, Start, Angle</u> command.
- 27. In the <u>Status Bar</u> make sure the <u>Grid Snap</u> is On ...
- 28. For the center point select the grid point shown below or enter 1,1 in the command window and press <Enter>.
- 29. Following the command prompts. It says to select the start point of the arc. Locate and select the start point shown below or enter 1,0.75 in the command window and press <Enter>.

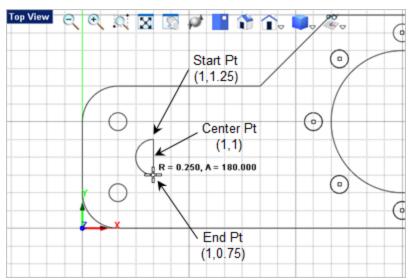

30. For the arc end point move the cursor counter-clockwise and pick the end point shown or enter 1,0.75 in the command window Command and press <Enter>.


31. Now we want to draw another arc, press <Enter> to repeat the command and select or enter the center, start and end points shown below.

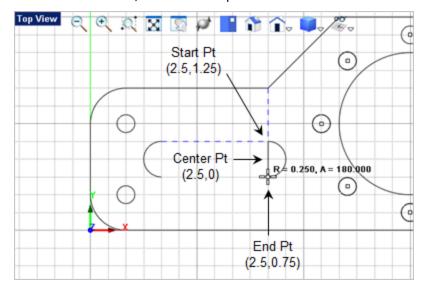

32. Now we want to draw a line to connect the two arcs across the top. From the Curve

Modeling tab Curve Modeling select the Line command

- 33. For the start point for the line, set the <u>Object Snap</u> to <u>End Point</u> from the <u>Status</u> <u>Bar</u> and select the start and end of the top line of the slot.
- 34. Press <Enter> to repeat the Line command and select the start and end of the bottom line of the slot. Your drawing should look like this:

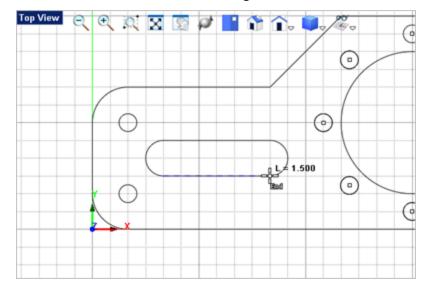


### 7.2.5 Dimensioning


### **Dimensioning**

In this step you will learn how to place dimensions on the drawing.


- Start by using the middle mouse wheel to zoom out to leave yourself plenty of room to place your dimensions. If your mouse does not have a middle wheel, select the Zoom Out icon from the View Toolbar. You can also use the Pan icon to pan the drawing within the display window.
- 2. Now change the active layer. From the Status Toolbar select the Layer Manager icon.
- 3. From the Layer Manager go to the Active column and check the box next to Dimensions to make it the Active Layer.

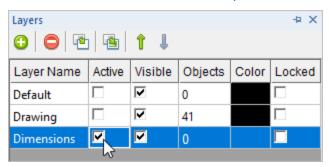


- 4. From the Dimension tab, select the Vertical Dimension command.
- 5. Activate the Object Snaps required (End , Center and Grid )
- 6. Select the first and second points that you wish to dimension.
- 7. Then select a point to locate the dimension. refer to the illustration below:

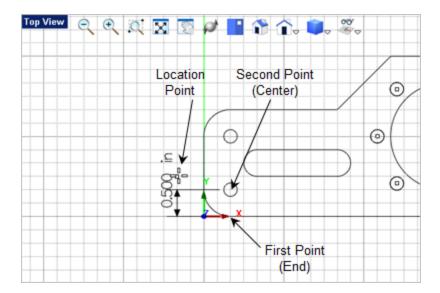


- 8. Press <Enter> to repeat the command.
- 9. Select the first, second and location point for the dimension as shown below:

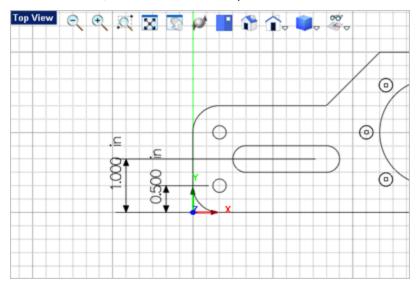

10. Repeat the command to create three additional vertical dimensions on the left as illustrated below:

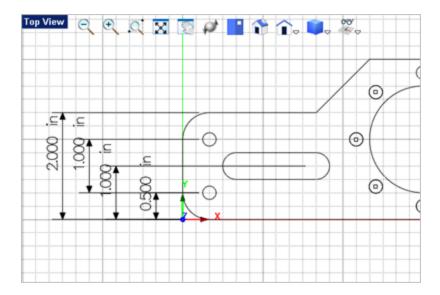

11. Repeat the command to create three additional vertical dimensions on the right as illustrated below:

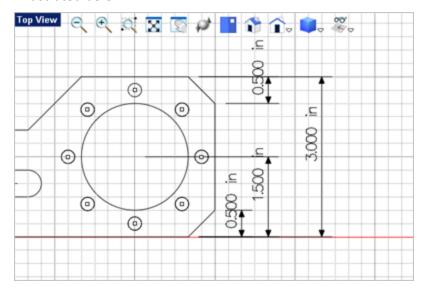

12. Now we will create the horizontal dimensions. From the Dimension


Dimensions




tab select the Horizontal Dimension

command.

13. Select the first second and location points to create the lower horizontal dimensions shown below:

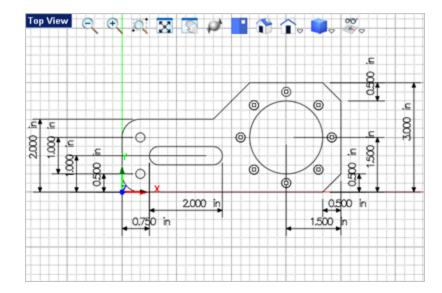

14. Repeat the command to create the upper horizontal dimensions shown below:

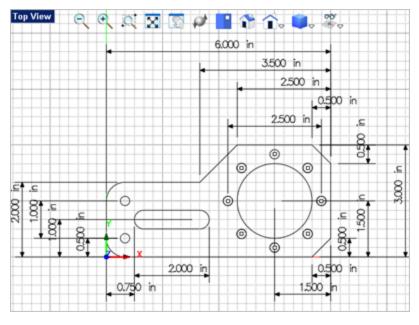


15. Now we will create some leader lines. From the Dimension tab select




- 16. The first command prompts says: "Enter the text string." We will add the annotation separately so you can press <Enter> to continue.
- 17. The next prompt says: "Pick point or enter coordinates x,y, and z" Change the Object Snap to Near and select a point on the lower fillet for the first point.


18. Then pick additional points to define the leader line and the press <Enter> or right-click to end the command. The points to pick are shown in the illustration below:

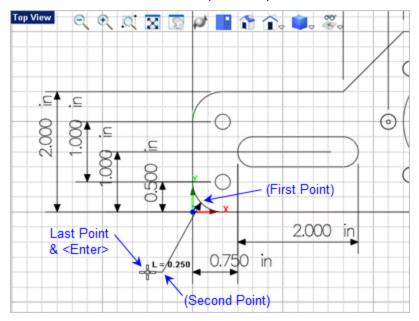


19. Now repeat the Leader Line command and add the leader lines shown below:

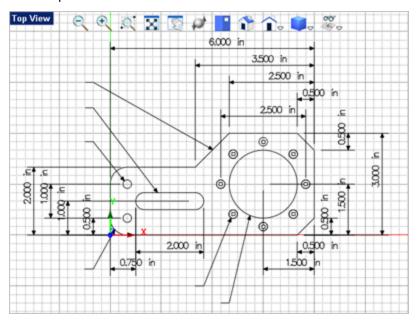


20. Now we will add the annotation text. From the Dimension tab select

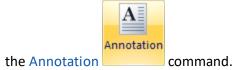


21. For the text string, at the command prompt Command enter 0.50 in Fillet (2 PLCS) and press <Enter>

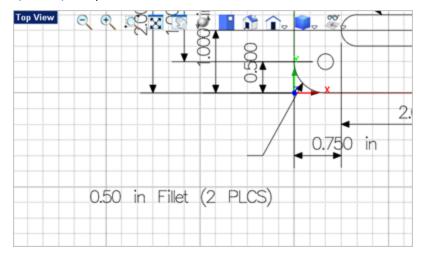

22. Now select the text you just created and left-click-hold to drag it into position to the left of the leader line as shown below. If you toggle the Grid Snap off you can position the text more precisely.

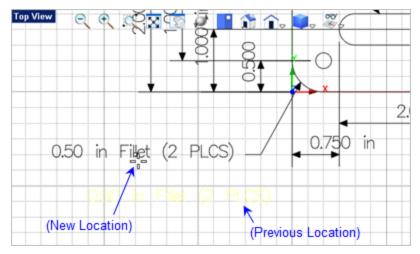


- 23. Repeat the Annotation command to create the additional leader text shown below:
- 24. Save the file as Drawing and Dimensioning Completed.vcp.

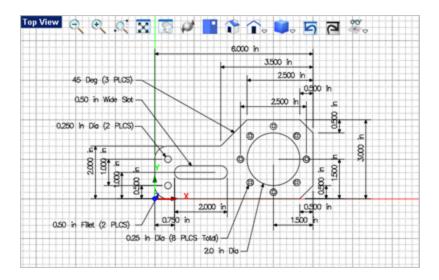

Congratulations you have completed this exercise!

### 7.3 #3: Model a Spanner Plate

In this exercise you will model the Spanner Plate shown below using Curve Modeling and Solid Modeling tools. The exercise includes the creation of Points, Lines, Fillets, Mirroring, Merging and Extruding curves.

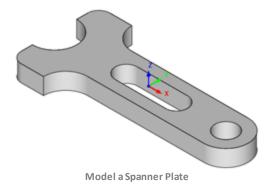

# What you will learn:

In this exercise you will perform the following VisualCAD tasks:

- 1. Set to the Top View.
- 2. <u>Create Reference Points.</u>
- 3. Create Inner Cutouts.
- 4. Trim Curves.
- 5. Offset, Extend & Trim Curves.

- 6. Fillet Curves.
- 7. Mirror Curves.
- 8. Merge Curves.
- 9. Extrude Curves.


### 7.3.1 Set to the Top View

# Set to the Top View

Set the view to Top View. This can be done by selecting the <u>Top View</u> icon from the <u>View Toolbar</u> or the <u>Orient pane of the <u>Display Ribbon Bar</u>.</u>




View Toolbar

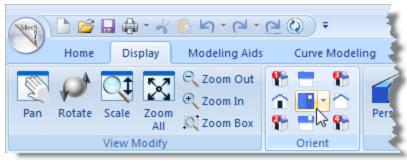

Display Ribbon Bar - Set to the Top View

#### 7.3.2 Create Reference Points

- Create Reference Points
  - 1. Select the <u>Curve Modeling</u> tab Curve Modeling from the top Ribbon Bar.
  - 2. Select the <u>Curve Modeling Ribbon Bar</u>:

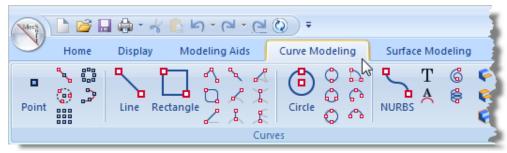

Select the Curve Modeling Ribbon Bar




- 3. Select Point
- 4. Place the point at the Origin by moving the mouse cursor over to origin and with a Left Mouse Button Click or by entering 0,0 in the command bar Command
- 5. As you move the mouse on the viewport, the co-ordinate value at the mouse location is displayed under the status bar.

Create additional points by repeating the <u>Create Point</u> command at the following coordinate locations.

- 2.5,0
- 5.0,0
- 7.0,0

The created points are as shown below.

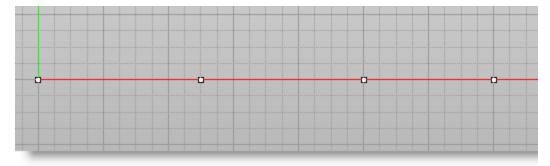

### 7.3.3 Create Inner Cutouts

### Create Inner Cutouts

- 1. Select the Curve Modeling tab Curve Modeling from the top Ribbon Bar.
- 2. Keep the <u>Curve Modeling Ribbon Bar</u> displayed.

3. Select the <u>Circle Center, Center, On Pt</u> icon.



The command input bar Command would now prompt you to specify the center for the circle.

#### **Command Prompt:**

Center, On Pt:: Pick center point or enter coordinates x,y and z


4. For the center point, pick last created point or type 7,0

### **Command Prompt:**


Center, On Pt:: Enter point on circle::[D=0.500000]

5. Specify 1.50 for Diameter in the command bar Command and press Enter.

The created circle is as shown below.

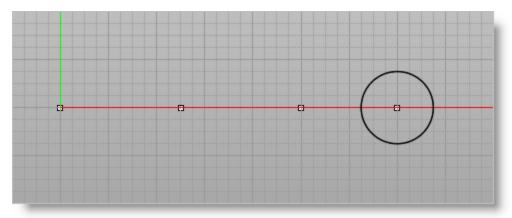

6. Repeat the Circle command to create 2 more circles at the center points (2.5,0 and 5,0) enter a Diameter of 1.00 for each circle.

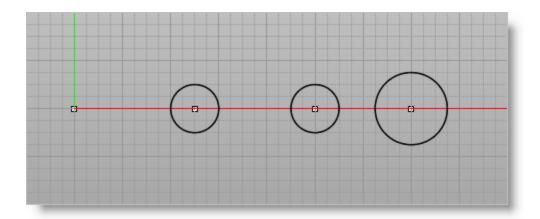


7. From the <u>Status Bar</u>, toggle <u>Grid Snap</u> off and then toggle <u>Quad Point Snap</u> on.




8. Select the <u>Create Single Line</u> icon.



9. Create a line between the top quadrants points of the smaller circles.

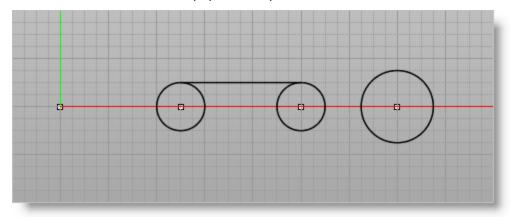

10. Repeat the line for lower quadrant points.

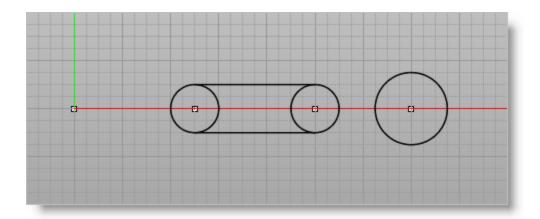

### 7.3.4 Trim Curves




# Trim Curves


The circles must be trimmed.

Select the Curve Modeling tab Curve Modeling from the top Ribbon Bar.




- 2. Select Trim
- 3. Click on the portion of the circle you want to delete.

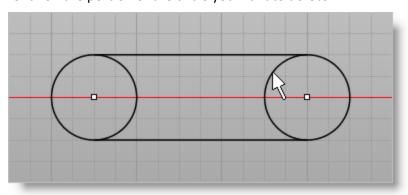

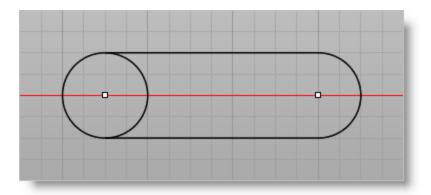

4. Repeat for the circle portion on the other side.

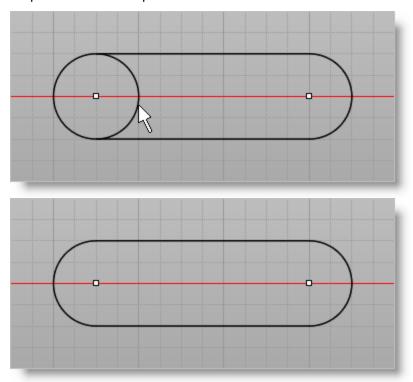

### 7.3.5 Offset, Extend & Trim Curves

- Offset, Extend & Trim Curves
  - 1. Select the <u>Curve Modeling</u> tab <u>Curve Modeling</u> from the top Ribbon Bar.
  - 2. Keep the <u>Curve Modeling Ribbon Bar</u> displayed and then select the top horizontal line.


3. Pick the Offset Curve icon from the Edit Curves pane.

A preview line will appear, indicating the direction of offset. Point the preview line


For Offset Curve, your cursor points to the offset direction, so do not move the cursor to the Command Prompt Command field.

Simply type 0.75 and press Enter to input the value.


to offset the curve outward and then type 0.75 from the keyboard and press Enter.

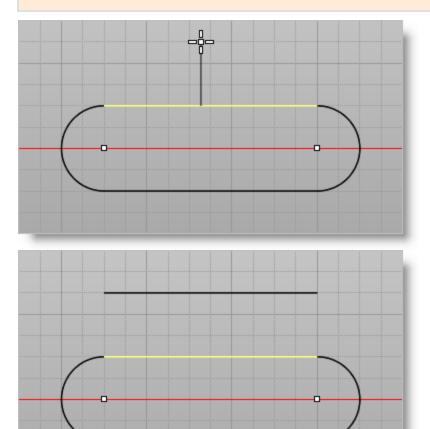


4. Repeat the offset for the horizontal line at the bottom, making sure to keep the cursor and directional indicator line pointing downward.

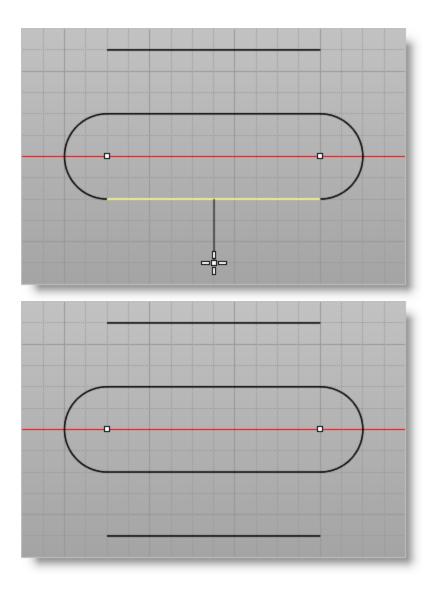


- 5. Select the larger circle on the right and then pick the Offset Curve icon again.
- 6. With the cursor, point the offset direction outward from the circle, type 0.50 and press Enter.

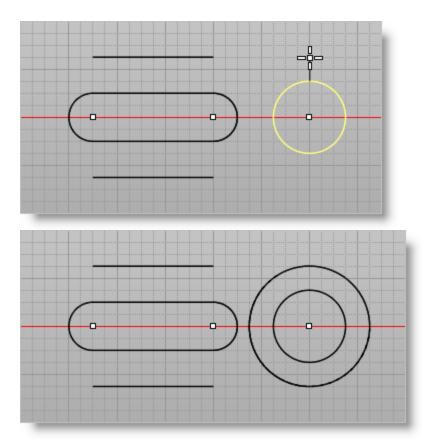


- 7. To modify the offset lines so that they meet the larger circle, pick the Extend Curve
  - icon from Edit Curves pane. It is located just to the right of the Offset Curve icon.
- 8. Click one of the offset lines towards the right. The line extends to the point where it meets the circle.

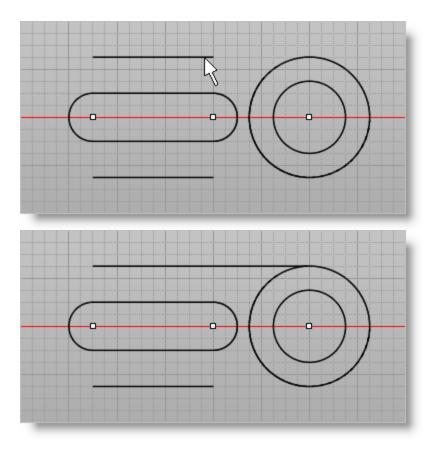

9. Repeat the extend curve for the line at the bottom.

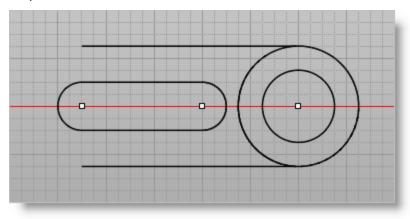

10. Select Trim and trim the large circle where it meets the two extended lines.

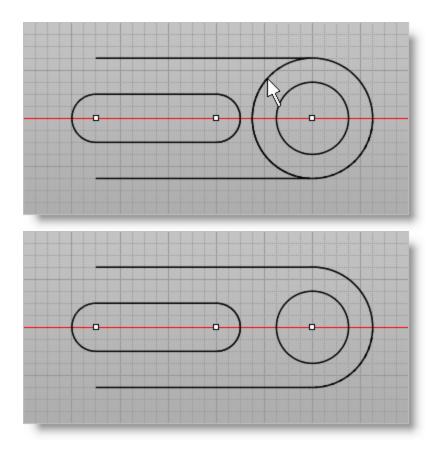

### 7.3.6 Fillet Curves



We will now create the left section of the spanner using the filleting and mirroring tools. We will start by creating the arc at the end of the spanner.

- 1. Select the <u>Curve Modeling</u> tab Curve Modeling from the top Ribbon Bar.
- 2. From the <u>Curve Modeling Ribbon Bar</u>, select <u>Center, Start, Angle Pts.</u>


#### **Command Prompt:**

Center, Start, Angle Pts:: Pick center point or enter coordinates x,y and z

- 3. For the Center, type 0,0 in the Command Prompt Command and then press Enter.
- 4. For Start, type 0,1.25 in the Command Prompt Command and then press Enter.

5. For End, type -180 in the Command Prompt Command and then press Enter.


Your drawing should look like the following:

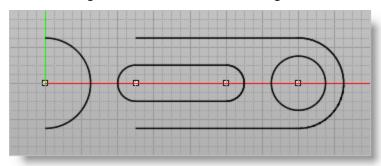

6. Now create a reference point located at 0,2.25 using the Point command.

The icon is located on the left side of the Curve Pane of the Curve Modeling Ribbon

Bar.

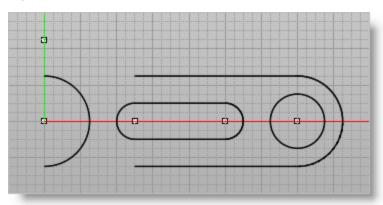


7. From the <u>Status Bar</u>, toggle <u>End Point Snap</u> On.



- 8. Now, select Rectangle
- 9. For the 1st corner pick the point you just created and for the other corner snap to the End Point of the horizontal line as shown below.

Point

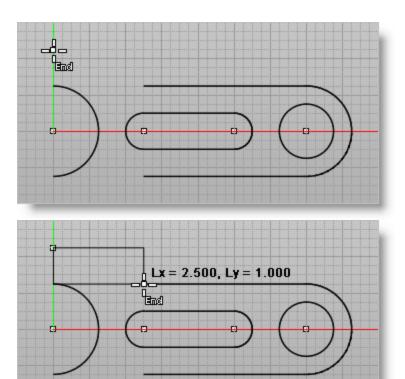

- 10. This rectangle is one object one multi-segmented curve. In order to be able to edit or modify this rectangle, it must be broken into individual lines.
  - To do this, select the <u>Explode</u> icon. It is located on the far right side of the <u>Edit</u> Curves pane of the <u>Curve Modeling Ribbon Bar</u>.
- 11. Select the rectangle and then right-click or press Enter.

  Now each line of the rectangle is a separate object.




12. Select Fillet


### **Command Prompt:**

Fillet:: Enter fillet radius [R=0.500000]

- 13. For Radius enter 0.5 and press Enter.
- 14. Select the 2 curves as shown below to fillet the curves.

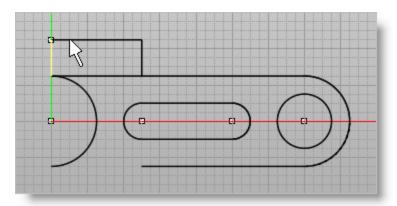

The filleted curve is as shown below.

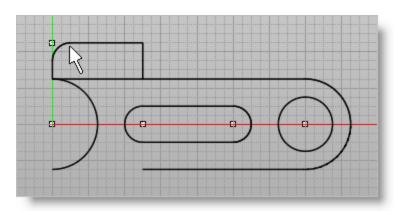


15. Let's now create another arc. Again, from the <u>Curve Modeling Ribbon Bar</u>, select <u>Center, Start, Angle Pts.</u>


### **Command Prompt:**

Center, Start, Angle Pts:: Pick center point or enter coordinates x,y and z

16. For Center pick the end point on the upper right corner of the rectangle.

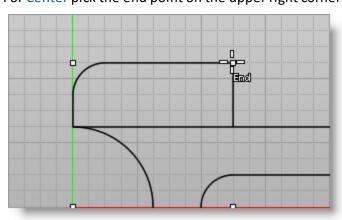


17. For Start pick the lower right corner of rectangle as shown below.

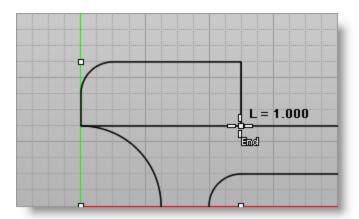

18. For Angle, type in -90 and then press Enter to create an arc in the top right corner of the rectangle.


Center,Start,Angle Pts:: Pick arc start point or enter coordinates x,y and z
Center,Start,Angle Pts:: Pick arc end point or enter coordinates x,y and z::[A=-90.000000]
Command -90

The created Arc is shown below:

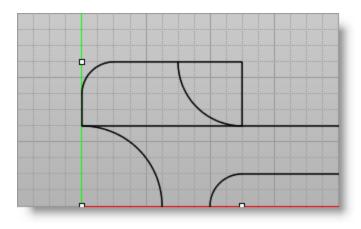



- 19. To clean up the corners we select Trim again.
- 20. Select trimming curves to obtain the shape as shown below:

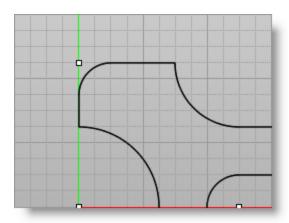


### 7.3.7 Mirror Curves



### **Mirror Curves**

We will now select the 4 curves that form the head of the spanner and mirror them.

1. Select the 4 curves as shown below. Hold down the Ctrl key to select multiple objects.

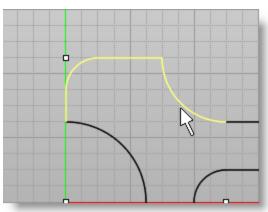


 With the 4 curves selected, you will notice that VisualCAD's Modify mode automatically becomes active and that the <u>Transform Ribbon Bar</u> becomes available. Refer to the menu image below:



The Transform Ribbon Bar is Activated

3. Now there are two methods to activate the Mirror command. Select the method that suits you best.


You can select the Transform Ribbon Bar tab and then select the Mirror icon as shown:

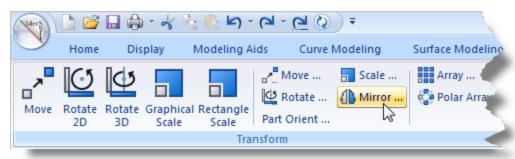

The Mirror icon on the Transform Ribbon Bar

- or -

While the 4 curves are selected, you can simply Right-click and select Mirror from the pop-up menu as shown below:

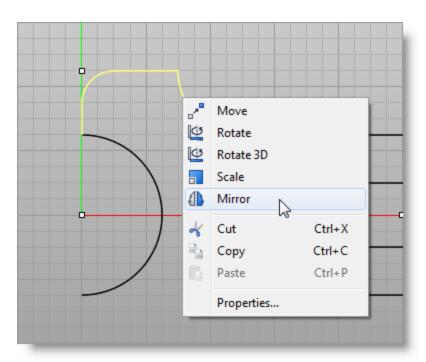


Right-clcik Menu for Editing Objects

### 4. From the Mirror selected objects dialog box:

Set the Mirror Plane to XZ Plane Leave Point (P) as Origin since the origin lies on the center line of the part. Check Create Copy Pick OK.

The curves are mirrored as shown below.

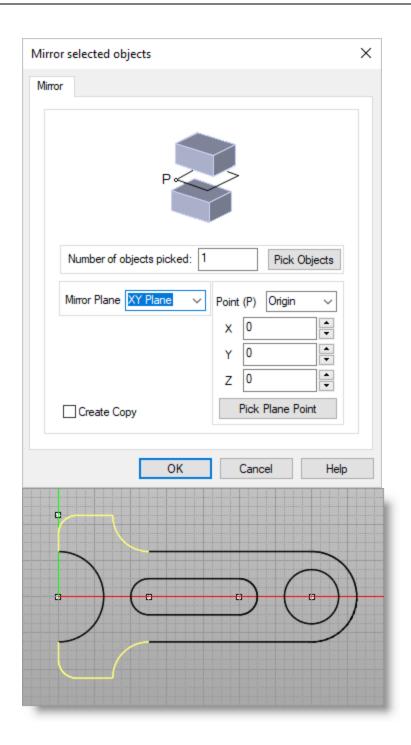


## 7.3.8 Merge Curves


# Merge Curves

Now we will merge our curves into three separate closed curves.

1. Select all the curves by using a crossing window selection:

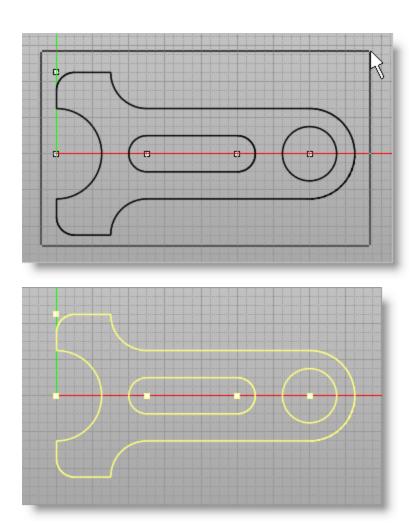

2. Now, go back to the <u>Curve Modeling Ribbon Bar</u> select the <u>Merge Curves</u> icon and then right-click or press Enter. The curves are merged to 3 closed curves as shown below.

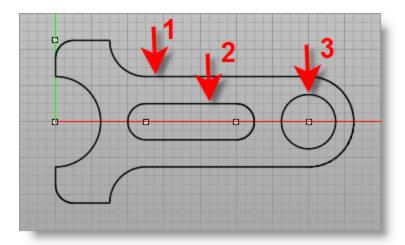


### 7.3.9 Extrude Curves

# **Extrude Curves**

Now to complete the exercise we will extrude our 3 curves to create the final Spanner 3D model.

- 1. Select all the curves by using a crossing window selection:
- 2. Select the 3 closed curves.
- 3. Select Iso from the <u>View Toolbar</u>



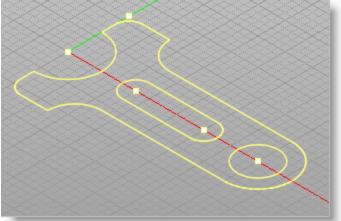

4. From the <u>Solid Modeling Ribbon Bar</u>, select <u>Extrude</u>.


5. Preview curves will appear to determine the direction of extrusion.

Set the extrusion to point in the positive Z direction by moving the cursor above the geometry.


Then type 1.0 in the command input bar and press the <Enter> key.

### **Command Prompt:**

Extrude:: Enter extrusion distance::[L=1.000000]

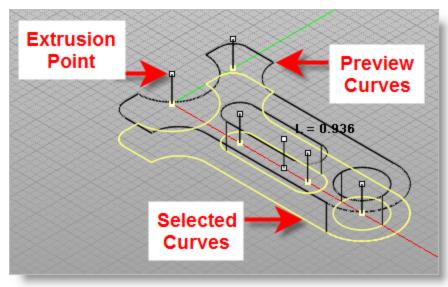

The curves are now extruded and displayed as shown below.

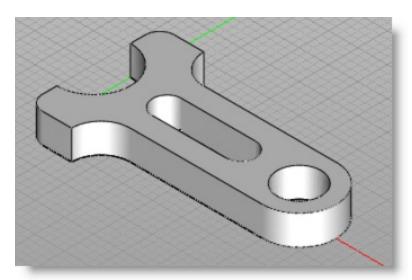


6. Save the file as Spanner\_Completed.vcp.

This completes this exercise.

### 7.4 #4: Model a Base Plate

In this exercise you will model something a bit more complicated, the base plate shown below. You will learn how to draw and model basic shapes to create this 3D model.

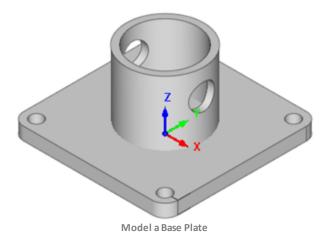

# What you will learn:

In this exercise you will perform the following VisualCAD tasks:

- 1. <u>Draw the Base Plate Profile.</u>
- 2. Extrude the Base Plate.
- 3. Model the Tube.
- 4. Create a New Layer.
- 5. Edit Geometry Properties.

### 7.4.1 Draw the Base Plate Profile

# Draw the Base Plate Profile


In this exercise you will learn the following VisualCAD concepts:

1. Select the <u>Curve Modeling</u> tab <u>Curve Modeling</u> from the top Ribbon Bar.




- 2. Now select the **Rectangle** command.
- 3. For the first corner of the rectangle, select the lower left grid point location shown below or type -3,-3 in the Command Prompt Command and press <Enter>.


4. For the second corner of the rectangle, select the upper right grid point shown below or type 3,3 in the Command Prompt Command and press <Enter>. This will create a rectangle 6" square.

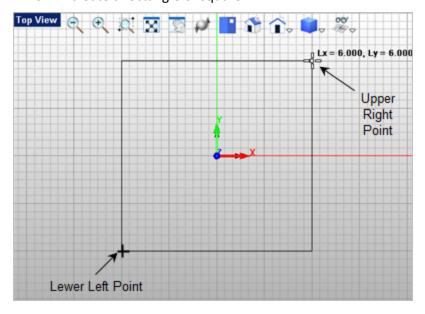


- 5. To fillet the corners, select the <u>Fillet</u> command from the <u>Curve Modeling</u> tab.
- 6. For the fillet Radius, enter 0.5 in the command prompt Command and press <Enter>.
- 7. Now select the first edge to fillet as shown below. **Note**: When selecting curves to fillet, it is best to select furthest away from the corner that you wish to be filleted.

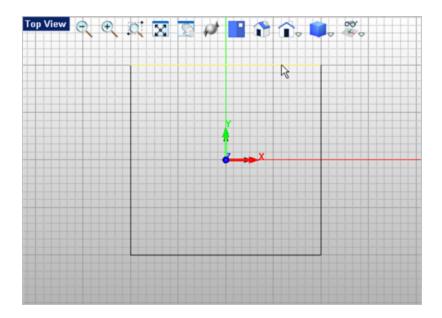


8. Now select the second edge to fillet and a 0.5 radius fillet is added to the rectangle as shown below.

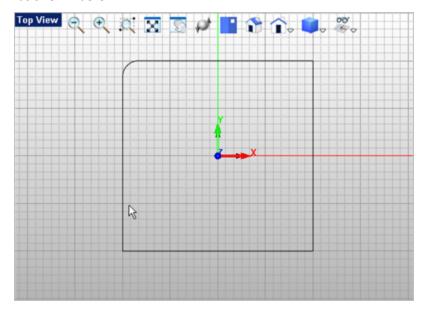

9. Now press <Enter> to repeat the <u>Fillet</u> command and fillet the remaining 3 corners of the rectangle as shown below. If you make a mistake, you can select the <u>Undo</u> command located on the <u>Quick Access toolbar</u> and try again.

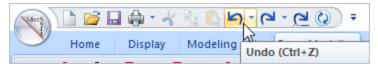


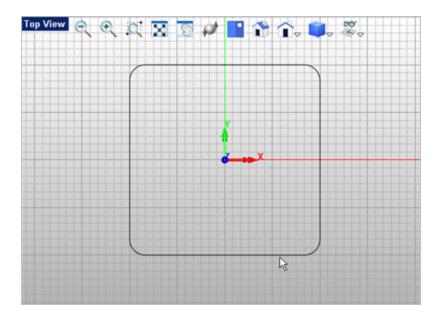

10. Now lets add the mounting holes. From the <u>Curve Modeling</u> tab,


Circle

- select the <u>Circle on Pt</u> command.
- 11. For the center point of the first hole select the grid point shown below or enter2.5,2.5 in the command prompt Command and press <Enter>.

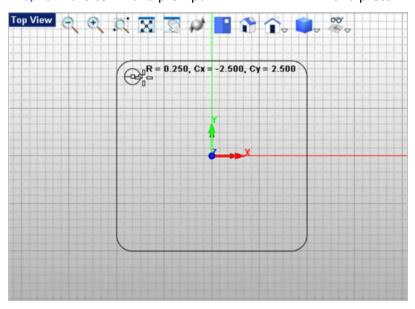

12. Now for the circle radius you can select the next grid point to the right of the center point you just selected or enter 0.5 for the diameter and press <Enter>.

13. Repeat the <u>Circle on Pt</u> command and draw the other three circles in the locations shown below.

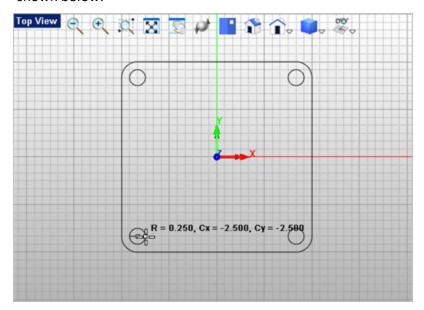


#### 7.4.2 Extrude the Base Plate




#### **Extrude the Base Plate**

In this step we will extrude our drawing to model the base plate in 3D.

1. First, window select the drawing by picking two points. Click and hold the left mouse button to drag a window around the drawing as shown below. If you drag from left to right everything completely the window is selected. If you drag from right to left everything that cross over the window will be selected.

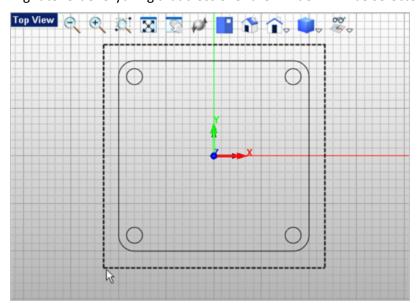


2. After your drawing is selected, go to the Mesh Modeling tab

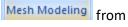

the Ribbon Bar and select the Extrude command.


Now move the cursor down to the Front View Front View and you will see that you can drag the height of the extrusion. Select the second grid point in the positive Z direction or type 0.5 and press <Enter>.

Extrude

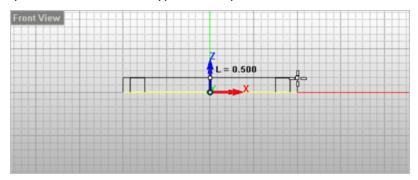

You will see the extrusion display in all four viewports. The Iso View 1 view is shown below.



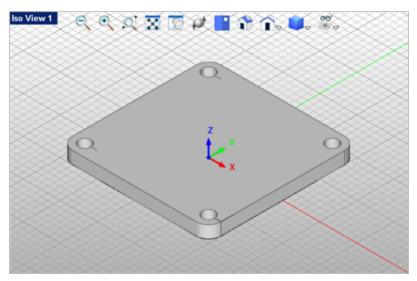

Save your work by selecting the Save icon from the Quick Access toolbar.




### 7.4.3 Model the Tube

### Model the Tube

In this step we will draw two concentric circles and then extrude them to model the circular tube that sits at the base plate.


- 1. Select the Top View Top View to activate it.
- 2. From the <u>View Toolbar</u> drop down the Display menu and select Wireframe Display. This will allow us to better see our next drawing.

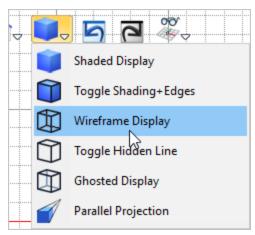


3. Now from the <u>Curve Modeling</u> tab select the <u>Circle on Point</u>



- command again.
- 4. For the center point select the grid point at 0,0 center of the drawing.
- 5. Now for the circle diameter you can select the grid point shown below or type in 3 and press <Enter>. A circle 3" in diameter is drawn.

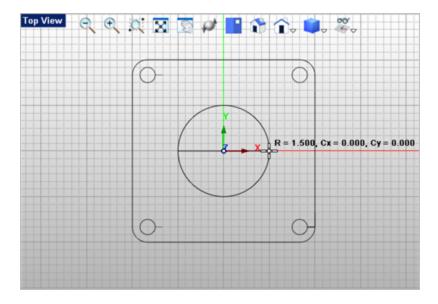


6. Now repeat the command, this time drawing a circle with a diameter of 2.5" in diameter.

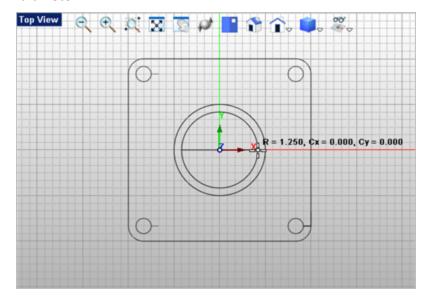


- 7. Once the two concentric circles are drawn, select them both. You can window select them or while holding down the <Ctrl> key, just pick both of them.
- 8. With the two circles selected, go to the Mesh Modeling Mesh Modeling tab and




9. Now move the cursor to the Front View and select the grid point located at 3" in the positive Z direction as shown below.

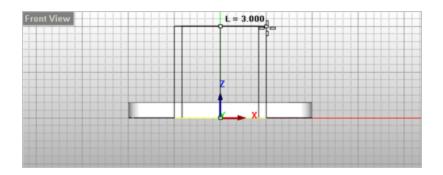


10. The center tube is now created and shown in each window.

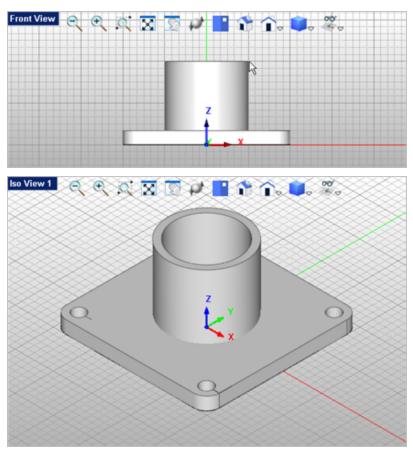

11. Save your work by selecting the Save icon from the Quick Access Toolbar.

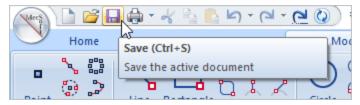


- 12. Activate the Right View by selecting anywhere on the grid.
- 13. From the View Toolbar, drop down the Display menu and select Wireframe Display. Again, this will allow us to better see our next drawing.

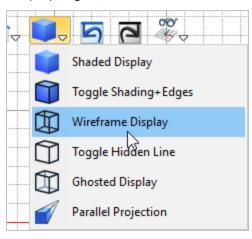




- 14. From the <u>Curve Modeling</u> Curve Modeling tab, select the <u>Circle on Pt</u> command again.
- 15. For the center point of the circle, select the grid point shown below.

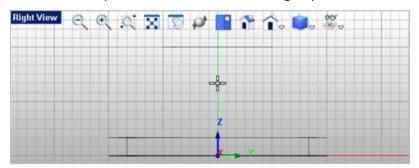

16. Now for the circle diameter you can select the grid point shown below or enter 1.0 for the diameter.

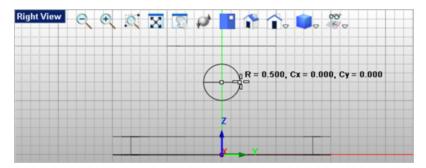

17. Now select the circle you just created, then go to the Mesh Modeling

Mesh Modeling




tab and select the Extrude


command again.


18. For the length of the cylinder move the cursor over to the Front View Front View and select the grid point shown below.



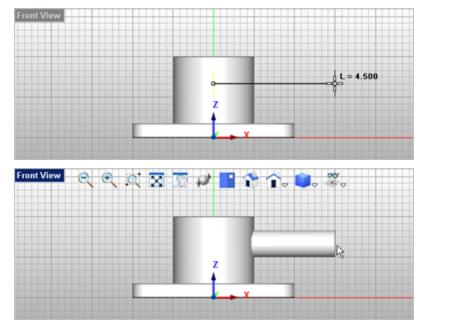


19. Now select the cylinder and toggle the display of the <u>Graphic Manipulator</u> on. This toggle icon is located on the <u>Status Bar</u> at bottom of the display.

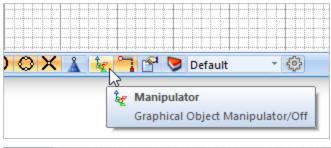


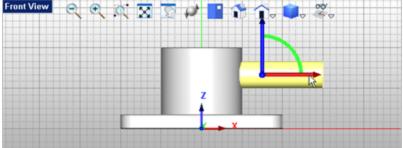


20. With the cylinder selected pick on the red X axis of the <u>Graphic Manipulator</u> to display the input box and enter -2.25 Command and press <Enter> as shown below.

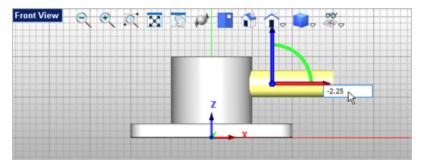


The cylinder is translated to the left negative X direction by 2.25 inches so that it passes complete through the tube on both sides.

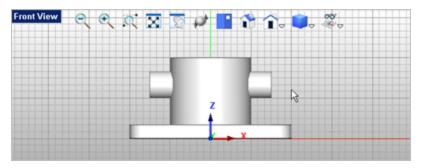

- 21. You can toggle the <u>Graphic Manipulator</u> off.
- 22. From the Mesh Modeling tab, select the Subtract command It's located in the Edit Meshes pane. We are going to Subtract the cylinder from the tube.
- 23. For the first mesh select the tube.

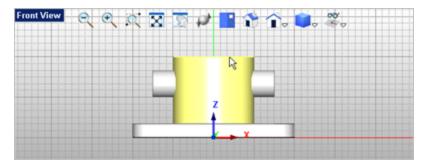

24. For the second mesh select the cylinder. The hole is created in both sides of the tube.

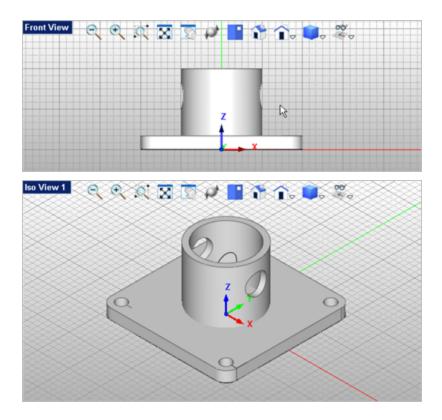


## 7.4.4 Create a New Layer

## Create a New Layer


In this step we will create a new layer, turn it off and the move our curves to it to hide them from the display.

1. From the <u>Status Toolbar</u>, select the icon to display the <u>Layer Manager</u>.




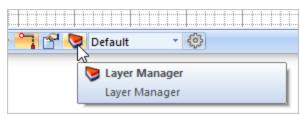


2. At the top of the <u>Layer Manager</u> select the <u>New Layer</u> icon and a new layer will be added to the list.

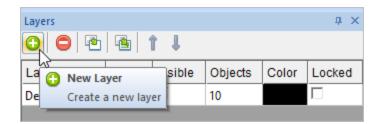


3. Now double-left click on the <u>New Layer</u> name and type in the names "Curves" and press <Enter>.

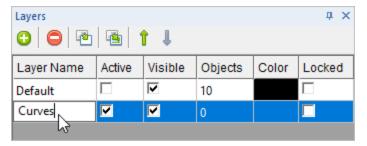


- 4. Now to hide the Curves layer first check the box to make the Default layer the Active layer.
- 5. Then uncheck the box to make the Curves layer hidden.

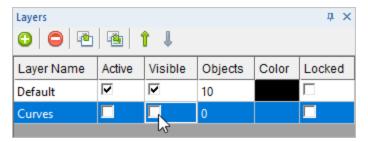

6. Now let's Auto Hide the <u>Layer Manager</u>. Select the Auto Hide pin icon located at the top right of the <u>Layer Manager</u> and will see that the dialog disappears to the left side of the screen.

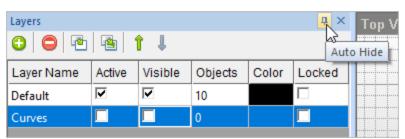

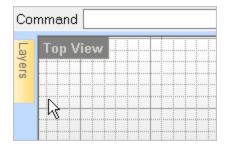


### 7.4.5 Edit Geometry Properties


## **Edit Properties of Geometry**

In this final step we will select all of our reference curves and edit their properties so that they are moved to a layer whose visibility is currently off.

1. Let's start by selecting the Properties icon located on the Status Toolbar at the bottom of the display (just to the left of the Layer Manager local).

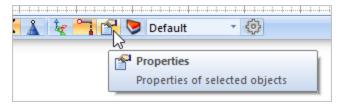


2. You will see the **Properties Manager** dialog display om the left side of the display.

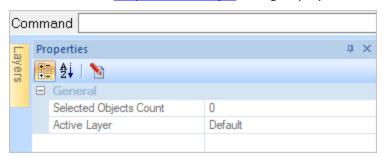

3. Now we will automatically select all of our curve geometry. Go to the Modeling


Aids tab and select pick the Select by Type

Object Selection Filters dialog.

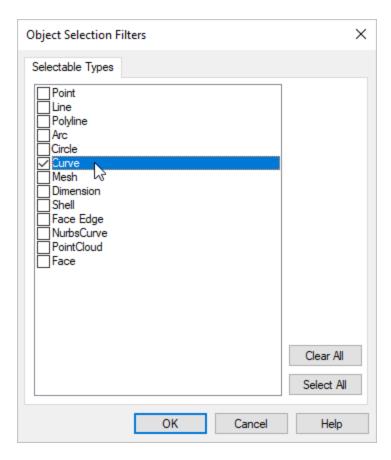



4. From the dialog check the box for Curves and uncheck all other boxes and then pick OK to close the dialog. You will see that all of the curves are highlighted for selection.

Now go to the <u>Properties Manager</u> and under the Objects section drop down the menu for Layer and select Curves.

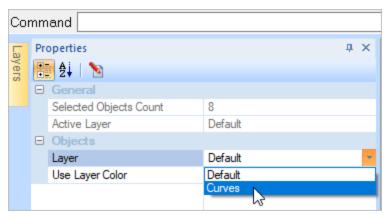


5. Now close the <u>Properties Manager</u> by selecting the Auto Hide pin located at the top right of the <u>Properties Manager</u>.

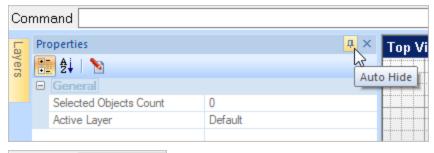

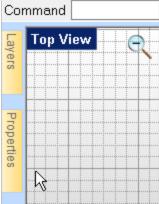


- 6. This exercise is complete and your part now looks like this:
- 7. Save the file as Base\_Plate\_Completed.vcp.

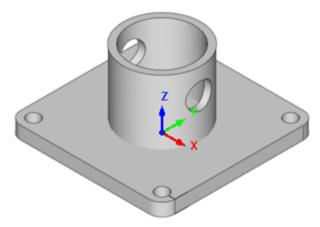

### 7.5 #5: Model a Mold Insert

In this exercise you will model something a bit more complicated, the mold insert shown below. It builds upon the tasks you have learned in the previous exercises. You will draw curve profiles and then turn them into part features. The Graphic Manipulator is used extensively in this exercise as well as modeling from multiple viewports. Just go slowly and save your work often and Undo if needed.

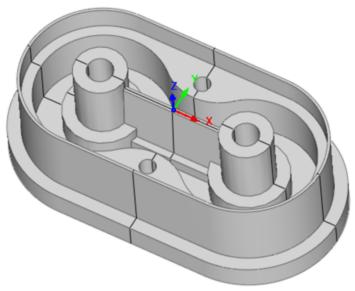

Model a Mold Insert

# What you will learn:

In this exercise you will perform the following VisualCAD tasks:

- 1. Extrude the Body.
- 2. Extrude the Flange.
- 3. Extrude the Upper Pocket.
- 4. Extrude the Lower Pocket.
- 5. Revolve the Center Bosses.
- 6. Extrude the Connection Bar.
- 7. Extrude the Connection Wall.
- 8. Extrude Ejector Pin Holes.
- 9. Change Geometry Layer.
- 10. Create Section Curves.


### 7.5.1 Extrude the Body

# **Extrude the Body**


In this step we will model the body by creating an extrusion.

- 1. Activate the Top View Top View tab by selecting anywhere in the viewport.
- 2. Select the <u>Curve Modeling</u> tab <u>Curve Modeling</u> from the top Ribbon Bar.
- 3. Now select the <u>Arc Center, Start, Angle</u> command.

- 4. In the <u>Status Bar</u> make sure the <u>Grid Snap</u> is On ...
- 5. For the center point select the grid point shown below. The status bar will track where your cursor is located in World Coordinates. Move the cursor until the grid point at 1.5,0,0 is located and pick it.
- 6. Following the command prompts Command . It says to select the start point of the arc. Locate and select the start point shown below.

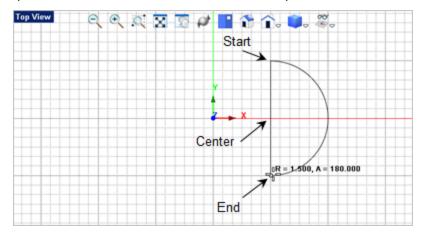

- 7. For the arc end point move the cursor clockwise and pick the end point shown. You will see that the arc is previewed as you move the cursor.
- 8. Now we want to draw another arc, press <Enter> to repeat the command and select the center, start and end points shown below.

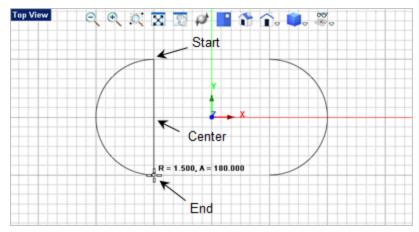


9. Now we want to draw a line to connect the two arcs across the top. From the Curve




10. For the start point for the line select the grid point located at the top end of the arc of the left and then for the end point of the line select the top end of the arc on the

right. Optionally, you can set the <u>Object Snap</u> to <u>End Point</u> from the <u>Status Bar</u> and select the end points of the arcs to draw the line.

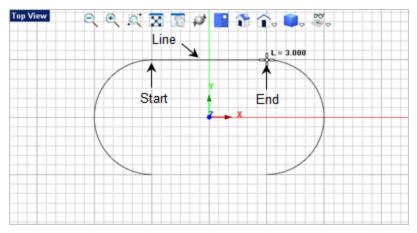

11. Press <Enter> to repeat the <u>Line</u> command and draw the second line connection the two arcs across the bottom. Your drawing should look like the image below.

Line

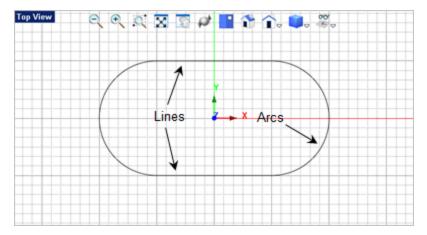


- 12. For modeling its best that you merge your profile geometry into a single curve entity.
- 13. Window select the geometry (both arcs and both lines) and from the <u>Curve</u>

Modeling tab Curve Modeling select the Merge Curves command and then right-click the mouse to merge them. If you pick anywhere on the geometry you will see that one curve is now defined.


14. Now lets create the body by extruding our profile curve. With the curve selected, change to the Mesh Modeling tab Mesh Modeling and select the Extrude Mesh



15. For the extrusion distance, drag the cursor down to the Front View and select the grid point shown below. Its located at 2.0" below the selected curve.

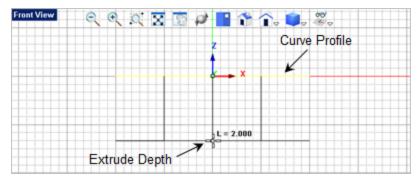

The Mesh Solid is created and shown below.

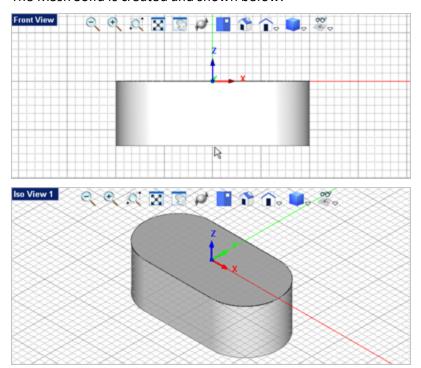

### 7.5.2 Extrude the Flange




**Extrude the Flange** 

Now we will extrude the flange.

1. Activate the Top View Top View by selection the profile curve you just created. You will notice that a selection list pops up because there is now more than one entity in the same located.


**Note**: If the Selections menu shown below does not display, go to the Home tab in VisualCAD and select Options. Then under System clear the check box next to Use Preselection Highlight.

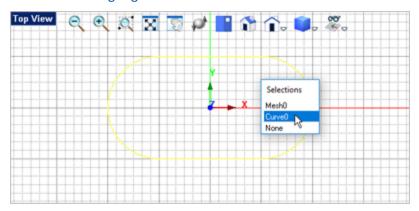

- 2. From the selection list pick Curve. The number value to the right of the curve may change depending on when the entity is created.
- 3. With the curve selected, from the <u>Curve Modeling</u> tab <u>Curve Modeling</u> select the




4. If you move the cursor you see that an offset direction is indicated. Move the cursor below and on the outside of the curve as shown below.

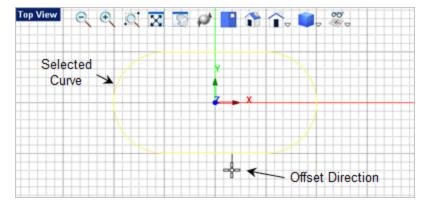

5. Most of the time in this exercise we are selecting grid points. The distance between each grid point is 0.25". For the offset distance you can select the next grid point below the curve.

Optionally, while the offset direction is displayed you can enter 0.25


Command and press <Enter> to create the offset curve shown below.

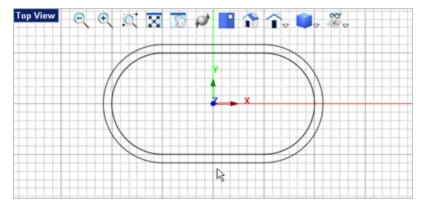


6. Now select the offset curve you just created, go to the Mesh Modeling tab



7. Drag the cursor to the Front View the selected curve. The cursor indicates that the extrusion length is 0.500".

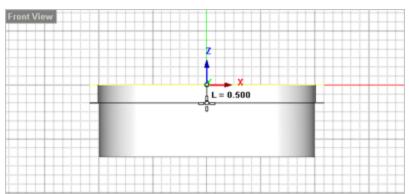


The flange is created and displayed.

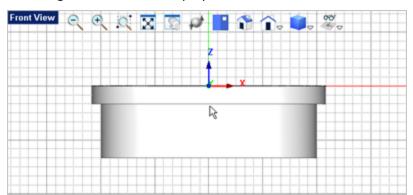


8. Now lets move the flange to the bottom of the body. To do this we will use the <u>Graphic Manipulator</u>. To toggle the <u>Graphic Manipulator</u> on, go to the <u>Status Bar</u> and select the icon .

The <u>Graphic Manipulator</u> allows you to easily translate or rotate a selected entity in or about the X, Y or Z of the World Axis.


9. Now select the flange and you will see that the <u>Graphic Manipulator</u> is displayed on top of the selected entity.

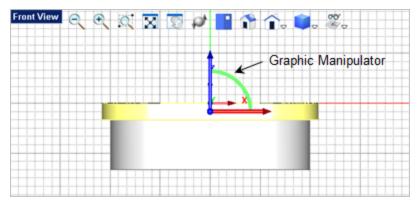

- 10. Pick on the blue Z Axis arrow to display the input window.
- 11. Enter -1.5 Command and press <Enter>.

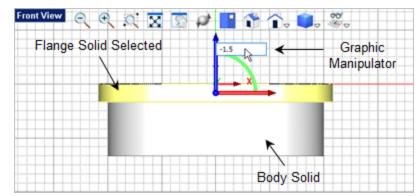


The flange is moved 1.5" in the negative Z direction.

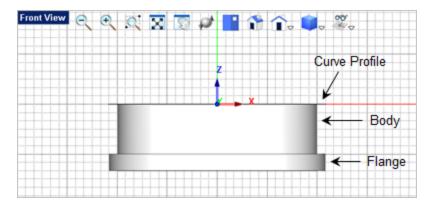

12. Now lets unite the flange with the body. From the Mesh Modeling tab,



13. For the first mesh solid select the body.

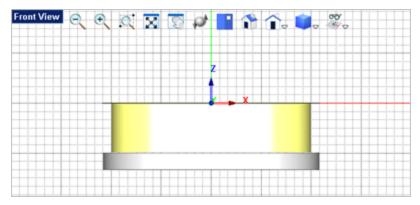


14. For the second mesh solid select the flange. The two will be joined into one mesh solid.

## 7.5.3 Extrude the Upper Pocket

# **Extrude the Upper Pocket**

In this step we will create the upper pocket and subtract it from the body.


1. From the Top View select the profile curve of the body by clicking on it and selecting Curve from the selection list.

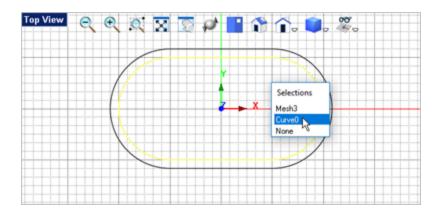

2. With the curve select, go to the <u>Curve Modeling</u> tab <u>Curve Modeling</u> and select the



3. Drag the offset direction to the inner side of the curve and then enter 0.05 Command and press <Enter>.

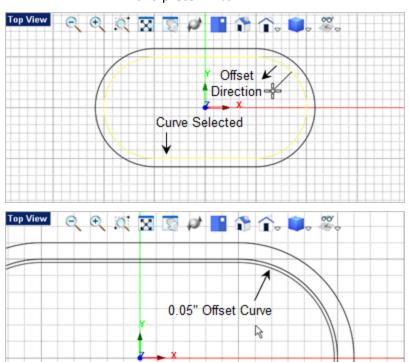


4. Now select the offset curve, go to the Mesh Modeling tab Mesh Modeling and select




the Extrude Mesh

command.


5. Drag the cursor down to the Front View and select the grid point at 0.750" as shown below.

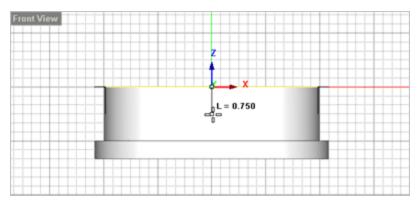


6. Now to see the pocket mesh solid, from the <u>View Toolbar</u> select the <u>Wireframe Display</u> item from the display menu.

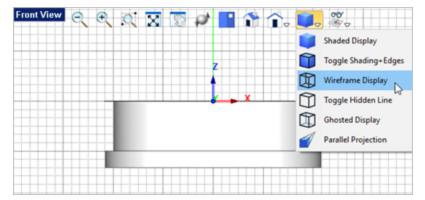


- 7. We want to move the pocket mesh solid so make sure the <u>Graphic Manipulator</u> icon is still toggled on <u>(it's located on the Status Bar</u> remember?).
- 8. With the Front View set to Wireframe display you can see to select the pocket mesh solid. Select it now and the <u>Graphic Manipulator</u> will display on it.
- 9. Select the blue Z Axis arrow and enter 0.25 Command and press <Enter>. The pocket mesh solid will move upward 0.25".

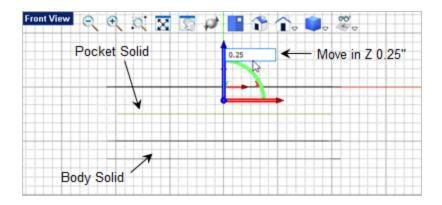


10. From the View Toolbar drop down the display menu and select Toggle Shading + Edges.

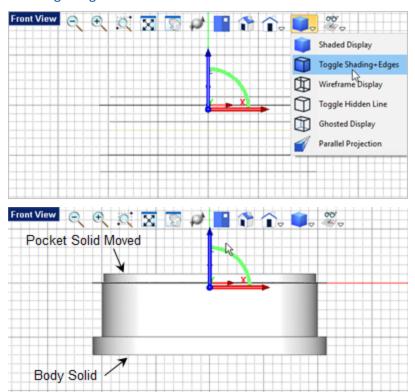


11. Now lets subtract the pocket from the body. From the Mesh Modeling tab

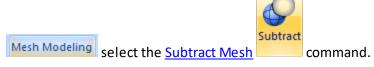

12. For the first mesh solid select the body. This is the solid that will be subtracted from. You can do this from any Viewport. We will select it from Iso View 1
Iso View 1

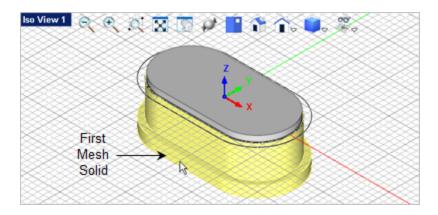

13. Now for the second mesh solid, select the pocket solid and it will be subtracted from the body.

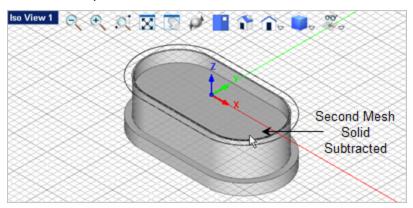

#### 7.5.4 Extrude the Lower Pocket




#### **Extrude the Lower Pocket**


In this step we will create the lower pocket mesh solid and subtract it from the body.

- 1. We will start in the Top View Top View so select anywhere in that view to activate it.
- 2. Now we will create two partial arcs, each 270 degrees. From the <u>Curve Modeling</u> tab


  Curve Modeling, select select the <u>Arc Center, Start, Angle</u> command again.
- 3. Select the center point first and then select the start point. Both are shown below.

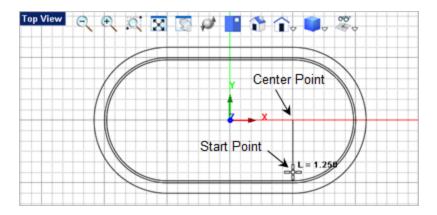


4. Now for the end point of the arc, drag the cursor counter clockwise until the arc preview is at 270 degrees as shown below.

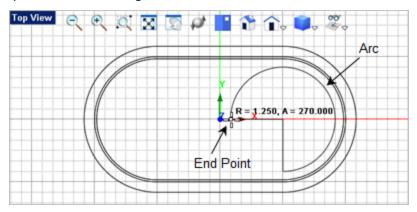

5. Now press the <Enter> key to repeat the command. This time select the center, start and end points shown below.

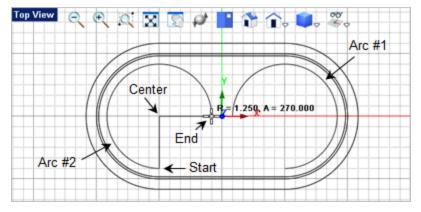


You drawing should now look like this:

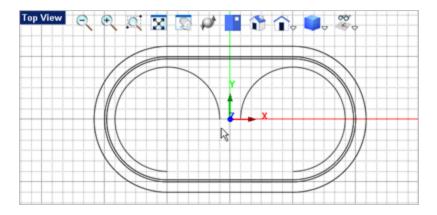


- 6. Now we will rotate each arc 45 degrees to position them properly. Toggle the <a href="Graphic Manipulator">Graphic Manipulator</a> on <a href="#">Image: Graphic Manipulator</a> on <a href="#">Image: Grap
- 7. This time we will use the <u>Graphic Manipulator's</u> rotate feature. Select the blue Z


  Axis arc, enter -45 Command and then press <Enter>.

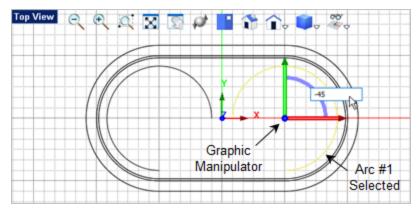


The arc is rotated negative 45 degrees about the Z axis as shown.

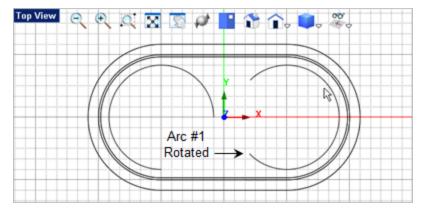


8. Now select the second arc, pick the Z axis arc, enter 45 and press < Enter >.

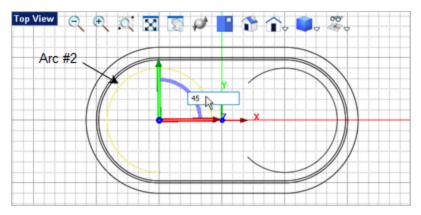


The second arc is rotate 45 degrees about the Z axis as shown.

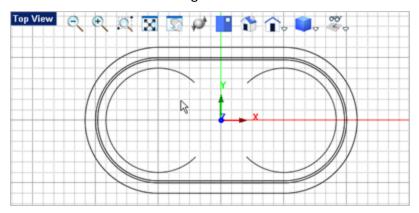


9. To complete the second pocket profile we will fillet the two arcs. From the <u>Curve</u>

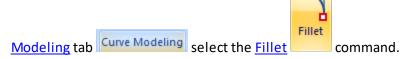

- 10. Enter 1.0 for the fillet radius and press <Enter>.
- 11. Now pick the first arc near the end shown.

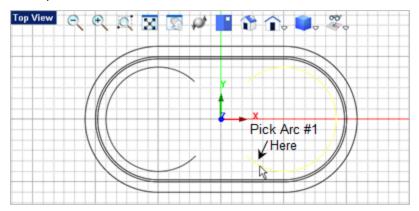


And then pick the second arc near the end shown to create the 1" fillet between the two arcs.

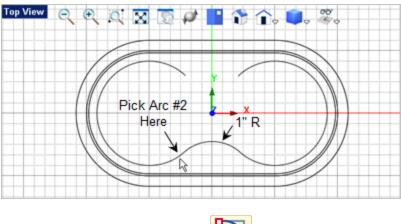




- 12. Press <Enter> to repeat the Fillet command.
- 13. Select the two arcs near their ends to create the second fillet as shown.

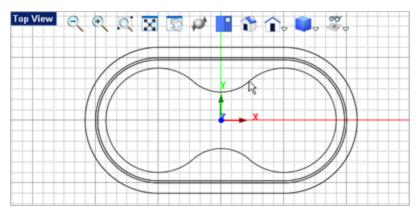

14. Now select the four arcs. You can press the <Ctrl> key to select multiple entities.

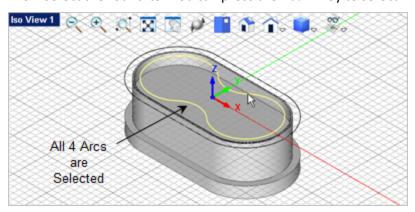


- 15. Now from the <u>Curve Modeling</u> tab <u>Curve Modeling</u> select the <u>Merge Curves</u> command and then right-click or press <<u>Enter</u>> to merge them into one curve.
- 16. With the curve still selected go the Mesh Modeling tab Mesh Modeling and select



the Extrude Mesh

command one again.

17. Drag the cursor down to the Front View and select the grid point that is 1.50" below the selected curve to create the second pocket mesh solid.

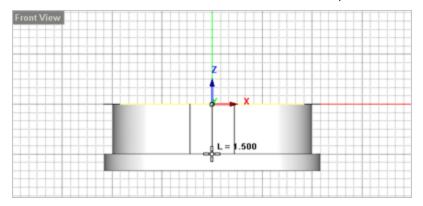


18. Now once again from the Mesh Modeling tab Mesh Modeling select the Subtract




Mesh

command and for the first solid, pick the body.

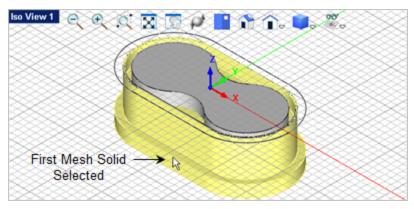

19. Now for the second solid pick the second pocket mesh solid and it will be subtracted from the body as shown.

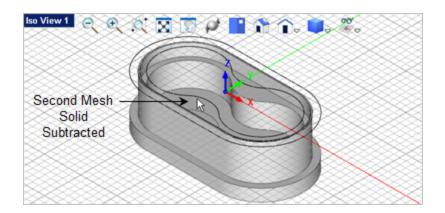


#### 7.5.5 Revolve the Center Bosses


### Revolve the Center Bosses

In this step we will create the two center bosses by revolving a profile to create a mesh solid, mirror it to create the second boss and then add both bosses to the body.

- 1. From the Front View, Front View select Wireframe Display from the Display menu on the View Toolbar.
- 2. From the Curve Modeling tab, Curve Modeling select the Polyline command.
- 3. Pick the grid point shown below for the first point on in the polyline.

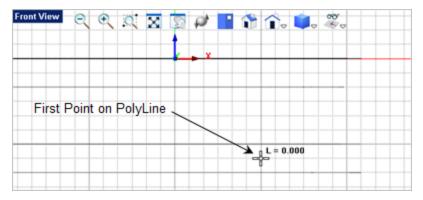


4. Then pick the remaining 9 grid points to complete the closed polyline. The last grid point is the same as the first grid point. This forms a closed polyline.

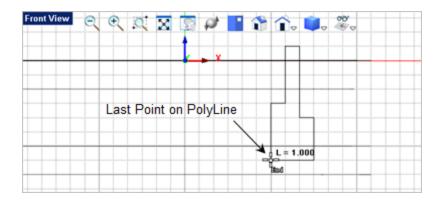


Now select the polyline, and then go to the Mesh Modeling tab Mesh Modeling and 5.

select the Revolve Mesh command. You can toggle off the Graphic Manipulator **a** as we do not need it here.

The command prompt Command  $\leq$  says to pick the start point of the axis of 6. rotation.

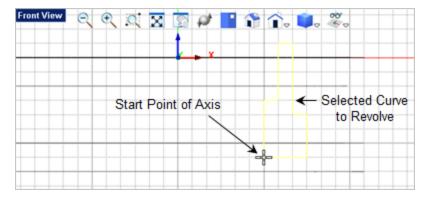



Now pick the second point on the axis of rotation as shown.

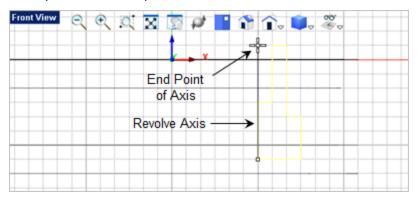


8. The revolved mesh solid is created and can be best viewed from Iso View 1

Iso View 1

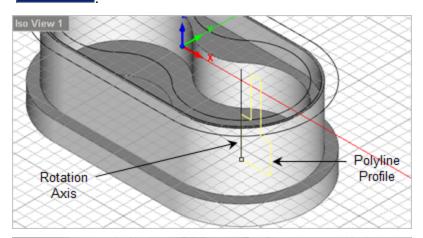

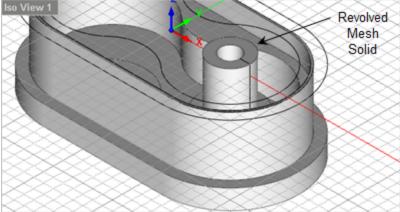

9. Now go to the Front View and select the boss mesh solid we just created.

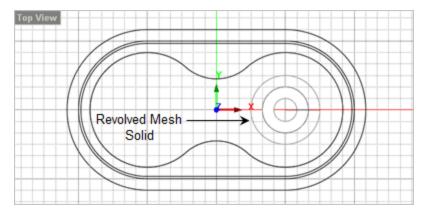


10. With the boss mesh solid selected you will see the Modify / Transform tab


Transform appear on the right end of the Ribbon Bar. It ONLY appears when an entity is selected.




- 11. From the <u>Transform</u> tab, select the <u>Mirror</u> command to display the <u>Mirror</u> selected objects dialog.
- 12. In this dialog, set the Mirror Plane to YZ Plane, check the box next to Create Copy, verify that the Number of objects picked value is 1 and then pick OK.

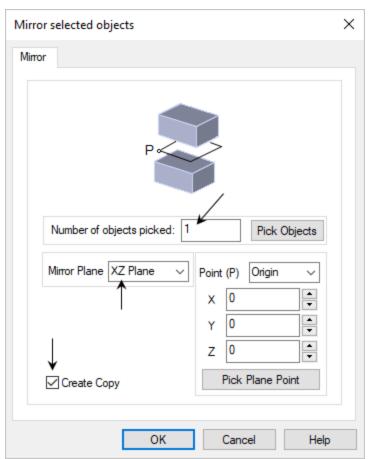

The mesh solid you selected:

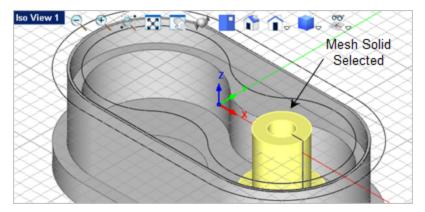


Has now been mirrored about the YZ plane creating a second copy as shown.

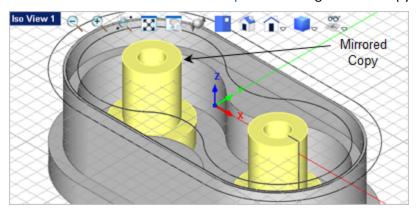


13. Now lets unite the two bosses with the body. From the Mesh Modeling tab,



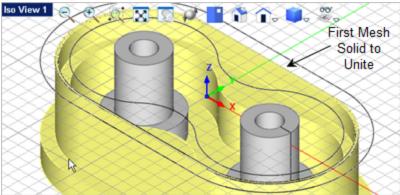


14. Now select the second solid to unite (i.,e. the one of the two bosses we just created.)

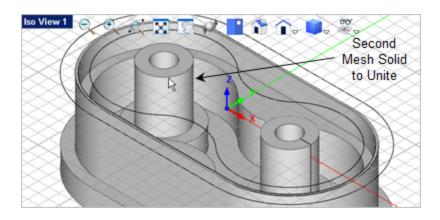


15. Now press <Enter> to repeat the <u>Unite Mesh</u> solid one again.

command and select the body

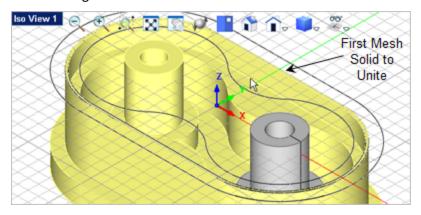

And then select the other boss solid to unite them.

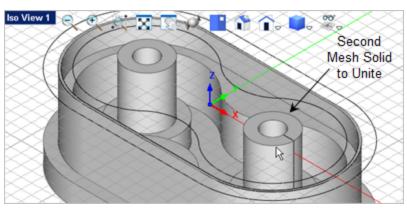

### 7.5.6 Extrude the Connection Bar


**Extrude the Connection Bar** 

In this step we will create the square bar that connects the two bosses at the base of the second pocket.


First activate the Right View and then from the Display menu on the View Toolbar, select Wireframe Display.




- From the <u>Curve Modeling</u> tab, <u>Curve Modeling</u> select the <u>Rectangle</u> 2. command.
- Select the grid points for the 1st and 2nd corners of the rectangle as shown.

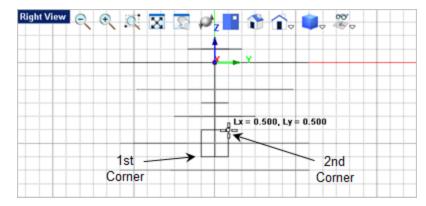


- Now from the Mesh Modeling tab, Mesh Modeling select the Extrude Mesh command.
- Pick the rectangle we just created and drag the cursor over to the Front View Front View and pick the Grid point located 3.00" to the right as shown below.

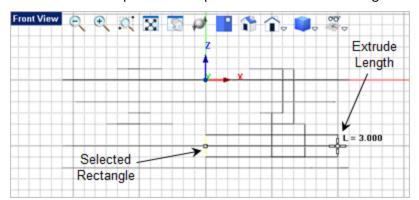


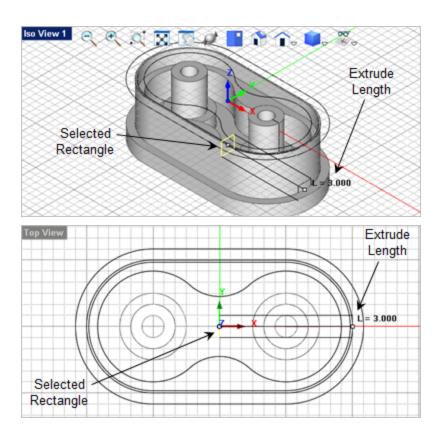

- 6. Now we want to use the <u>Graphic Manipulator</u> again so go to the <u>Status Bar</u> and make sure it is toggled On ...
- 7. Select Iso View 1 Iso View 1 and right-click the mouse and drag rotate the part until you get a good view of the Connection Bar and select it.
- 8. From the <u>Graphic Manipulator</u> pick the red X axis arrow, enter -1.5


  Command and then press <<u>Enter</u>> to see the Connector Bar move to the left to line up on center between the two bosses as shown.

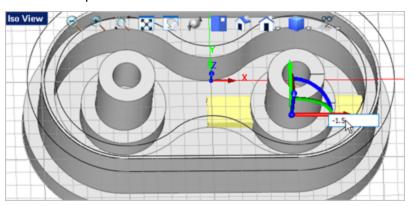

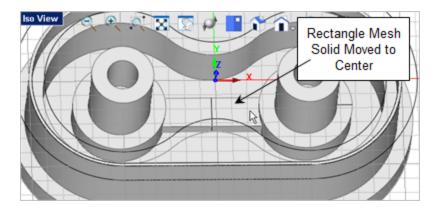

9. Now again we will unite the Connector Bar with the Body. From the Mesh Modeling

tab, Mesh Modeling select the Unite Mesh command and select the body for the first mesh solid and the then select the Connector Bar to unite them.

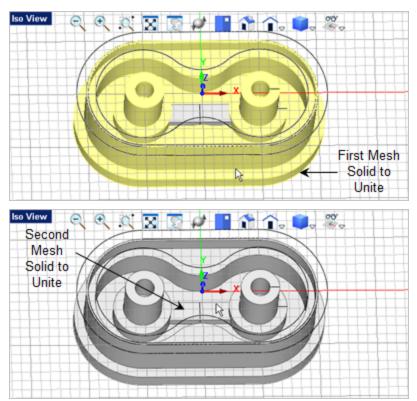

### 7.5.7 Extrude the Connection Wall


Extrude the Connection Wall

In this step we will create the wall that pass between the two center bosses.

1. Again, activate the Right View Right View and then from the Display menu on the View Toolbar, select Wireframe Display.




- 2. From the <u>Curve Modeling</u> tab, <u>Curve Modeling</u> select the <u>Circle on Point</u> command.
- 3. For the center point select the grid point shown below.
- 4. Enter 0.25 Command for the diameter and press <Enter>.
- 5. Press <Enter> again to repeat the command. For the second circle select the grid point shown below and then enter 0.10 Command for the diameter and pres <Enter>. We will use these two circles to locate the corners of a polyline that defines the cross-section of the connection wall.

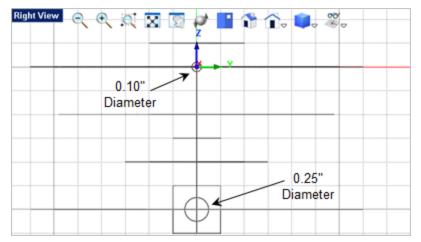


- 6. Now from the <u>Curve Modeling</u> tab, <u>Curve Modeling</u> select the <u>Polyline</u> command.
- 7. From the <u>Status Bar</u> toggle on the <u>Quad Point Snap</u> and toggle off all of the other object snaps.
- 8. We will be drawing a 4-sided closed polyline that encompasses the yellow area shown in the image below. For the start point of the polyline select the quad point on the right side of the lower 0.25" diameter circle at the #1 location shown.
- 9. Then continue, by selecting the Quad point located at the right side of the upper 0.10" diameter circle.
- 10. For the next point in the polyline select the Quad point on the left side of the upper 0.10" diameter circle at the #3 location.
- 11. Then continue by selecting the Quad point at the #4 location.


12. To complete the polyline select the Quad point at the #1 location where the polyline started. The Polyline command will end automatically when the end point coincides with the start point.

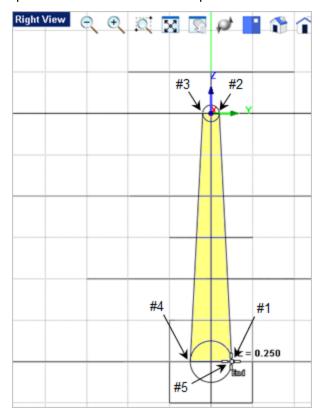

13. Now you can delete the two circles. Just select them and press the <Del> key.

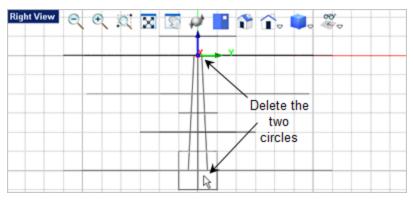

14. Now we will extrude the 4-sided polyline to create the Connecting Wall. First select the polyline we just created.

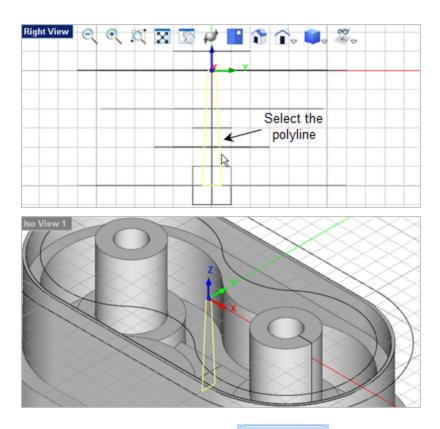


15. Now go to the Mesh Modeling tab Mesh Modeling and select the Extrude Mesh




- 16. Drag the cursor to the Front View Front View and drag the length of the extrusion to the right of the center line where the selected polyline resides. Refer to the image below.
- 17. The point we want is not on a grid point, so with the extrusion previewed (do not select a point), go to the command prompt \_\_\_\_\_\_ and type in the distance 2.300 and press <Enter>.


The Connection Wall is created.

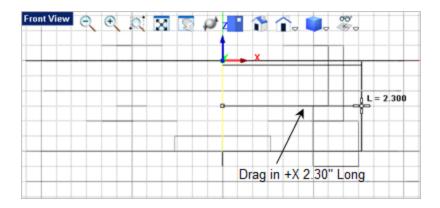


18. Now from Iso View 1 Iso View 1 select the Connection Wall to display the Graphic Manipulator. If you do not see it, make sure it is toggled on from the Status Bar

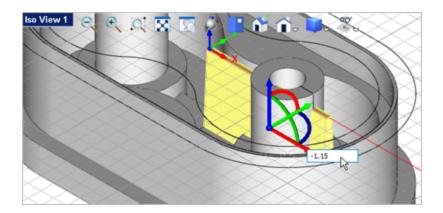


- 19. Pick the red X Axis arrow and type in -1.15 Command and press <Enter>. The Connection Wall should move into place at the center spanning between the two bosses as shown in the image below.
- 20. Now lets unite the Connection Wall with the body. Go to the Mesh Modeling tab

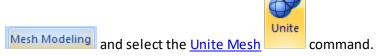

21. For the first mesh solid, select the body.

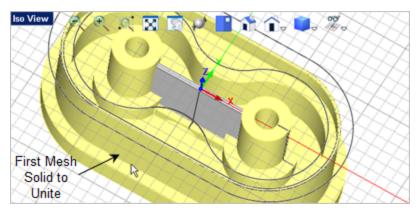

Then select the Connection Wall to unite it with the body.

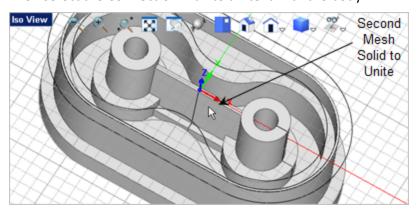

### 7.5.8 Extrude Ejector Pin Holes


# **Extrude the Ejector Pin Holes**

In mold design, ejector pins are used to eject the molded part from the cavity side of the mold. As the mold press opens, the ejector pins slide and protrude through the cavity forcing the plastic part out of the mold where it falls into a catch bin. The ejector pin holes pass complete through the insert.

1. Activate the Top View and then go to the <u>Curve Modeling</u> tab




2. We will draw a total of 4 holes. Two will be 0.3125" in diameter (located at #1 and #2) and two will be 0.3750" diameter (located at #3 and #4).

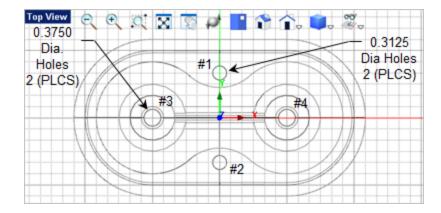


- 3. Select the grid point at the #1 location and then enter 0.3125 in the command prompt Command and then press <Enter>.
- 4. Press <Enter> to repeat the command.
- 5. Select the grid point at the #2 location and press <Enter> again to accept the new default diameter.
- 6. Now press <Enter> to repeat the command, select the grid point at the #4 location and then enter 0.375 in the command prompt Command and then <Enter>.
- 7. Now press <Enter> again, select the grid point at the #4 location and press <Enter> to accept the new default diameter. The 4 circles are drawn.
- 8. Now with the <Ctrl> key pressed, select the 4 holes, go to the Mesh Modeling tab




9. Now move the cursor down to the Front View length down past the bottom of the body and pick the grid pint located at 2.500" below the part.

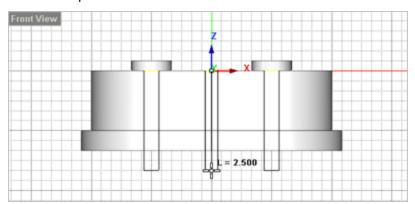


The 4 mesh solids are created:

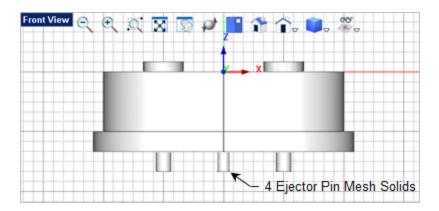

- 10. Now let's move the 4 ejector pin holes upward to pass through the body completely.
  - Window select right to left so that the cross-hatched window passes through all 4 ejector pin mesh solids.
- 11. If the <u>Graphic Manipulator</u> does not display, pick the icon on the <u>Status Bar</u> to toggle it on .
- 12. Select the Blue Z arrow and in the input window enter 0.25 Command and press the <Enter> key twice. The first accepts the value and the second to move the mesh solids.

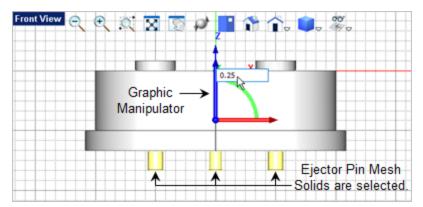

Activate the Right View Right View and we see the ejector pin mesh solids.

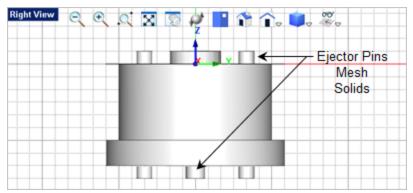


13. Now to subtract the ejector pin mesh solids from the body to create the ejector pin holes go to the Mesh Modeling tab Mesh Modeling and select the Subtract Mesh



command.

14. Select the body as the first mesh solid.

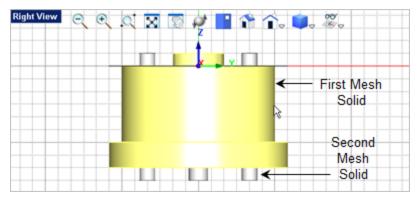


15. Then select the 0.3125" ejector pin mesh solid on the right to subtract it from the body.



16. Press the <Enter> key to repeat the <u>Subtract Mesh</u> body again as the first mesh solid.


command and select the

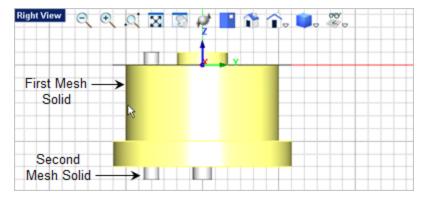


17. Then select the 0.3125" ejector pin mesh solid on the left to subtract it from the body.

18. Press the <Enter> key to repeat the <u>Subtract Mesh</u> command and this time to subtract the 0.3750" ejector pins move to the Front View Front View.

19. Select the body again as the first mesh solid.

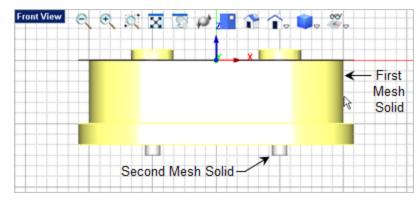



- 20. This time select the 0.3750" ejector pin mesh solid on the right to subtract it from the body.
- 21. Press the <Enter> key again to repeat the command and then select the body mesh solid.

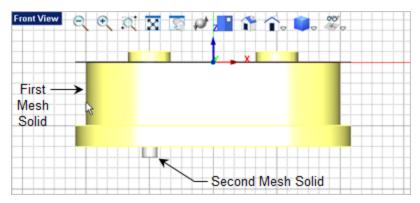

22. Now select the remaining 0.3750" ejector pin mesh solid to subtract it from the body.

You will now see that the 4 ejector pin hole locations pass completely through the mold insert as shown in the images below:

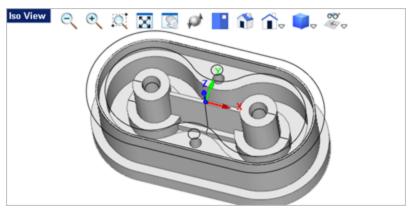

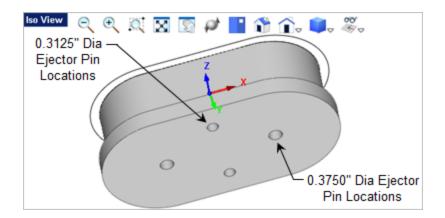


### 7.5.9 Change Geometry Layer


## Change Geometry Layer

We have a lot of curves displaying on the part. Let's clean them up.

- 1. Display the <u>Layer Manager</u>. You can pick the <u>Layer Manager</u> icon located on the <u>Status Bar</u> or select the <u>Layers flay-out tab located on the left side of the drawing window. If you recall we unpinned the <u>Layer Manager</u> allowing it to collapse to the side of the screen.</u>
- 2. From the <u>Layer Manager</u> select the Add Layer icon 😉 to add a new layer.

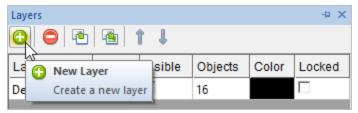


- 3. Now lets rename the new layer to Curves. First double-left-click in the Name field to activate it, and enter Curves as the new layer name.
- 4. Next lets make the Default layer the Active Layer by checking the box in the Active column for the layer Default. The Default layer is now the active layer. Let's also uncheck the box in the visible column for the Curves layer. Now any geometry placed on the Curves layer will be hidden from view. Your Layer Manager should look like the one shown below.

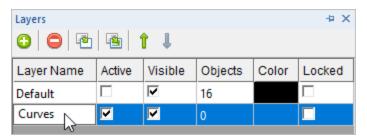


5. Now VisualCAD has a quick way of selecting entities by type. Go to the Modeling

Aids Modeling Aids tab and select the By Type icon. This command displays the Object Selection Filters dialog that allows you to check mark the entities that you want to select. That dialog is shown below:

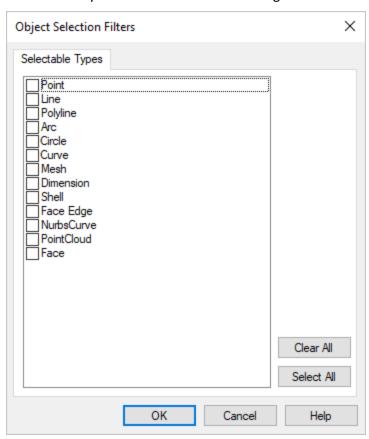


6. Place a check mark in the box for each of the following entity types: Point, Line, Polyline, Arc, Circle, and Curve.

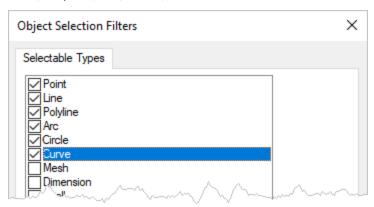


7. Now pick the OK button. You will see that all of the reference curves we created in this exercise are highlighted for selection.


- 8. With the entitles selected, select the <u>Properties</u> icon from the <u>Status Bar</u>. Its located just to the left of the <u>Layer Manager</u> icon.
- 9. The <u>Properties Manager</u> will display on the left side of the screen similar to the Layer Manager.
- 10. At the top of the <u>Properties Manager</u> select the Edit icon. This will display additional fields that you can edit.

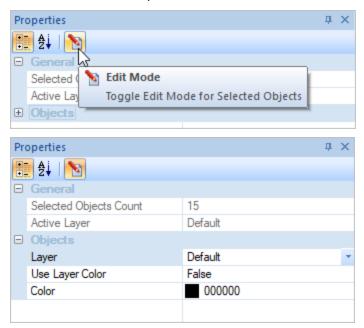

11. We want to change the layer of the curves so drop down the layer menu by selecting the menu indicator on the right side in the Layer row and select the new layer named Curves that we recently created and hidden.

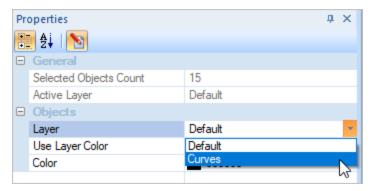

12. Now when you click anywhere in the drawing window you will see that all of the curves have been moved to the Curves layer and are not hidden from view.

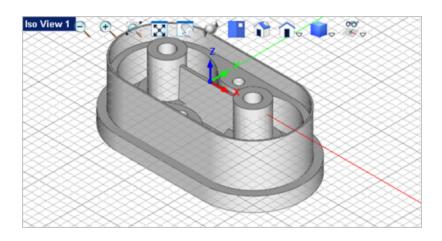


### 7.5.10 Create Section Curves

### Create Section Curves


**Congratulations**, our part is now nearly complete! However, we do want to create cross-section curves that will aid you when it comes time to create a detail drawing of the part.

Section curves are drawn parallel to the active Viewport. So the first step is to select the view that you want the section to be parallel to. We want to create three sections, one through the center parallel to the Front View and another two through each boss parallel to the Right View.


- 1. First lets again create a new layer and make it the active layer so that the section curves will be assigned to that layer automatically when they are created.
- 2. Display the <u>Layer Manager</u> one again.
- 3. Create a new layer and name it Sections and also make it the active layer. The <u>Layer</u> Manager should look like this:

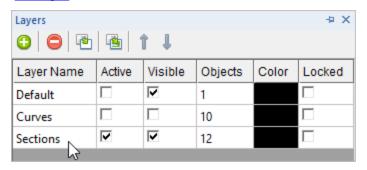

4. Now go to the <u>Curve Modeling</u> tab <u>Curve Modeling</u> and select the <u>Section Curve</u> command. The Create section curves dialog will display.

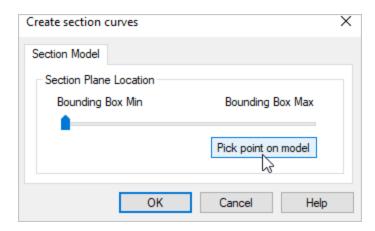


- 5. First select anywhere in the Front View to activate it.
- 6. Now if you move the slider in the dialog you will see the section curves move along the part.
- 7. We want the location of the section to be precise so lets pick the Button that says "Pick point on model".
- 8. Now from the Top View pick the grid point location at the center of one of the two bosses as shown below. Notice that the Top View IS NOT ACTIVE. We want the Front View to stay active while the section point is picked.

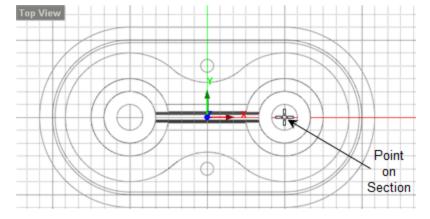


- 9. When you pick the point at the center of the boss, you will see the section curves display on the part. They pass through the center parallel to the Front View just like we want.
- 10. Now press the <Enter> key to repeat the section command and then activate the Right View Right View
- 11. From the Create section curves dialog select the button again that says "Pick point on model".

12. Now from the Top View pick the grid point location at the center of the boss on the right side. Notice that the Top View IS NOT ACTIVE. We want the Right View to stay active while the section point is picked.

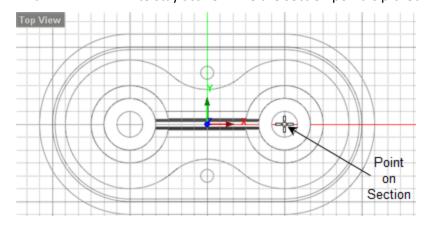

13. When you pick the point at the center of the boss, you will see the section curves display on the part. They pass through the center of the boss parallel to the Right View just like we want.

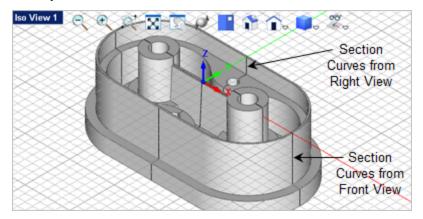


**Congratulations!!** You modeled your Very first mold insert using VisualCAD!

14. Save the file as Insert\_Completed.vcp.

### 7.6 #6: Model a Connector Block

In this exercise you will model the Connector Block shown below. It too builds upon the tasks you have learned in the previous exercises. You will draw curve profiles and then turn them into part features. The Graphic Manipulator is again used extensively in this exercise as well as modeling from multiple viewports. Again, just go slowly and save your work often and Undo if needed.

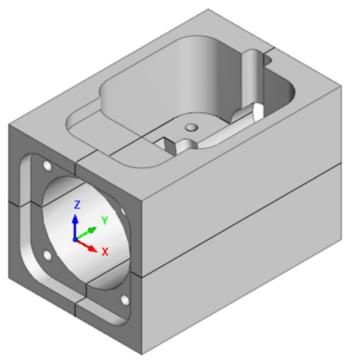

Model a Connector Block

# What you will learn:

In this exercise you will perform the following VisualCAD tasks:

- 1. Model the Main Body.
- 2. <u>Model the Front Access</u>.
- 3. <u>Model the Top Access</u>.
- 4. Model the Mounting Holes.
- 5. <u>Modify the Top Access</u>.
- 6. Create Section Curves.

### 7.6.1 Model the Body


## Model the Main Body

1. Select the Curve Modeling tab Curve Modeling from the top Ribbon Bar.




2. Now select the Rectangle command.

3. Turn on <u>Grid snap</u> and turn off all other object <u>Snaps</u>. <u>Object Snap</u> toggles are located on the <u>Status Toolbar</u> at the bottom of the display.

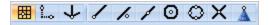


- 4. For the first corner of the rectangle, select the lower left grid point location shown below or type -1.5, 0, -1.5 in the Command Prompt Command and press <Enter>.
- 5. For the second corner of the rectangle, select the upper right grid point shown above or type 3,3 in the Command Prompt Command and press <Enter>. This will create a rectangle 3" square.

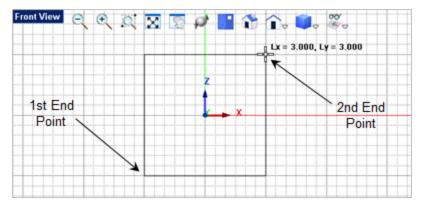


6. Now select the rectangle you just drew and then from the Mesh Modeling tab select



7. Now drag the cursor over to the Right View and select the grid point at 4.5 or just enter 4.5 in the command prompt Command and press <Enter>.

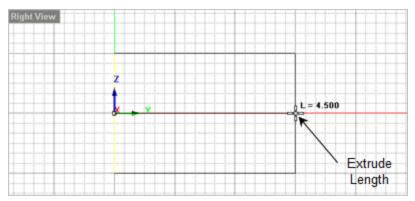


Your part should look like this in Iso View 1:

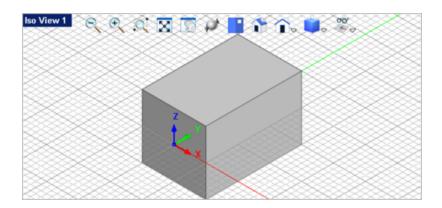


#### 7.6.2 Model the Front Access

### Model the Front Access

- 1. Activate the Front View
- 2. From the tab Curve Modeling select the Rounded Rectangle command.
- 3. For the first corner of the rectangle, select the lower left grid point location shown below or type 1.25,1.25,0 in the Command Prompt Command and press <Enter>.

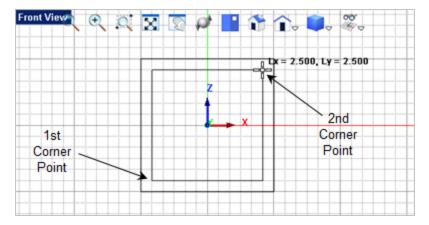

- 4. For the second corner of the rectangle, select the lower left grid point location shown below or type 1.25,1.25,0 in the Command Prompt Command and press <Enter>.

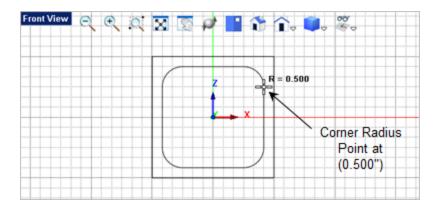


6. Now select the rounded rectangle you just created and from the Mesh Modeling tab,




select the Extrude Mesh

command.


7. Move the cursor over to the Right View and select the Extrude Length at the 1.000 Grid point or enter 1 in the command window Command and press <Enter>.

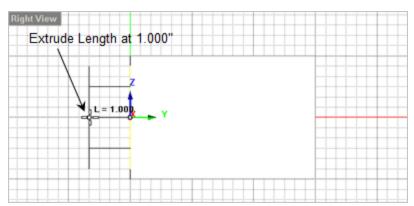


The extruded profile is shown below.

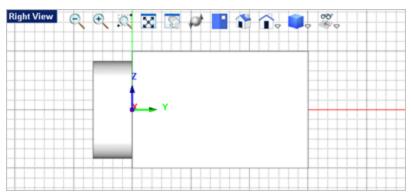


- 8. Now we will move the extrusion so that it intersects the body. Activate the <u>Graphic</u> Manipulator from the Status Bar.
- 9. Select the extrusion mesh solid to display the Graphic Manipulator 🚾.
- 10. Pick the Green Y axis of the Graphic Manipulator and enter 0.25 in the input field and press <Enter>. The extrusion will move in the Y direction the amount specified.

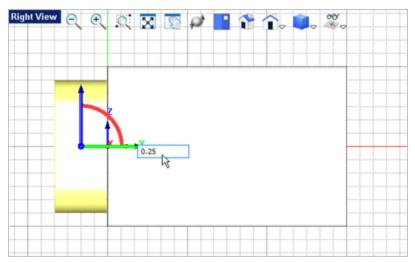


- 11. Press <Enter> again to accept the move.
- 12. Now activate the solview 1 window and from the Mesh Modeling tab select the Subtract Mesh
- 13. For the first mesh solid select the Body.

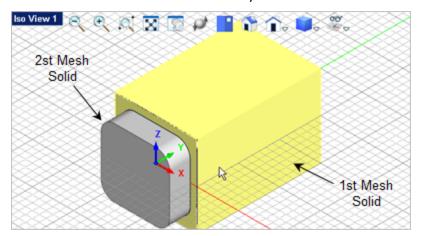


14. For the second mesh solid select the extrusion. The extrusion will be subtracted from the Body as shown below.

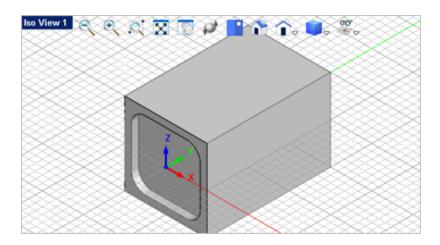


- 15. Now activate the Top View.
- 16. Select the View menu from the View Toolbar and then select Ghosted Display. Note: The View Toolbar will only display in the active viewport.

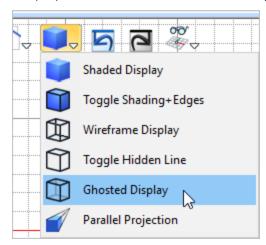

- 17. Now from the Curve Modeling Curve Modeling tab select the Polyline command.
- 18. You will select the grid points shown below to define a closed polyline. The first grid point is the same as the last grid point.

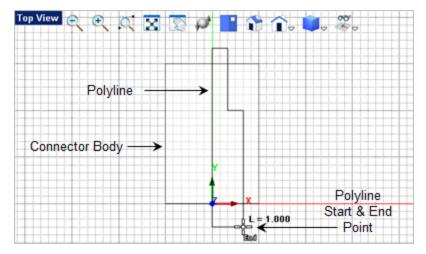

In Iso View 1 the closed curve polyline looks like this:

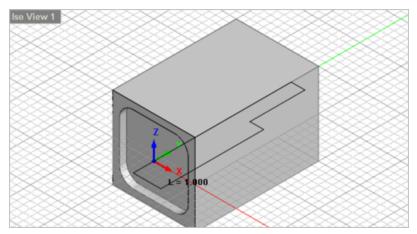

19. Now select the closed curve polyline you just created and from the Mesh Modeling






tab select the Revolve Mesh

command.

20. The command line Command sprompts you to "Pick start point if axis of revolution or enter coordinates x,y and z". Pick the grid points shown below for the start and end points of the axis of revolution.

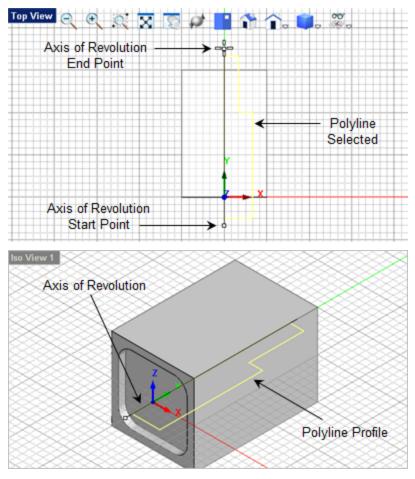


The Revolve mesh solid is created.

21. Now you want to subtract it from the Body. From the Mesh Modeling tab select the




Subtract Mesh

- 22. For the first mesh solid select the Body.
- 23. For the second mesh solid select the Revolve.

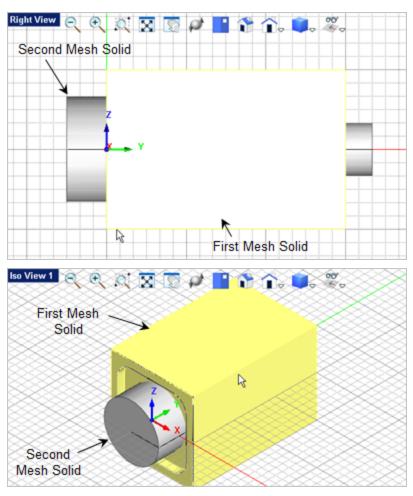


The Body is updated and should look like the image below.

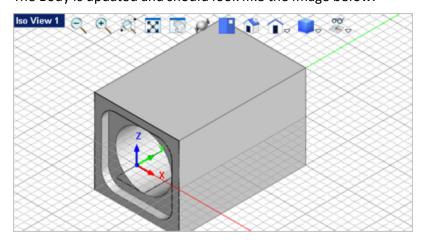

## 7.6.3 Model the Top Access


Model the Top Access

- 1. Activate the Top View
- 2. Select the View menu from the View Toolbar and then select Wireframe Display. Note: The View Toolbar will only display in the active viewport.

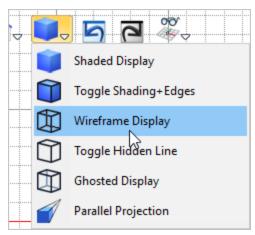


From the Curve Modeling tab select the Rounder Rectangle Command.

3. For the first corner of the rectangle, select the upper right grid point location shown below or type 1.25,1.25,0 in the Command Prompt Command and press <Enter>.

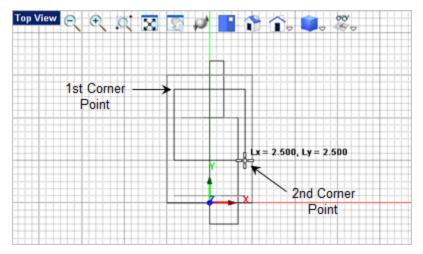

- 4. For the second corner of the rectangle, select the lower left grid point location shown below or type 1.25,1.5,0 in the Command Prompt Command and press <Enter>.
- 5. Now for the corner radius select the grid point shown below or enter 0.5 in the Command Window Command and press <Enter>.

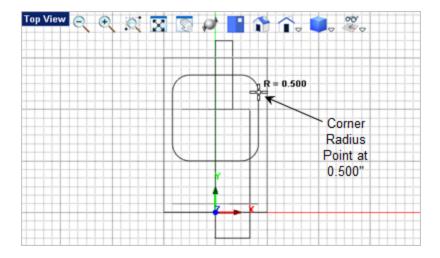


- Now select the rounded rectangle you just created and from the Mesh Modeling tab, 6.


select the Extrude Mesh

command.


7. Move the cursor down to the Front View and select the Extrude Length at the 2.000 Grid point or enter 0,0,2 in the command window Command  $\leq$  and press <Enter>.

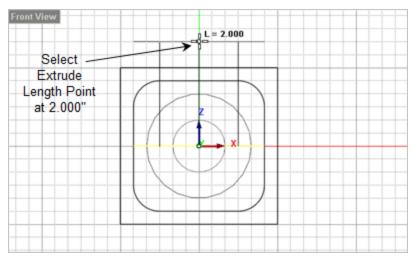


- Now activate Iso View 1 and from the Mesh Modeling tab select the Subtract Mesh
  - command.
- For the first mesh solid select the Body.

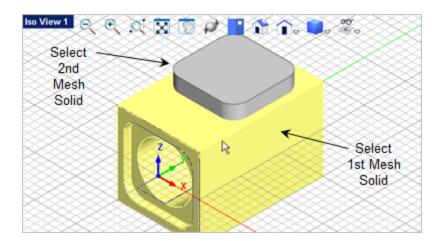


10. For the second mesh solid select the extrusion. The extrusion will be subtracted from the Body as shown below.

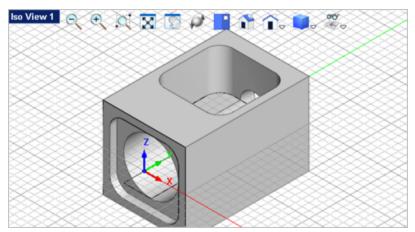


- 11. The top access has an additional pocket near the front of the body that needs to be modeled.
- 12. Activate the Top View again.
- 13. From the Curve Modeling tab select the Rounded Rectangle command.
- 14. For the first corner of the rectangle, select the lower left grid point location shown below or type -1,0.5,0 in the Command Prompt Command and press <Enter>.

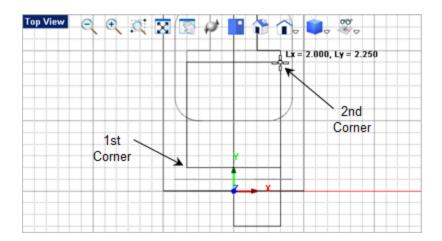


- 15. For the second corner of the rectangle, select the upper right grid point location shown above or type 1,2.75,0 in the Command Prompt Command and press <Enter>.
- 16. Now for the corner radius select the grid point shown below or enter 0.5 in the Command Window and press <Enter>.

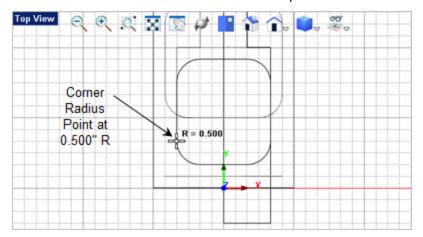

- 17. Now select the rounded rectangle you just created and from the Mesh Modeling tab,
  - select the Extrude Mesh command.
- 18. Move the cursor down to the Front View and select the Extrude Length at the 2.000 Grid point or enter 0,0,2 in the command window Command and press <Enter>.

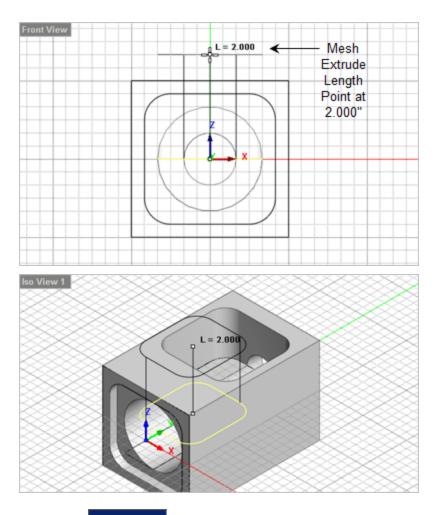


- 19. Now from select the extrusion you just created to display the Graphic Manipulator.
- 20. Click on the Blue Z Axis arrow and enter 1.25 Command to translate the extrusion upward as shown in the illustration below.

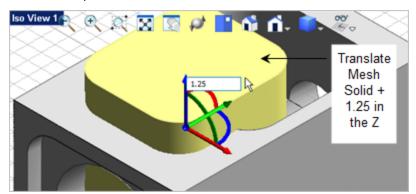



- 21. From the Mesh Modeling tab select the Subtract Mesh command.
- 22. For the first mesh solid select the Body.
- 23. For the second mesh solid select the extrusion you just created.

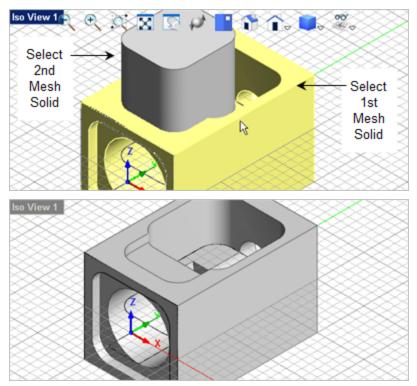

### 7.6.4 Model the Mounting Holes

## Model the Mounting Holes

In this step we will model the tap drill mounting holes in the front and top access. Note: For machining purposes only a Point is required to perform a hole making operation. We are only modeling the holes here for learning purposes.

- 1. Activate the Front View
- 2. To locate the center of the first hole you will draw two lines on the grid. From the




Draw the two lines shown below. The first starts at the center and ends at the top 3. left corner. The second passes diagonally across two grid points bisection the first line at 90 degrees.




Now from the Curve Modeling Curve Modeling tab select the Circle

command.

For the circle center, activate the Intersect Object Snap K from the Status Bar and 5. then move the cursor over the intersection of the two lines until you see Int display next to the cursor and then select the intersection point.

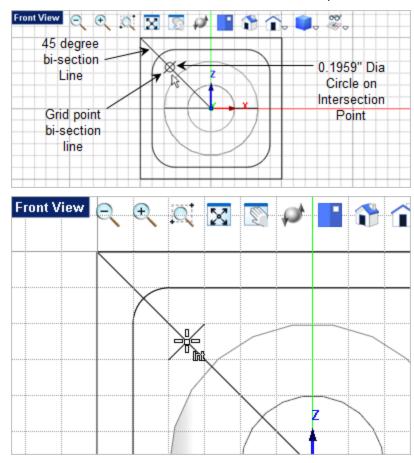


- For the circle diameter enter 0.1959 in the Command Window Command and press <Enter>. This is the #7 drill diameter for a 1/4-20 tap.
- Now you need 4 of these holes. Let's use the mirror command to create the other three. First select the circle you just created, then go to the Modify / Transform

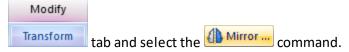


Note that the Modify / Transfer tab ONLY appears when an entity is selected!

8. From the Mirror selected objects dialog, the Number of selected objects should be 1, The Mirror Plane should be YZ Plane and box next to Create Copy should be checked.

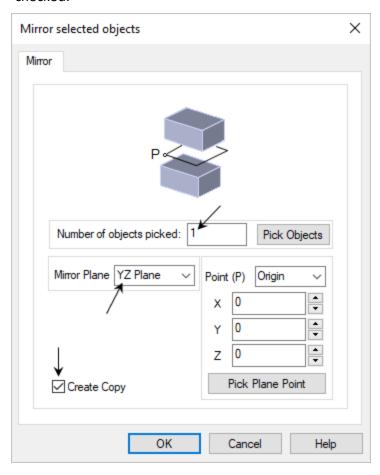


9. Pick OK from the dialog and the circle will be mirrored and both circles should be selected automatically. If not, select both of the circles and pick the command again.

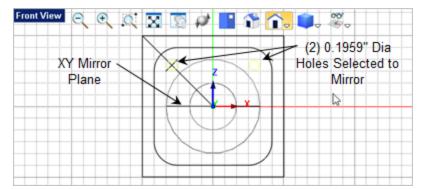

 This time from the Mirror selected objects dialog, the Number of selected objects should be 2, The Mirror Plane should be XY Plane and box next to Create Copy should be checked.


Note: You do not have to select the geometry first, as you can see this dialog has a Pick Objects button.

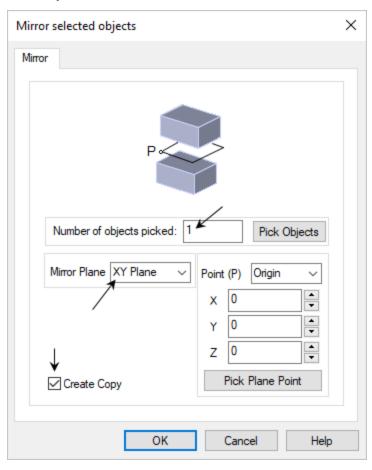

11. Now with all 4 circles drawn, all 4 should be selected automatically. If not select them now.




- 12. Now go to the Mesh Modeling tab and select the Extrude Mesh
- 13. For the extrude length move the cursor to the at 0.500" in the positive Z direction or simple enter 0.5 in the command window and press <Enter>.

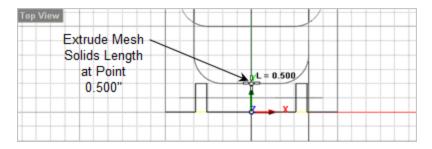


14. Now let's subtract the extrusions from the body to create the holes. Go to



15. For the first mesh solid select the body.

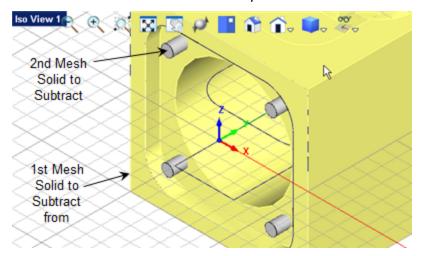


- 16. For the second mesh solid select one of the extrusions to subtract it.
- 17. Press the <Enter> key to repeat the command. This time select the body and then the second extrusion.
- 18. Repeat the command two more time until all 4 extrusions are subtracted from the body as shown below.

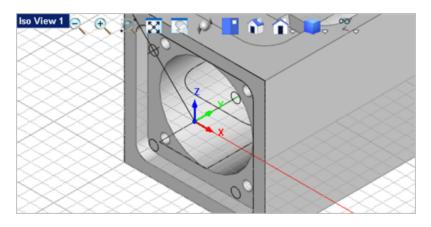

- Now we have 2 additional holes of the same diameter located in the top access.
   Activate the Top View
- 20. Let's change the display mode for the Top View. Select the Display menu from the View Toolbar in the Top View and select Toggle Shaded + Edges.
- 21. To locate the first hole, go to the Curve Modeling Curve Modeling tab and select the

Line command.


22. Pick the two grid points shown below for the start and end points of the line. The line should bi-sect the two grid boxes from left to right as shown below.

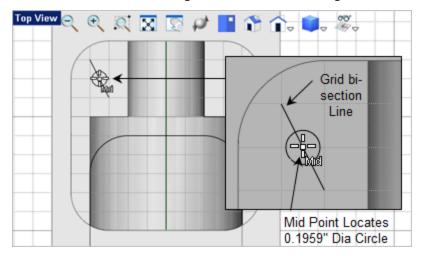


23. Now from the Curve Modeling Curve Modeling tab select the Circle command.

Modify


24. From the Stats Bar activate the Mid Point Object Snap and deactivate all of the others.

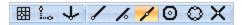

- 25. For the center point of the circle select the mid point of the line you just created shown in the illustration above.
- 26. For the circle diameter enter 0.1959 in the Command Window and press <Enter>.
- 27. Now select the circle you just created and go to the Mirror command.

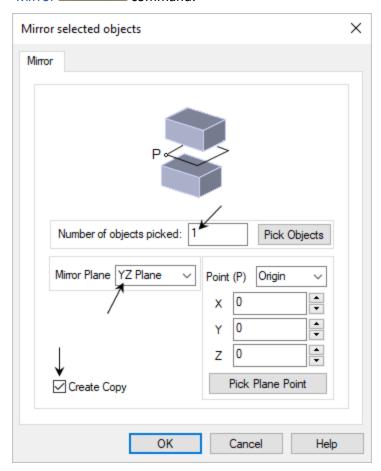


- 28. From the Mirror select objects dialog the Number of selected objects should be 1, the Mirror Plane should be YZ Plane and the Create Copy box should be checked.
- 29. Now pick OK to mirror the circle.
- 30. Both circles should now be selected. If not select them both now.

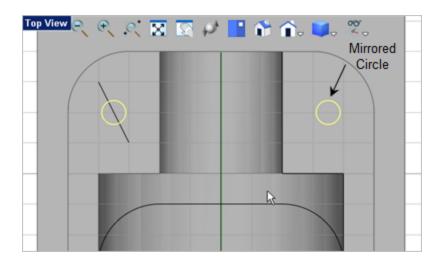


31. With the circles select go to the Mesh Modeling tab and select the Extrude Mesh




- 32. From the Status Bar activate the Grid Object Snap and deactivate the others.
- 33. Move the cursor down to the extrusion length to 0.500" in the negative Z direction or simply enter 0.5 in the command window and press <Enter>.

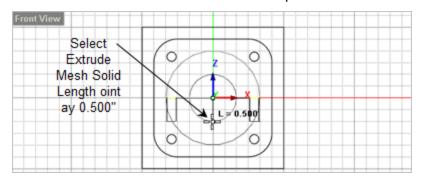

- 34. Now select the two extrusions and go to the Right View. Make sure the Graphic Manipulator is toggled On.
- 35. From the Graphic Manipulator, pick the Blue Z Axis arrow and then enter 0.25 in the input window and press <Enter>. The extrusions will translate up in the Z axis 0.25".

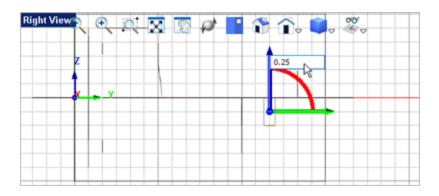

36. Now subtract them from the body. From the Curve Modeling Curve Modeling tab

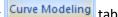




select the Subtract Mesh

command.

37. For the first mesh solid select the body. For the second mesh solid select one of the extrusions.

6

38. Press <Enter> to repeat the command and subtract the second extrusion from the body.

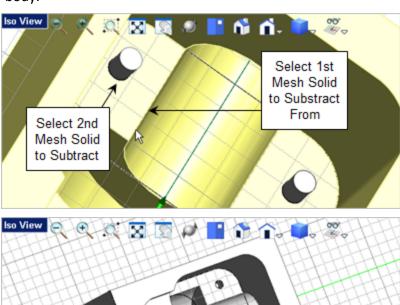


### 7.6.5 Modify the Top Access


## Modify the Top Access

In this step we need to make a few modifications to the top access. The first is an extruded cut at the back of the access. The second is a revolved cut.

- 1. Activate the Top View
- 2. From the Curve Modeling tab select the Rounded Rectangle Command.
- 3. For the first and second corners of the rectangle select the grid points shown below.

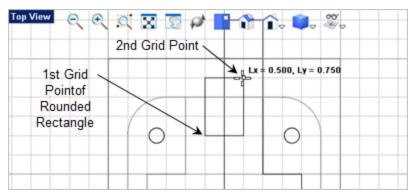


- 4. For the corner radius, enter 0.125 in the command window Command and press <Enter>.
- 5. Now select the rectangle and from the Mesh Modeling tab select the Extrude Mesh tab select the Extrude Command.
- 6. Move to the Front View and drag the extrude length to 1.750".

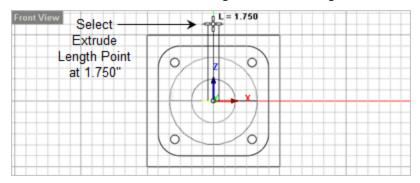




- 7. Now go to the Mesh Modeling tab and select the Subtract Mesh command again.
- 8. For the first mesh solid select the body. For the second mesh solid select the

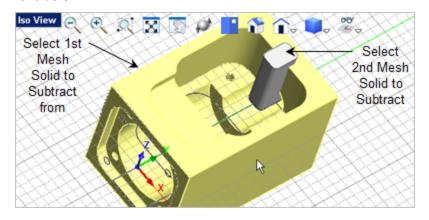

9. For the second modification, got to the Top View and from the Curve Modeling tab select the Rectangle command.


10. Select the two corner grid points shown below.

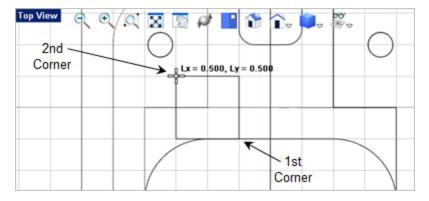

11. Now we need to fillet one of the corners. From the Curve Modeling tab select the Fillet Curve command.

12. In the command prompt command enter 0.125 for the fillet radius and press <Enter>.


13. Now select the top and left side of the rectangle to fillet the upper left corner as shown below.

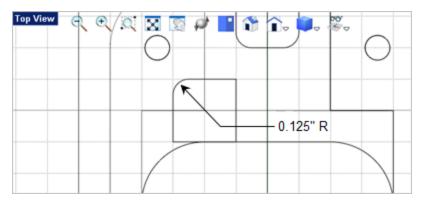


14. We need to revolve this, so select the closed rectangular profile, go to the




15. For the axis of revolution, select the two grid points shown below.

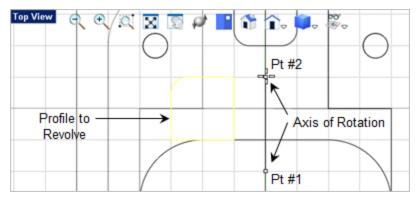

16. Now subtract the revolve from the body. From the Mesh Modeling tab select the

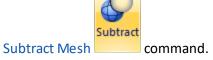

17. For the first mesh solid select the body and for the second select the revolve.

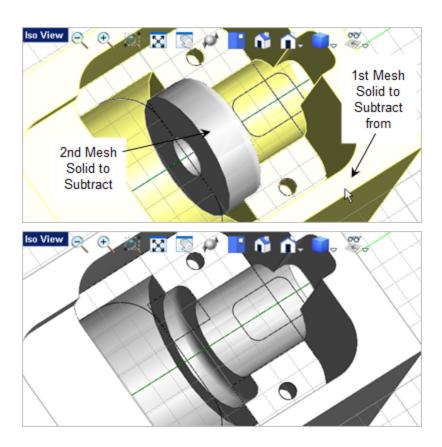


### 7.6.6 Create Section Curves


# Create Section Curves

Your almost done!! In this step we want to create some section curves in the Top and Right side views. The section will appear on the XY Plane (for the Top view) and on the ZY Plane for the Right View.


- First lets move all of our curves onto a separate layer and hide them. From the Modeling Aids tab, select the From the command. This icon is located on the Selection pane of the Modeling Aids tab.
- 2. From the Object selection filters dialog, check the boxes next to Point, Line, Polyline, Arc, Circle and Curve and then pick OK. All of the curve related entities will now be selected.

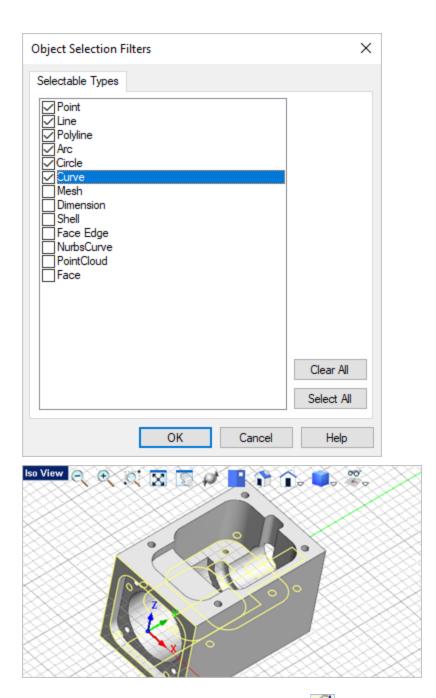


3. From the Status Bar select the Properties icon to display the Properties Manager.

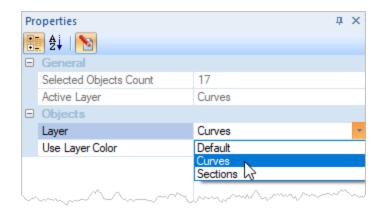


- 4. This dialogs reports that a total of 17 entitles are selected. In the Objects section drop down the menu for Layer and select Curves from the list of layers.
- 5. Now from the Status Bar select the Layer Manager icon 💆.

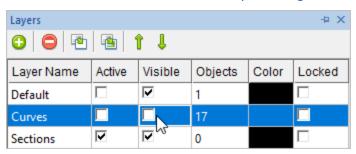


- 6. From the Layer Manager, under the Active column, check the box to make the layer named Sections the active layer.
- 7. You can close the Properties and Layer managers by allowing them to auto-hide or pick the "X" icon to close them.
- 8. Now we're ready to create the section curves. First activate the Sections are generated for the currently active view.
- 9. Go to the Curve Modeling tab and select the Section Curves command. This will display the Create section curves dialog.

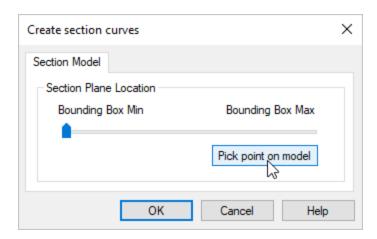


- 10. If you move the slider you will see a highlight of the section display in all views.
- 11. Now from the dialog select the Pick point on model button. The dialog minimizes allowing you to select a point. From the Front View, select the XY origin grid point to locate the section.

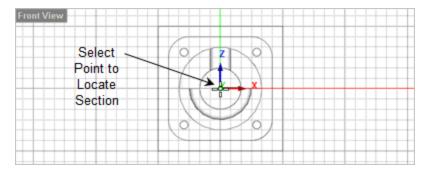



- 12. The dialog reappears and you can pick OK to close it.
- 13. Now activate the Right View
- 14. Go to the Curve Modeling tab and select the command again.
- 15. From the Create section curves dialog, select the Pick button and then select the same grid point, 0,0,0 origin in the Front View.
- 16. You will now notice that section curves were created in both the XY Plane and the YZ Plane.

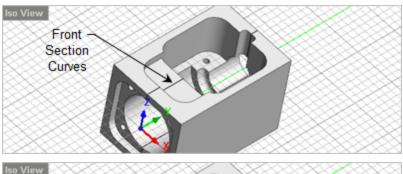

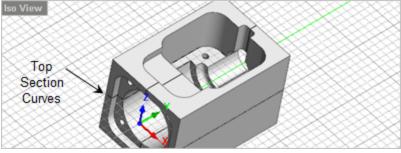

Congratulations!!! You completed the exercise!!

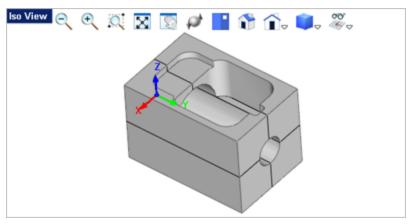


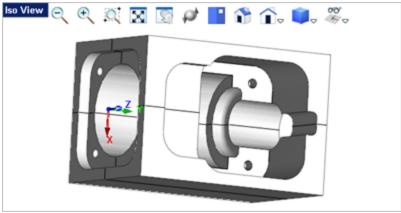

17. Save the file as Connector\_Block\_Completed.vcp.

# 7.7 #7: Model a Daisy Decor

In this fun exercise you will use solid (or mesh) spheres, non-uniform scaling, polar arrays, sectioning and offsetting to produce this simplistic decorative design. The offset curves and rectangle are used during machining as containment and stock definition.

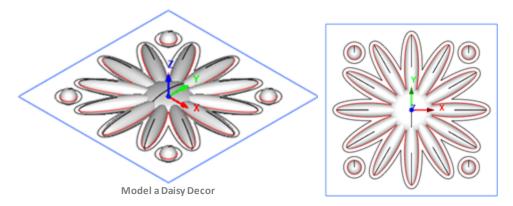

# What you will learn:

In this exercise you will perform the following VisualCAD tasks:


- 1. <u>Create new Layers.</u>
- 2. Model & Scale the Body.
- 3. Model & Scale the Pedal.
- 4. Ghosted Display Mode.
- 5. Polar Array the Pedal.
- 6. Additional Spheres Accents.
- 7. <u>Create & Trim Section Curves.</u>
- 8. Create Offset Curves.
- 9. Create the Stock Boundary.

#### 7.7.1 Create new Layers


# Create new Layers

In this step you will use the <u>Layer Manager</u> to create some new layers and then set the active layer.


- 1. Display the <u>Layer Manager</u>. You can pick the <u>Layer Manager</u> icon located on the Status Bar.
- 2. From the <u>Layer Manager</u> select the Add Layer icon to add a new layer.

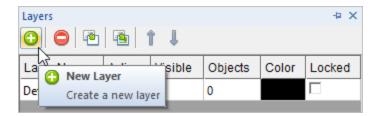


3. Now lets rename the new layer to Curves. First double-left-click in the Name field to activate it, and enter Curves as the new layer name.

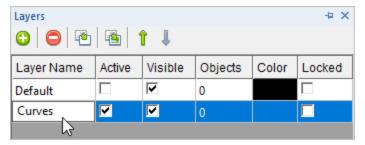

4. Repeat the procedure to create a new layer, this time named Sections.

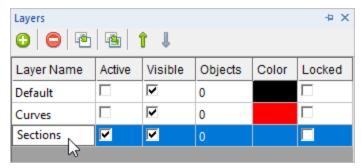


- 5. Now repeat the procedure again, this time named Stock.
- 6. Now let's change the color of a couple of the new layers. In the Color field left-click on the color box for the layer named Curves. This will display the Colors dialog.
- 7. Accept the default color Black and then pick OK to close the dialog.

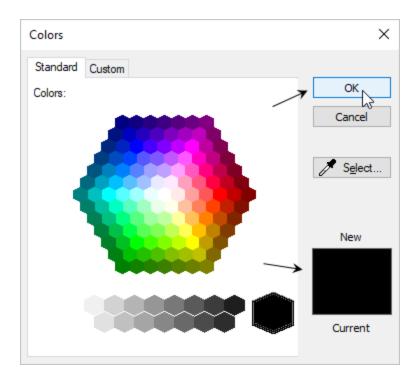


- 8. If the <u>Layer Manager</u> keeps Auto-Hiding to the left side of the display, select the Auto Hide pin icon at the top of the Layer Manager. You can also see that the layer named Curves was changed to color black.
- 9. Now let's change the color of another layer. In the Color field left-click on the color box for the layer named Stock. Again, this will display the Colors dialog.



 This time select the Blue color and then pick OK to close the dialog. You can use different color if you wish. If you have Auto Hide pinned, the <u>Layer Manager</u> will stay displayed.

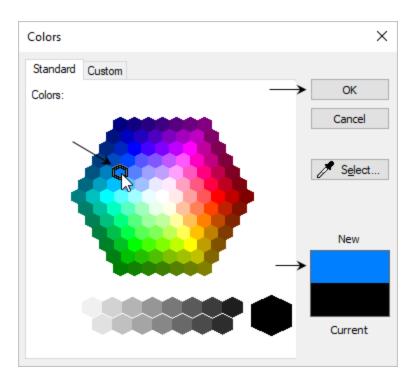

11. This time let's set the Active Layer. In the Active column, check the box for the layer named Default. and then unpin the <u>Layer Manager</u> to close it.

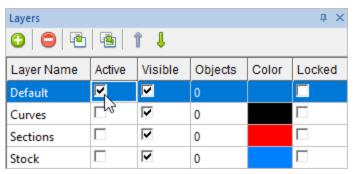

## 7.7.2 Model & Scale the Body


# Model & Scale the Body

In this step you will model the center body using a solid sphere and non-uniform scaling. Note: You can replace the Solid commands with Mesh commands if desired.


- 1. Activate the Top View Top View tab by selecting anywhere in the viewport.
- 2. Select the <u>Solid Modeling</u> tab from the top Ribbon Bar.




- 3. Now select the Sphere command.
- 4. In the <u>Status Bar</u> make sure the <u>Grid Snap</u> is On .
- 5. For the center point select the grid point at (0,0,0) or just enter the coordinates 0,0,0 in command input bar Command.

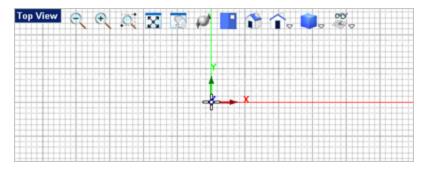

6. For the sphere radius, enter 3,0,0 Command or select the corresponding grid point and press <Enter>.

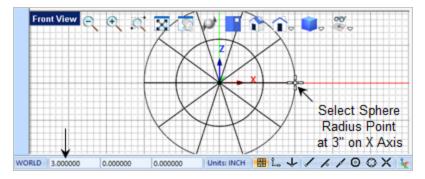


7. Select the solid sphere you just created.

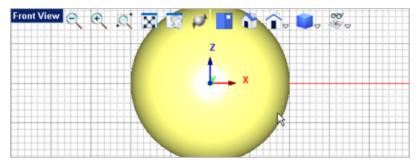


8. You see the Modify / Transform tab Transform appear on the right end of the Ribbon Bar. It ONLY appears when an entity is selected. Select the Transform tab.


Modify

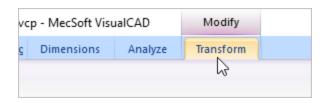


- 9. Select the Scale command.
- 10. From the Scale Selected Objects dialog, select the Non-Uniform Scaling option.

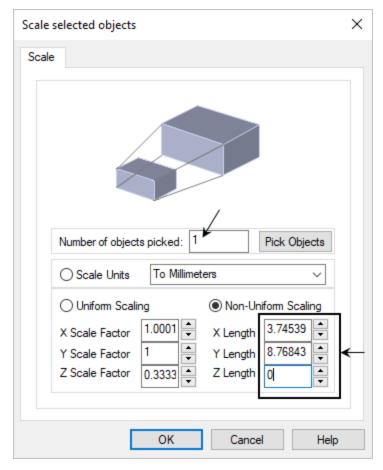

- 11. Set the X Length to 6, Y Length to 6 and the Z Length to 2.
- 12. Pick OK and the sphere is scaled as shown below.
- 13. Now press <Enter> to accept the modification.
- 14. Let's move the scaled sphere up to the origin. First make sure the <u>Graphic Manipulator</u> is On. The icon is located on the Status Bar .
- 15. Now select the sphere.
- 16. Select the Blue Z arrow to display the input field, enter 2.0 and press <Enter>. The sphere will move up in the positive Z Axis to the 0,0,0 origin as shown below.

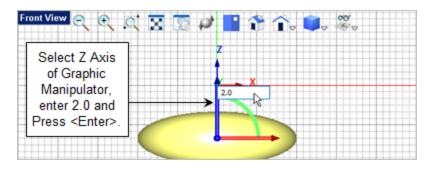

17. Press <Enter> again to accept the move.

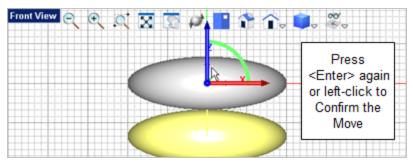

#### 7.7.3 Model & Scale the Pedal


### Model & Scale the outer Pedal

In this step you will model and scale one of the outer pedals, again using a solid sphere and non-uniform scaling. Note: You can replace the Solid commands with Mesh commands if desired.

1. Activate the Top View Top View tab by selecting anywhere in the viewport.




- 2. Form the Solid Modeling Solid Modeling tab select the Sphere comman
- 3. In the <u>Status Bar</u> make sure the <u>Grid Snap</u> is On ...
- 4. For the center point select the grid point at (0,6,0) or just enter the coordinates 0,6,0 in command input bar Command and press <Enter>.

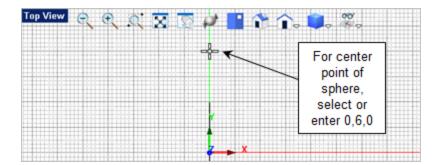


For the sphere radius, enter 4.5 in the command input window Command 5. and press <Enter> or select the grid point located at 0,1.5,0.




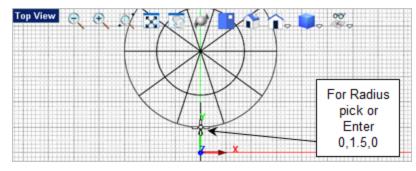

Here is what you part should look like from the Front View:

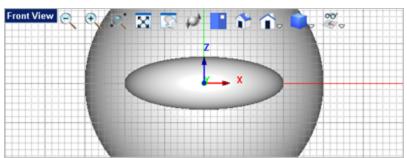


From Iso View 1, Iso View 1 select the solid sphere you just created. 6.

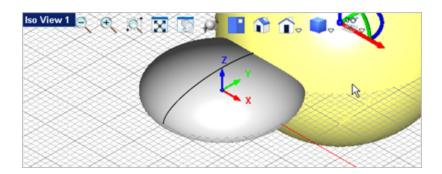





- 7. Select the Transform tab from the ribbon bar.
- 8. Select the Scale Scale command.
- 9. From the Scale Selected Objects dialog, select the Non-Uniform Scaling option.

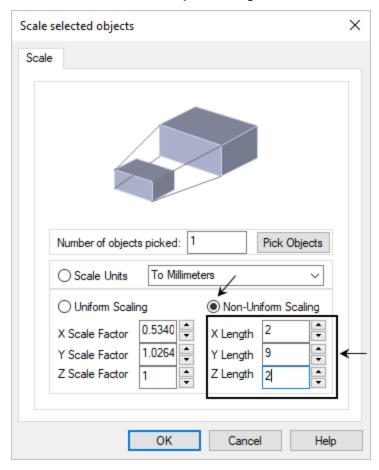


- 10. Set the X Length to 2, Y Length to 9 and the Z Length to 2.
- 11. Pick OK and the sphere is scaled as shown below.
- 12. Now press the <Enter> key to accept the modification.
- 13. Let's move the scaled sphere into position along the Y Axis. First make sure the Graphic Manipulator is On. The icon is located on the Status Bar.
- 14. From the Front View Front View, select the Red X arrow to display the input field, enter 3.5 and press <Enter>.

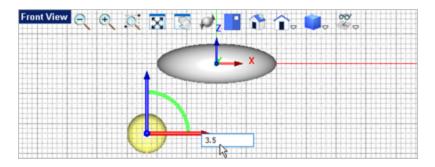

15. Press <Enter> again to confirm the move and the sphere will move up to the Z 0 location as shown below.

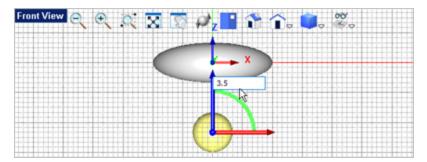

- 16. Now select the sphere again.
- 17. Select the Blue Z arrow to display the input field, enter 3.5 Command and press <Enter>.
- 18. Press <Enter> again to confirm the move and the sphere will move to the X 0 location. If you activate the Right View your part should look like the image below.

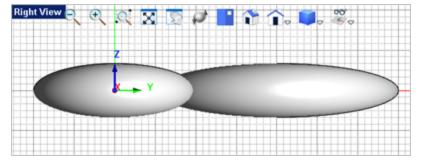


### 7.7.4 Ghosted Display Mode

Change the Top View to Ghosted Display


For spheres drawn from the top view, it is best viewed using the ghosted display.

1. Activate the Top View Top View tab by selecting anywhere in the viewport.

2. Select the View menu from the View Toolbar and then select Ghosted Display. Note: The View Toolbar will only display in the active viewport.

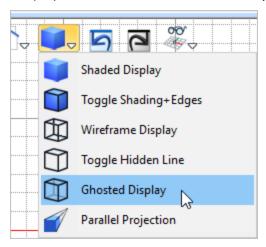

The display should now look like this:

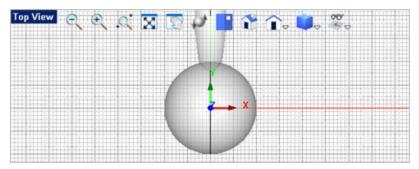


### 7.7.5 Polar Array the Pedal

# Create the Polar Array

In this step you will create a polar array of the pedal sphere we just created.


- 1. Activate the Top View Top View tab by selecting anywhere in the viewport.
- 2. Select the solid sphere pedal you just created in the previous step.

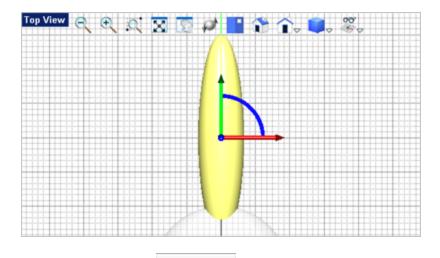

3. Select the Transform tab from the ribbon bar.

Modify


4. Select the Polar Array Polar Array command. The Polar array selected objects dialog will display.

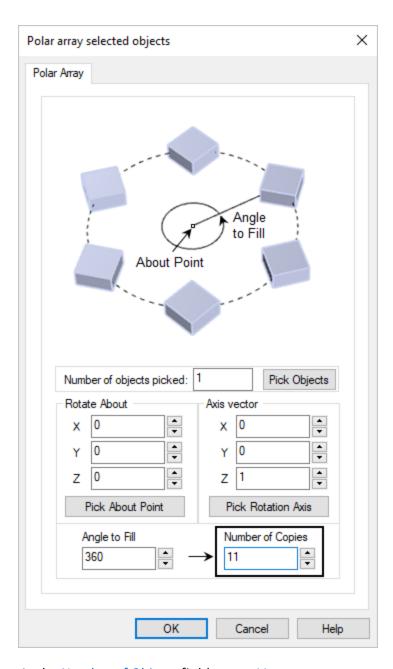

- 5. In the Number of Objects field, enter 11.
- 6. The remaining options in the dialog should use the default values shown in the dialog above.
- 7. Pick OK from the dialog to create and preview the polar array.

8. Press <Enter> to accept the polar array. Your drawing should look like the images

Undo

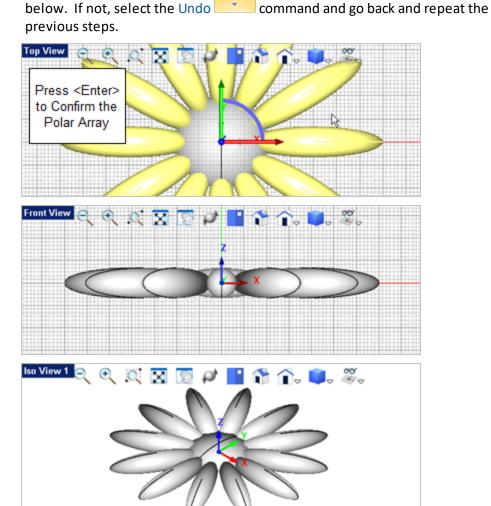

### 7.7.6 Additional Spheres


### Create the 4 additional Spheres

In this step you will create the four spheres located in the outer corners of the design. Note: You can replace the Solid commands with Mesh commands if desired.


1. Activate the Top View Top View tab by selecting anywhere in the viewport.




- 3. In the <u>Status Bar</u> make sure the <u>Grid Snap</u> is On ...
- 4. For the center point select the grid point at (-8,-8,0) or just enter the coordinates 8,-8,0 in command input bar command and press <Enter>.
- 5. For the sphere radius, enter 1.0 in the command input bar Command and press <Enter> or select the grid point located at -8,-8,0 shown below.

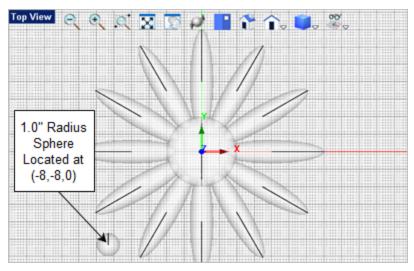

- 6. Press <Enter> to repeat the Solid Sphere command.
- 7. Create the three additional spheres located at the coordinates shown in the illustration below.

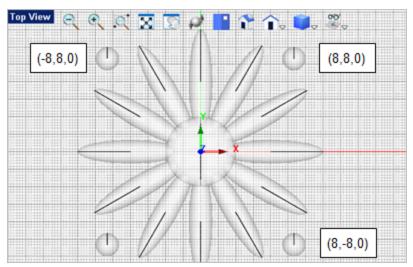

Your drawing should look like this:

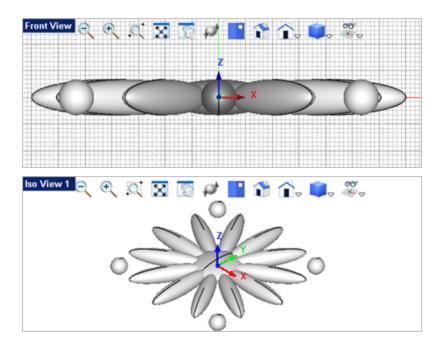


#### 7.7.7 Create & Trim Section Curves


## Create Section Curves

In this step we will create section curves that lie on the XY plane. Section curves are useful for creating offset boundaries which in turn can be used for toolpath containment.


1. Open the <u>Layer Manager</u> and set the Active Layer to Sections. Refer to the previous steps for displaying and using the <u>Layer Manager</u>.

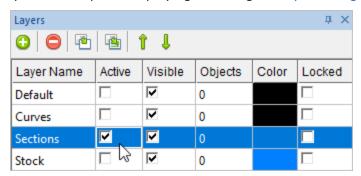


- 2. Section curve are created in the plane of the active layer. We want the section curves to be generated on the XY plane so activate the Top View tab by selecting anywhere in the viewport.
- 3. Form the Curve Modeling Curve Modeling tab select the Section Curve command. The Create section curves dialog will display.

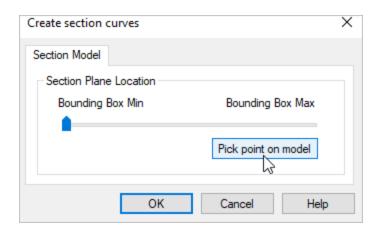


- 4. If you move the slider you will see dynamically where the section curves lie. In this case, with the Top View active, moving the slider will display section curves dynamically in the XY plane and in the Z Axis.
- 5. We want to precisely locate the section plane so select the Pick point on model button from the dialog.
- 6. Then in the Front View Front View pick the Z 0 grid point or simply enter 0,0,0 in the command input bar Command and press <Enter>. The section curves will be created and displayed in all four viewports.

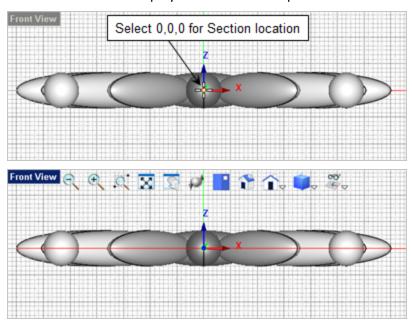

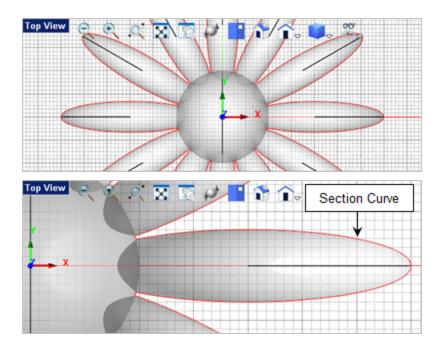

7. Open the <u>Layer Manager</u> and set the Active Layer to Sections. Refer to the previous steps for displaying and using the <u>Layer Manager</u>.

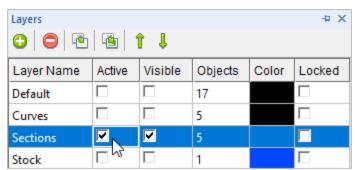


In the following steps we will trim our section curves and merge them.


8. From the Top View , scroll to zoom in on the center where the section curves from the body and the pedals overlap each other.




- 9. From the Curve Modeling Curve Modeling tab, select the Trim
- 10. Pick on the curve where you want it to be trimmed away.

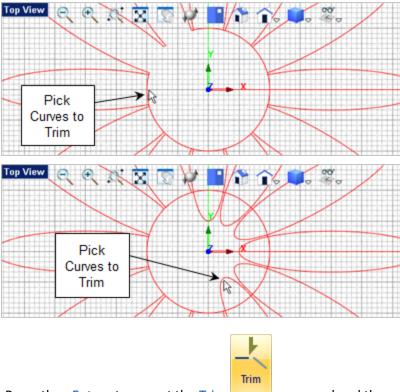

- 11. Press the <Enter> to repeat the Trim command and then pick another location to trim.
- 12. Repeat this procedure until all of the curves are trimmed as shown below.

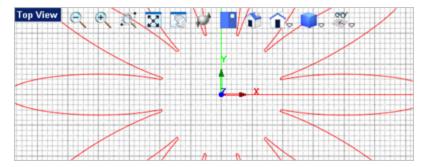

13. Now scroll to zoom out to see all of the curves.

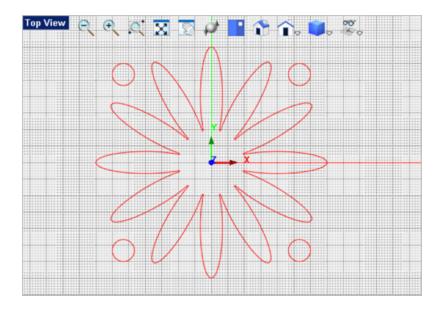

14. Press <Ctrl+A> to select all of the curves.




15. Now from the Curve Modeling command. This will merge all of the curves into one curve. This makes it easier to work with. Only curves that are joined end to end will be merged. Separate curves such as those created from the section of the outer spheres will remain separate curves.

#### 7.7.8 Create Offset Curves



In the following steps you will create Offset curves from your Section Curves.
 Creating offset curves will also aid you during machining. For example, if you do not want to rough the entire stock, you can use section, offset or any other curve boundaries to limit/contain your toolpaths.

Open the Layer Manager and set the Active Layer to Curves and then make all 2. other layers hidden. Refer to the previous steps for displaying and using the Layer Manager.

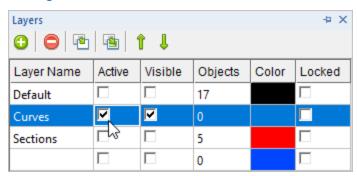


Now, select the main section curve, then go to the Curve Modeling 3.




Offset tab and select the Offset

From the Top View move the cursor towards the outside of the curve so that you see the offset direction indicator point toward the outside. **DO NOT** pick a point!

command.

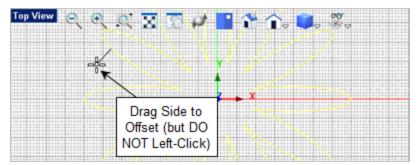


Now with the curve offset direction displayed enter 0.5 in the command input bar Command sand press the <Enter> key. The curve will be offset toward the outside by 0.5 inches.

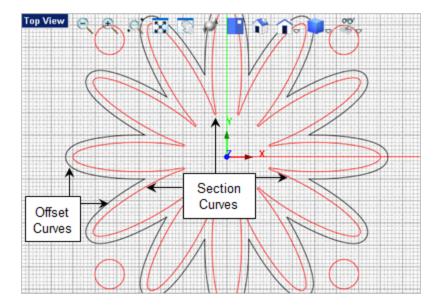

6. Press the <Enter> key to repeat the Offset command. This time select the section curves from one of the outer spheres, drag the cursor to indicate the offset direction and press <Enter> again. The offset value will default to the last value entered.

Offset

7. Repeat the command to create offset curves for the other 3 remaining section curves.

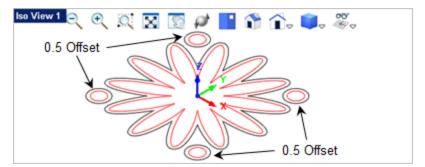


### 7.7.9 Create the Stock Boundary

Create the Stock Boundary Rectangle

In this step you will create a 24" x 24" rectangle around the part. This can be used later during machining to help define the stock dimensions.


1. Open the <u>Layer Manager</u> and set the Active Layer to Stock. Refer to the previous steps for displaying and using the <u>Layer Manager</u>.

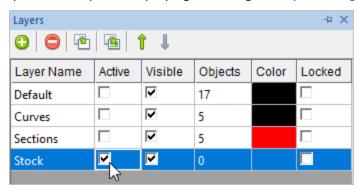

2. Activate the Top View Top View tab by selecting anywhere in the viewport.



- 3. Form the Curve Modeling command.
- 4. For the first corner of the rectangle, you can select the grid point shown below or enter -12,-12,0 in the command input bar Command and press <Enter>.

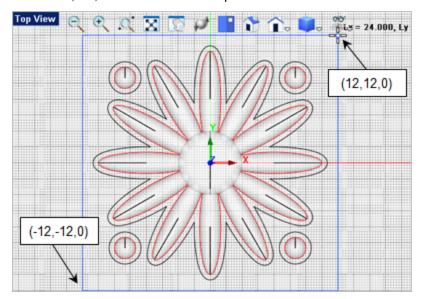


- 5. For the second corner of the rectangle, you can select the grid point shown below or enter 12,12,0 in the command input bar Command and press <Enter>.
- 6. Save the file as Daisy\_Decor\_Completed.vcp.

Congratulations, you have completed this exercise!

## 7.8 #8: Using Construction Planes

In this exercise you will learn how to use Construction Planes (C-Planes) to navigate and add features and text to your 3D models. C-Planes are also critical in learning how to orient imported parts for machining. Thus learning how to orient C-Planes and how to orient parts with the use of C-planes is critical knowledge for all VisualCAD users.

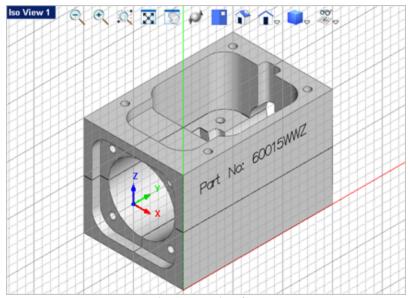

**Using Construction Planes** 

# What you will learn:

In this exercise you will perform the following VisualCAD tasks:


- 1. Orient the C-Plane.
- 2. Draw on a Face.
- 3. Other C-Plane Options.
- 4. Orient the Part.

#### 7.8.1 Orient the C-Plane

## Orient the C-Plane

In this step we'll show you how to orient the Construction Plane (C-Plane).

1. First if you have completed and save the part model from <a href="Exercise #5 Connector">Exercise #5 Connector</a>
Block, open that part now. It is shown below:

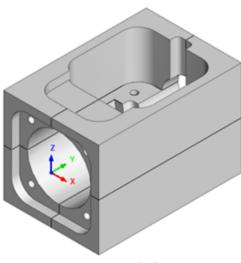

**Connector Block** 

2. Now select the Modeling Aids tab. On the very right end of the ribbon bar you will find the C-Plane pane.




- 3. From the Modeling Aids Modeling Aids tab select the C-Plane to 3D Face 


  command. 

  ✓ To Face
- 4. The command prompt says: "Pick a flat area". Select the right side face of the part and you will see that the C-Plane snaps to that face.

If the Grid is not visible, select Hid / Show Grid from the View Toolbar.

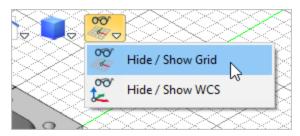


- It is best to have the Construction Plane Grid visible. This allows you to better keep track of where the C-Plane is located and oriented.
- 5. You can now see that the C-Plane and the Grid is alined with the right side flat face of the part. You will notice that the C-Plane origin is position at the point on the flat face you selected.

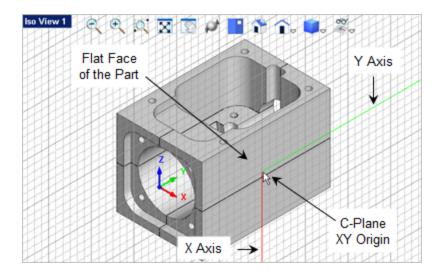


6. You can now draw on the C-Plane (see <u>Text on a Part Face</u> for more information).




- 7. For the center point, toggle on the Grid Object Snap and select the origin point or simply enter 0,0 in the command window and press <Enter>.
- 8. Now select a point on the diameter of the circle.

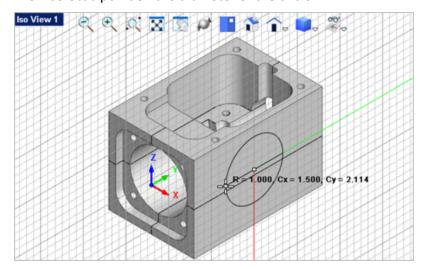

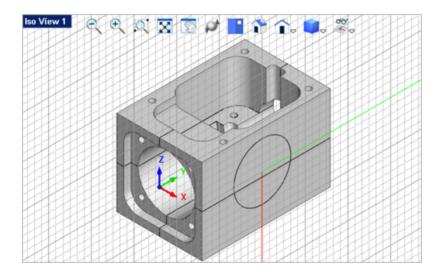


- 9. You can also move the C-Plane origin. From the Modeling Aids Modeling Aids tab
  - select the C-Plane Origin command.
- 10. The command prompt says: "Pick origin point or enter coordinates x,y and Z" Enable the End Point Snap from the Status Toolbar and then select the bottom right end point of the face.

You will see that the C-Plane origin and the Grid is moved to this point.

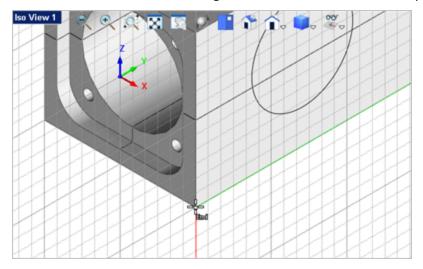


11. If you need the X Axis of the C-Plane aligned horizontally across the bottom of the part you can select the Rotate C-Plane about Axis Rotate command. It is also located on the Modeling Aids Modeling Aids tab.


12. The command prompt says: "Enter axis to rotate about and angle to rotate by (eg: X,45)" We want to rotate the Z Axis 90 degrees so enter Z,90 in the command window Command and press <Enter>.

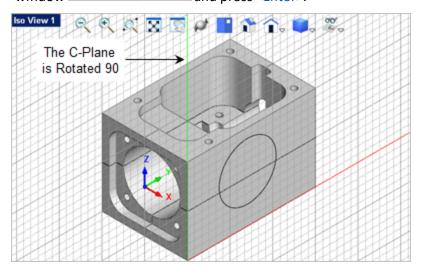


- 13. Now what if you want the view orientation aligned with the C-Plane?
- 14. Just right-click anywhere in the view to display the View pop-up menu and select the Align to C-Plane command. This menu contains many Viewport related commands.

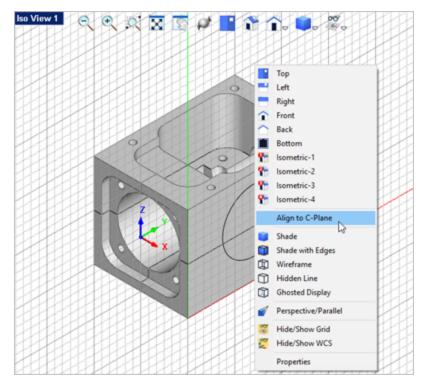

15. With the C-Plane aligned with the active Viewport pay close attention to where the origin of the C-Plane is:

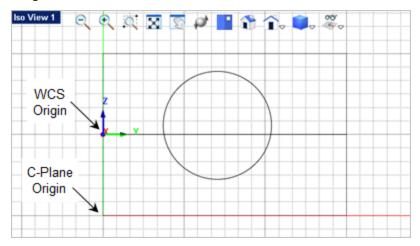



- 16. Now you may want to come back to the C-Plane later so let's save it. From the Modeling Aids tab select the Save C-Plane command.
- 17. In the C-Plane Name dialog enter a unique name for the active C-Plane and then pick OK.

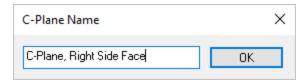


- 18. The active C-Plane is now saved with the part file.
- 19. Now let's change the C-Plane back to the default top view. From the Modeling Aids



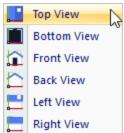


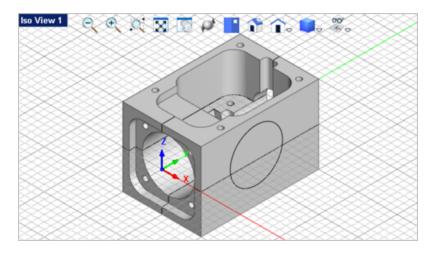


- 20. Here is an easier way to align the C-Plane to the face AND align the XY Axis of the C-Plane at the same time. From the Modeling Aids Modeling Aids tab select the C-Plane by 3 Points By 3 Pts command.
- 21. The first point selected will be the origin, so make sure the End Point Snap is toggled on.
- 22. Then select the bottom left corner end point of the right side face of the part. **Note**: Do Not pick until you see the "End" indicated at the cursor location.

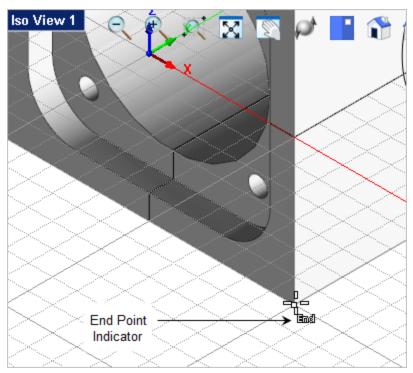

23. For the X Axis point select the end point at the back end of the part on the right side face.

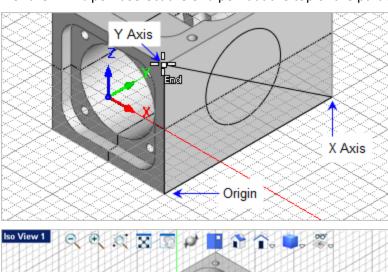

24. For the Y Axis point select the end point at the top of the part on the right side face.

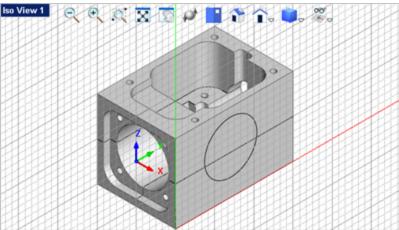


#### 7.8.2 Text on a Part Face

### Drawing on a Face

In the last step (see <u>Orient the C-Plane</u>) we discussed different ways to orient the C-Plane. In this step we'll show you how to draw on a selected part face. This will come in handy if you want to identify your 3D parts or for modifying them.

1. First if you have completed and save the part model from <a href="Exercise #5 Connector Block">Exercise #5 Connector Block</a>, open that part now. It is shown below:

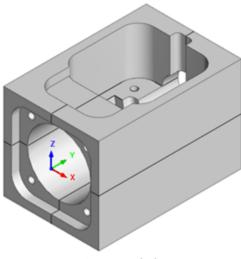


**Connector Block** 


2. Now select the Modeling Aids had tab. On the very right end of the ribbon bar you will find the C-Plane pane.




- 3. From the Modeling Aids Modeling Aids tab select the C-Plane by 3 Points Command.
- 4. The first point selected will be the origin, so make sure the End Point Snap is toggled on.
- 5. Then select the bottom left corner end point of the right side face of the part. **Note**: Do Not pick until you see the "End" indicated at the cursor location.

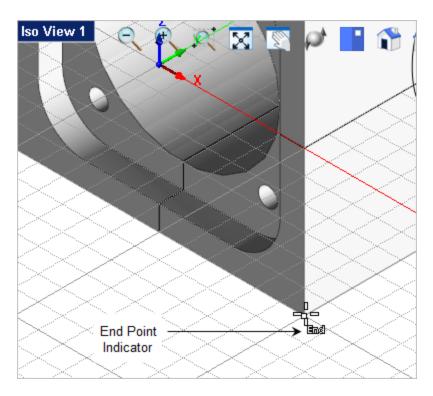



- 6. For the X Axis point select the end point at the back end of the part on the right side face.
- 7. For the Y Axis point select the end point at the top of the part on the right side face.

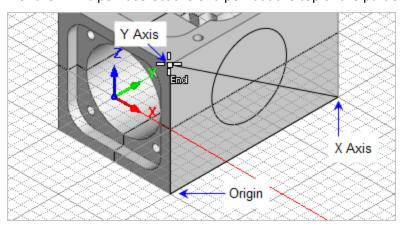

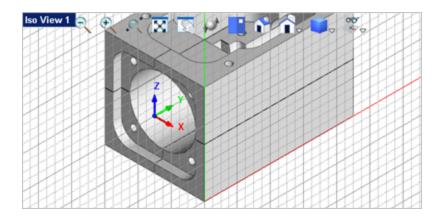


8. Now right-click anywhere in the view to display the Viewpoint pop-up menu and select the Align to C-Plane command. This menu contains the Viewport related commands.

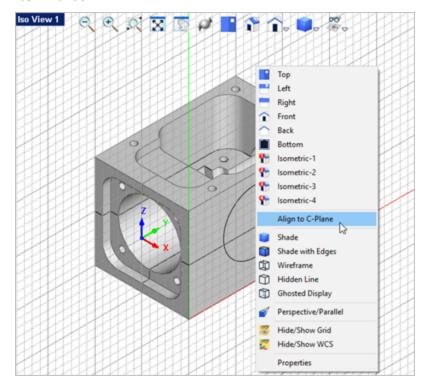

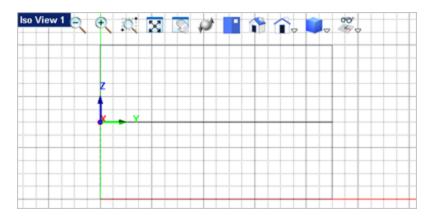


- 9. If you want to simply label your part you can add dimension text that will lie on the C-Plane. See <u>Drawing & Dimensioning</u> for that exercise.
- 10. In this exercise we will create text curves that you can engrave with the 2-1/2

  Engraving toolpath strategy, go to the Curve Modeling Curve Modeling tab and select the Create Text Command.
- 11. This will display the Text to Create dialog.

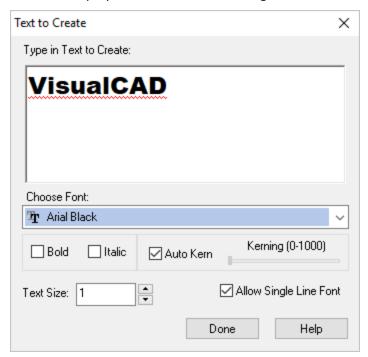


12. For engraving text you may want to use a single stroke font. From the Font drop-down menu select the text font named MecSoft\_Font-1.

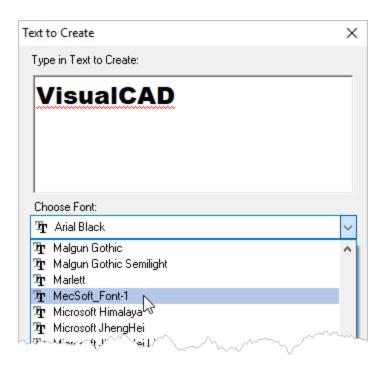

 If you do not see the MecSoft Font, close VisualCAD and <u>click here to Download</u> <u>the single stroke font</u>. Unzip and copy the file MecSoft\_Font\_1.ttf to the C: \Windows\Fonts folder.

13. The text preview will now look like this.

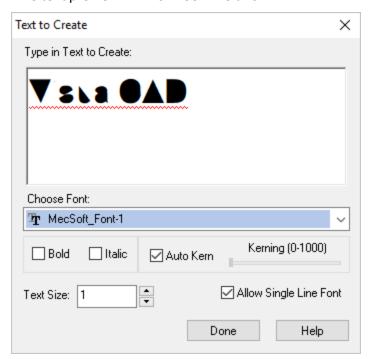


14. Make the following adjustments to the dialog:

Allow Single Line Font: Checked Text Size: 0.25


15. Now place in the Type in Text to Create window, replace the text VisualCAD with the following text:

Part Number: 6001257

16. The dialog should look like this:

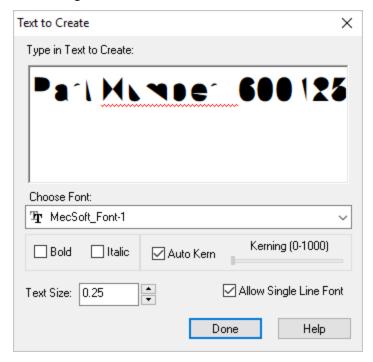


- 17. Now pick the Done button. The dialog will close and command prompt says: Enter start point of text.
- 18. You will see the text as you move the cursor around the Viewport.
- 19. Enable the Grid Snap and then select the grid point to position the text, or 0.5,2.5 in the command window and press <Enter>. The text should appear like this:

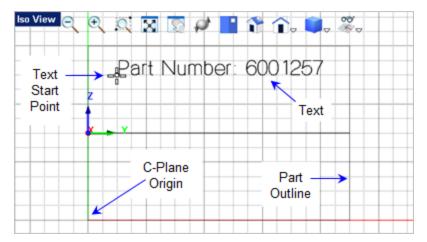

The text is actually individual curves that you can select as Control Geometry in your machining operations.

- 20. To select the curves, first make sure that the option Use Preselection Highlight is unchecked. It is located on the System section of the Options dialog (Home tab > Options > System). This was covered in the <u>Set System Options</u> section of Exercise #1.
- 21. Now select one of the curves in the text or window select all of the curves in the text and then pick the Properties icon from the Status Bar to display the Properties dialog.
- 22. You will see that the text is actually 26 individual objects.

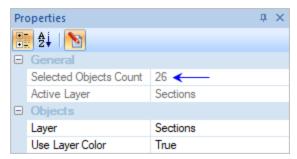

#### 7.8.3 Other C-Plane Commands



Be sure review the other C-Plane commands listed below.

- 1. Select the Modeling Aids Modeling Aids tab.
- 2. The C-Plane command pane is located on the right side of the ribbon bar:



Icon	Command
View	Immediately sets the orientation of the C-Plane to be parallel to the plane of the currently active view. The origin remains the same.
Origin	Moves the origin of the C-Plane to a selected point or entered coordinates. The current configuration of the construction plane is saved whenever the model is saved.
<b>Elevation</b>	Moves the elevation of the C-Plane along its normal (perpendicular to the plane). Input is a single distance and may be positive or negative. A positive number moves the plane towards the positive end of the coordinate axes even if the viewing location is along the negative axis. All input values are treated as an incremental distance relative to the current location of the plane.
Rotate	Rotates the C-Plane about one of the principle axes of the current C-Plane, X, Y, or Z. The center of rotation is the center of the plane and not necessarily the origin. Input is 'axis,degrees'.
ههه By 3 Pts	Three points are selected (origin, x-axis and y-axis) or entered to re-orient the C-Plane. The y-axis point defines the C-Plane and the general direction of the positive y-axis.
To Face	The C-Plane will be oriented to a selected flat plane of a geometry object. The pick point will become the C-Plane origin.
By X Axis	Two points are entered to re-orient the x-axis of the C-Plane:
<b>↓</b> To WCS	Resets the C-Plane back to its default orientation relative to the WCS and the currently active viewport. The origin will be the WCS origin.
	This option saves the C-Plane orientation from the currently active view. A name must be provided for later reference when loading.
	This option allows the retrieval of a saved C-Plane into the currently active view. A list of previously saved C-Planes is

presented. These saved C-Planes may also be deleted in this option or renamed.


#### 7.8.4 **Orient the Part**



## Orient the Part

There may be times when you need to re-orient the part. This can happen at times when a part that you import into VisualCAD has it's WCS position skewed. In order to work with the part it has be oriented.

We have deliberately skewed the part from Exercise #5 Connector Block so that it no longer lies parallel to any view. Here is what it looks like:

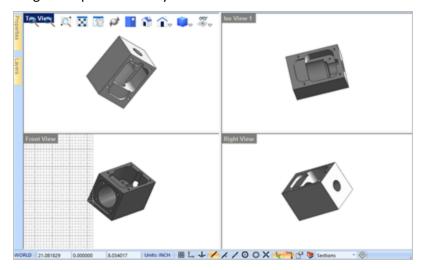


- The first step toward to orienting this part is to define the C-Plane. For more about this see the topics Orient the C-Plane and Text on a Part Face in this exercise.
- 2. First make sure the Grid is visible. You can toggle the Grid on/off by selecting Hide / Show Grid from the View Toolbar.




Now activate the view that allows you to see the planar face that you want to use to orient the part by. In this example it is Iso View 1 Iso View 1


- 4. Go to the Modeling Aids Modeling Aids tab and select the C-Plane by 3 Points command.
- 5. Activate the End Point Snap from the Status Toolbar and select the end points in the order shown below:

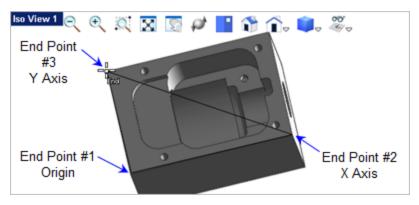


The C-Plane will orient to the 3 points selected.

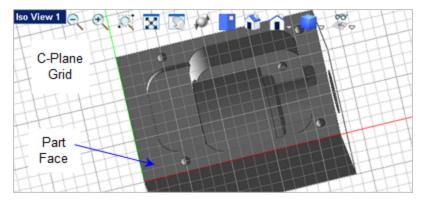


6. Now right-click anywhere in the Viewport (do not select any geometry) and select Align to C-Plane. This will align Iso View 1 parallel to the C-Plane.

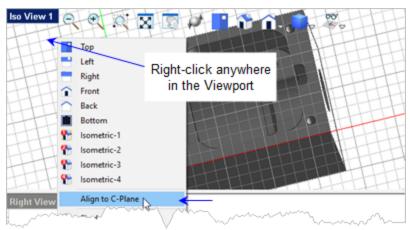


The C-Plane will align to the Viewport.

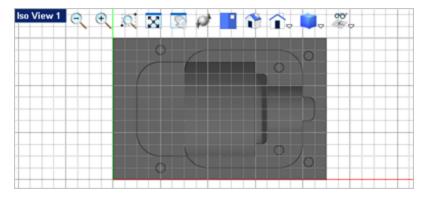


7. Now we can orient the part. Select the part and go to the Modify / Transform

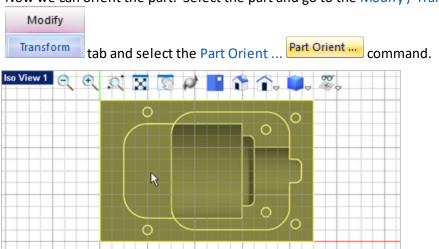


8. This will display the Orient entire part dialog. Pick the option to Set as current view direction.

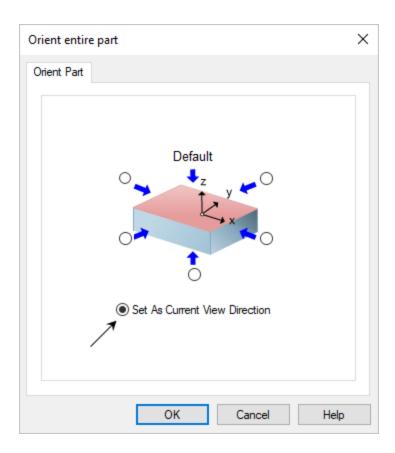


9. Pick OK and the part appears to disappear from the Viewport.

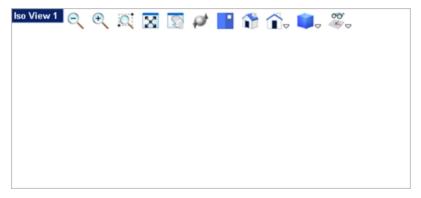


10. Now pick the Fit View icon from the View Toolbar. The part will appear with the WCS oriented in/on the center of the face that we used to align the C-Plane

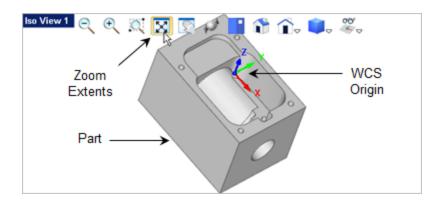


11. Now activate the Top View Top View and pick the Fit View icon from the View Toolbar.

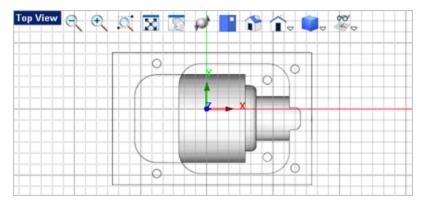


12. Repeat this for the Front View Right View and the Right View Remember that you have to activate the Viewport before the View Toolbar will display. Left-click anywhere within the Viewport to activate it.

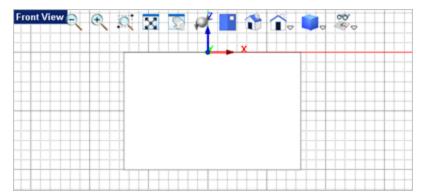

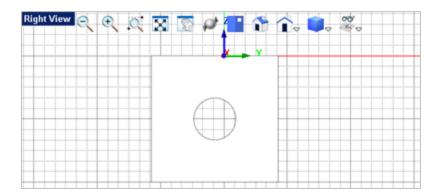


13. Activate Iso View 1 again and this time select the Iso View icon from the View Toolbar to orient this Viewport.

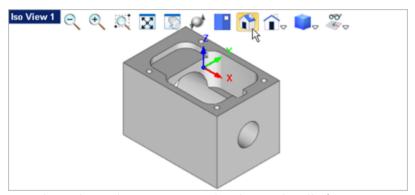


Great! You have the part oriented orthographically (i.e., Top, Front, Right).


14. However, the part is still not oriented like the original part as shown below. You see that the length of the part was oriented along the Y Axis and the WCS was positioned at the center of the front view. Let's show you some additional commands to fix that.

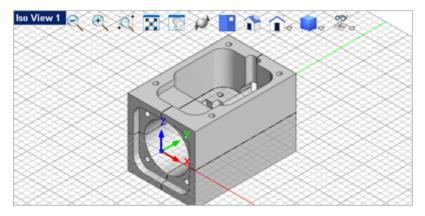


- 15. Activate Iso View 1 and then from the Status Toolbar, toggle the Graphic Manipulator On.
- 16. Now select the part to see the Graphic Manipulator displayed.

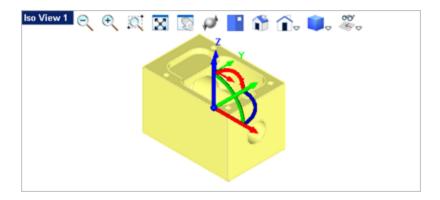


17. Pick the Z Rotation arc of the Graphic Manipulator to display the input window, enter 90 and then press <Enter>.

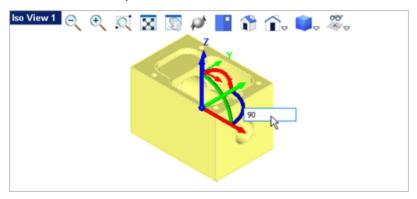

18. Now you see the part is rotated so press <Enter> to accept the rotation.

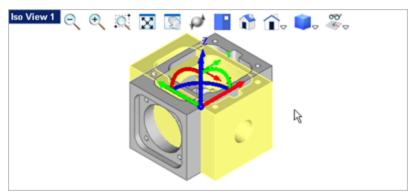


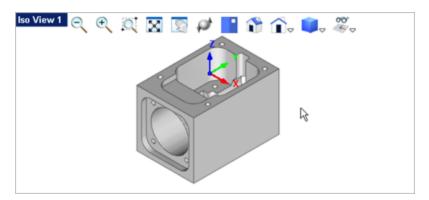


#### Great where almost there!

To move the WCS to the original location which was centered on the front face of the part we need to create a point there to move from.

- 19. Zoom in on the front face of the part.
- 20. From the Curve Modeling tab select the command Create mid point between two points.
- 21. Activate the End Point Snap from the Status toolbar.
- 22. Select the two diagonal end points on the front face of the part as shown.

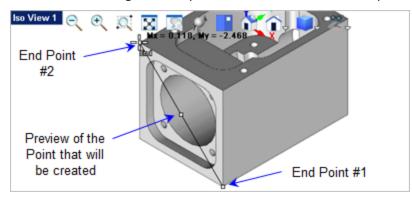


- 23. You can now toggle the Graphic Manipulator 🗽 off.
- 24. With the point created, window select the entire part (and point) or simply press <Ctrl+A>.
- 25. From the Modify / Transform tab select the Move by mouse command.
- 26. The command prompt says: Pick from point or enter coordinates x,y and z. Make sure the End Point Snap is active from the Status Toolbar and select the point you just created.

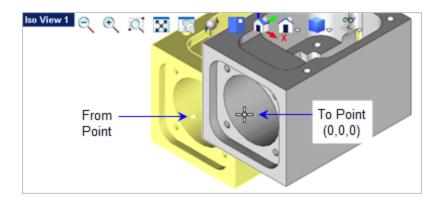

27. Now the command prompt says: Pick to point or enter coordinates x,y and z. In the command window enter 0,0,0 Command and then press <Enter>.


You will see that the part moved to the WCS origin. Now press <Enter> again to accept the move.

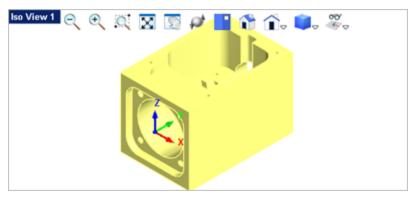


28. Now the part is aligned correctly accept for the C-Plane. Previously the C-Plane was aligned to the XY plane of WCS.

Here is a neat trick to fix that:


29. Activate the Top View Top View

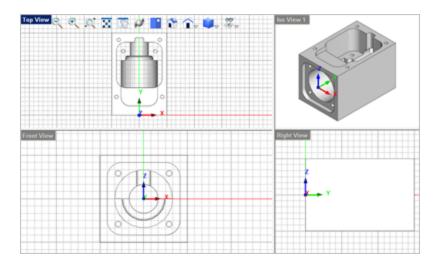

30. Now double-left-click on the Top View to one Viewport set to the Top View.

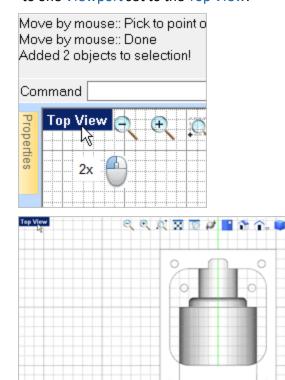

31. Now right-click on the Top View tab and select Quad Viewport.

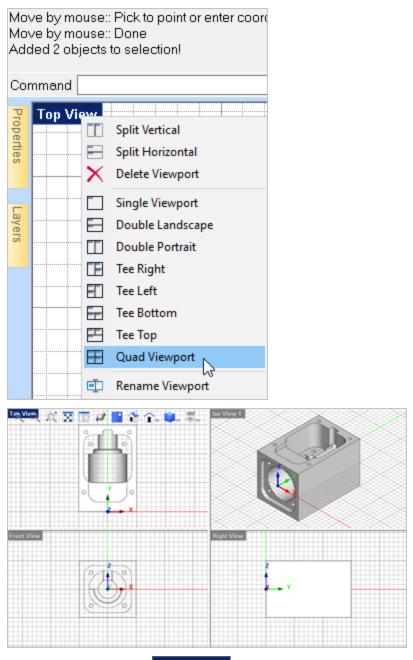

You see that Iso View 1 Iso View 1 inherited the C-Plane of the Top View because that was the active View when you selected Quad Viewport.


32. Save the file as Construction\_Planes\_Completed.vcp.

Congratulations on completing this exercise!

### **Find More Resources**

Download this PDF Guide for a list of the available VisualCAD Resources.

### 2025 VisualCAD Resource Guide

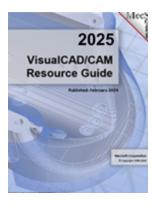

#### The 2025 VisualCAD Resource Guide!

18 Pages

Lists PDF downloads and Online resources including Quick Start Guides, Reference Guides, Exercise Guides, Tutorials and More.

<u>Prefer Printed Documentation? Click Here!</u>

<u>What's New | Quick Start Play List</u>

# Index

# - 3 -

3Dconnexion® 41

# - A -

About VisualCAD® Accelerator < Alt> Keys 46 Align C-Plane with Axis 178 C-Plane with CSYS 179 All Flat Areas 242 Alt Keys 46 Ambient Lighting 33, 91, 131 Analyze Analyze Ribbon Bar Pane 366 **Bounding Box** 368 Part Center 369 Part Information 366 Surface Normals 369 Analyze Ribbon Bar Analyze 366 Measure 360 Angle 364 Measure **Angular Dimensions** 350 Dimensions Ribbon Bar Pane Annotations 357 at Point 357 Dimensions Ribbon Bar Pane 354 Dot 359 Edit Font Height 357 Leader Line 354 Appearance Themes 55 Application Plug-ins ... Arc 3 Pts 226 Center, Start, Angle Pts 225 Dia. Dimension 347 Fit Curves 264 Measure Diameter of 364

Start, End, On 227 Arcs/Circles Select 158 Select Dialog Box 158 Array Objects 391 Objects XYZ 391 Polar 392 AutoSave 20, 77, 118

## - B -

**Back View** 140 Set C-Plane to 176 Background Image Delete 189 Make Grayscale 186 180 Menu Move 182 Place 181 Scale 184 Toggle On/Off 185 188 Transparency 422 **Background Properties Boolean Curves** 255 **Bottom View** 140 Set C-Plane to 175 Bounding 368 Analyze Box Create Box Mesh 316 Rectangle Curves 245 **Bounding Box Mesh** 327 Box Mesh 316 **Break Curves** 270

# - C -

Center Point Snap 409 Chain Curves 268 **Chamfer Curves** Check for Updates ... 98 Circle 3 Pts 222 Center, On Pt 220 Dia. Dimension 343 Rad. Dimension 345 Start, Diameter Pt 221

Rad. Dimension

348

Circle	Curve
Tangent to 3 223	All Flat Areas 242
Circular Tube Mesh 324	Arc Fit 264
Clipboard	Auto Fillet 263
Modeling Aids Ribbon Bar Pane 154	Boolean 255
Close Curve 260	Bounding Rect. 245
Color	Break 270
Construction Visual Aids 29, 87, 127	Chain 268
C-Plane 29, 87, 127	Chamfer 260
C-Plane Gris Axis 29, 87, 127	Change Start 255
New Layer 29, 87, 127	Close 260
Options 29, 87, 127	Create Text on 235
Screen Background 29, 87, 127	Display Style 24, 82, 122
Screen Gradient 29, 87, 127	Explode 272
Select by 163	Extend 253
Selection 29, 87, 127	Extend by Dist 262
Command Recall 20, 77, 118, 172	Extract from Surface Edge 247
Commands	Fillet 249
Modeling Aids Ribbon Bar Pane 169	Flat Area 241
Cone Mesh 319	from Text 233
Continuous Command Recall 172	Helix 239
Coordinate input 404	Line Width 413
Сору	Merge 253
Layer 421	NURBS 232
Layer with Objects 421	Offset 251
Objects 154	Point on 198
C-Plane	Project onto Surface 290
Align with Axis 178	Project to CPlane 266
Align with CSYS 179	Reduce 272
Load 180	Reverse 263
Modeling Aids Ribbon Bar Pane 174	Section Curves 246
Rotate 177	Silhouette 243
Save 179	Smooth 265
Set by 3 Pts 177	Spiral 238
Set Color of 29, 87, 127	Split 269
Set Elevation 176	Split by Curve 258
Set Gris Axis Color of 29, 87, 127	Surface Boundary 244
Set Origin 176	Trim 252
Set to Back View 176	Wrap 273
Set to Bottom View 175	Curve Modeling Ribbon Bar
Set to Front View 175	Curves Pane 190
Set to Left View 176	Edit Curves Pane 248
Set to Object 178	Curves
Set to Planar Curve 178	Curve Modeling Ribbon Bar Pane 190
Set to Right View 176	Select Open 160
Set to Top View 175	Customize
Set to View 175	Add/Remove Cammands to the Quick Access
Current Position 406	Toolbar 42

Customize	Tolerance and Units Options 37, 95, 135
Display 42	Diffuse Lighting 33, 91, 131
Display Themes 55	Dimension
Keyboard 53	Angle 350
Minimize the Ribbon Bar 42, 46	Arc/Circle Diameter 341
Show Quick Access Toolbar below Ribbon Bar	Arc/Circle Radius 342
42 Show/Hide Quick Access Toolbar 42	Horizontal 334
Show/Hide Quick Access Toolbar Commands	Leader Line 354
42	Oblique 339
The Customize Quick Access Toolbar Menu 42	Options 36, 94, 134 Pt Angle 352
Cut	Pt Arigie 332 Pt Arc Diameter 347
Object 154	Pt Arc Radius 348
Cylinder Mesh 318	Pt Circle Dia 343
•	Pt Circle Rad 345
D	Ribbon Bar 333
- U -	Select all 160
Delete	Vertical 337
Hole on Surface 289	Dimensions Ribbon Bar
Layer 421	Angular Dimensions Pane 350
Object 154	Annotations Pane 354
Viewport 152	Linear Dimensions Pane 334
Dialog Box	Radial Dimensions Pane 341
Application Plug-ins Manager 114	Display
Array Objects 391	Construction Visual Aids 24, 82, 122
Color Options 29, 87, 127	Curve Style 24, 82, 122
Dimension Options 36, 94, 134	Ghosted 147
Display Options 24, 82, 122	Grid 148
File Browser 65, 105	Mesh Edges Style 24, 82, 122
File Open 63, 103	Options 24, 82, 122
Grid Options 30, 88, 128	Rendering Options 24, 82, 122
Lighting Options 33, 91, 131	Shaded 145
Load C-Planes 180	Shading Style 24, 82, 122
Loaded Translator Plug-ins 115	Togglr Shaded + Edges 145
Mecsoft Product Updates Checker 98	View Change Animation 24, 82, 122
Mirror Objects 389	Wireframe 146
Modeling Aids 20, 77, 118	Display Ribbon Bar
Move Objects 381	Modes Pane 143
Part Information 366	Orient Pane 139
Part Orient 384	View Modify Pane 137
Polar Array Objects 392	Viewport Pane 149
Properties 412	Visibility Pane 148
Rotate Objects 383	Dot Annotation 359
Save As 68, 108	Duplicate
Save C-Planes 179	Layer 421
Scale Objects 387	Layer with Objects 421
System 20, 77, 118	DXF File Format
System Options 20, 77, 118	Exporting to 69, 109

Dynamic	Use Preselection Highlight 424
Pan 137	Viewing the Command Prompts 432
Rotate 138	Exercise #2: 2D Drawing & Dimensioning 434
Zoom 138	Active Layer 452
	Annotation 452
- Е -	Arc Center, Start, Angle 445
· <b>-</b> -	Auto-Hiding Layer Manager 435
Edit	Center Point 445
Copy 154	Chamfer 437
Cut 154	Circle on Point 443, 445
Hide 173	Curve Drawing 437
Hide Non-Selected 173	Cut Object 437
Line Width 413	Dimensioning 452
Lock 173	Explode Curves 437
Mode 413	Extend Curves 437
Paste 155	Fillet 437
Properties 412	Grid Snap 445
Redo 170	Hide / Show Grid 437
Redo Multiple 171	Horizontal Dimension 452
Show 174	Layer Manager 435, 452
Undo 170	Leader Line 452
Undo Multiple 170	Line 445
Unlock 173	Mid Point 445
Edit Curves	Modify / Transform Tab 445
Curve Modeling Ribbon Bar Pane 248	More Drawing Tools 445
Edit Meshes	Object Snaps 452
Mesh Modeling Ribbon Bar Pane 329	Object Snaps & Visual Aids 443
Edit Solids	Pan 452
Solid Modeling Ribbon Bar Pane 311	Polar Array 445
Edit Surfaces	Polar Grid of Points 445
Surface Modeling Ribbon Bar Pane 287	Polyline 437
Elevation	Quick Access Toolbar 437
set C-Plane to 176	Save 437
Ellipse	Save As 437
3 Pt Diameter 228	Status Bar 445
by Focus 231	Status Toolbar 443
End Point Snap 408	Trim Curves 437
Exercise #1: VisualCAD Preferences 423	Undo 445
Auto Backup 424	Using Visual Aids 443
Auto Save 424	Vertical Dimension 452
Online Help 423	Viewports 437
Set Systems Options 424	Visual Aids 443, 445
Set the Display Style 423	Zoom Out 452
Set the Units to Inches 424	Exercise #3: Model a Spanner Plate 458
Set to Quad Viewports 429	Arcs Center, Start, Angle Pts 469
The Quick Access Toolbar 431	Circle Center, Center, On Pt 460
The Status Bar 433	Create Point 450 460
Tolerance & Units 424	Create Point 459, 469

Exercise #3: Model a Spanner Plate 458 Circle on Point 523, 528 Create Rectangle Create Section Curves Create Reference Points 459 Display Menu 515, 520, 523 Create Single Line Extrude Mesh 498, 501, 505, 520, 523, 528 Edit Curves Extrude the Body 498 Explode Curve 469 Extrude the Connection Bar 520 Extend Curve 464 Extrude the Connection Wall 523 Extrude Curves 479 Extrude the Ejector Pin Holes 528 Fillet Curve 469 Extrude the Flange Grid Snap 460 Extrude the Upper Pocket 505, 509 Merge Curves Fillet Curves 509 Mirror 474 Graphic Manipulator 501, 505, 509, 515, 520, 523, 528 Offset Curves 464, 469 498 Grid Snap Quad Point Snap 460 Layer Manager 533, 536 Set to the Top View 459 Line command 498 Transform Ribbon Bar 474 Merge Curves 498, 509 Trim Curves 463, 464, 469 Mirror 515 View Toolbar 479 Modify / Transform 515 Exercise #4: Model a Base Plate 481 Offset Curves 501, 505 Circle on Point 487 Polyline 515. 523 Circle on Pt 481 **Properties** 533 Create a New Laver 493 Properties Manager 533 Curve Modeling 481 Quad Point Snap 523 Draw the Base Plate Profile 481 Rectangle 520 Edit Properties of Geometry 495 Revolve Mesh 515 Extrude Mesh 485, 487 Revolve the Center Bosses 515 Extrude the Base Plate 485 Section Curve 536 481 Fillet Select By Type 533 Graphic Manipulator Subtract 505 Layer Manager 493, 495 Subtract Mesh 509, 528 Mesh Modeling tab 485 Unite Mesh 501, 515, 520, 523 New Layer 493 View Toolbar 505 Object Selection Filters 495 Exercise #6: Model a Connector Block 538 **Properties** 495 Circle 553 495 Properties Manager Create Section Curves 565 Quick Access toolbar 481 Extrude Mesh 539, 541, 547, 553, 562 Rectangle 481 Fillet Curves 562 Save 485 Graphic Manipulator 541, 547, 553 Select by Type 495 Grid Object Snap 553 Status Bar Grid snap 539 Status Toolbar 493, 495 Intersect Object Snap 553 Subtract Mesh 487 Layer Manager 565 Undo 481 Line 553 View Toolbar 487 Mid Point Object Snap 553 Wireframe Display Mirror 553 Exercise #5: Model a Mold Insert 497 Model the Front Access 541 Arc Center, Start, Angle 498, 509 Model the Main Body 539 Change Geometry Layer 533

Exercise #6: Model a Connector Block 538 C-Plane Load 607 C-Plane Origin Model the Mounting Holes 553 593, 607 Model the Top Access 547 C-Plane Rotate 607 Modify / Transform Menu 553 C-Plane Save 607 C-Plane to 3D Face Modify the Top Access 562 593 Polyline 541 C-Plane to Face 607 C-Plane to View 593, 607 Properties Manager Rectangle 539, 562 C-Plane to WCS 607 Revolve Mesh 541, 562 Create mid point between two points 609 Rounded Rectangle Create Text 600 541, 562 End Point Snap Rounder Rectangle 547 609 Section Curves 565 Fit View 609 Select by Type 565 Graphic Manipulator 609 Subtract Mesh 541, 547, 553, 562 Hide / Show Grid 593, 609 View Menu 541 Iso View 609 Exercise #7: Model a Daisy Decor Modify / Transform Tab 609 570 Move by mouse 609 Active Layer 585 Orient the C-Plane Additional Sphere Accents 583 593 Create & Trim Section Curves 585 Orient the Part 609 Other C-Plane Commands Create new Lavers 570 607 Create Offset Curves Part Orient 609 Create the Stock Boundary 591 **Properties** 600 Ghosted Display Mode 579 Rotate C-Plane about Axis 593 Graphic Manipulator 573, 576 Save C-Plane 593 Layer Manager 570, 585, 589, 591 Set System Options 600 Merge Curves 585 Single Line Font 600 Model & Scale the Body 573 Text on a Part Face 600 Model & Scale the Pedal View Toolbar 609 576 Offset Curve 589 Exit File 100 Polar Array 580 Explode Polar Array the Pedal 580 272 Curves Rectangle 591 Surface 312 Scale 573. 576 Export ... Section Curve 585 IGES (igs) 69, 109 Sphere Solid 573, 576, 583 Region Files (mrg) 69, 109 Status Bar 583 Rhino (3dm) 69, 109 Transform 573, 576, 580 SAT Files (\*.sat) 69, 109 Trim Curves 585 Selected 111 Undo 580 STEP Files (STP, STEP) View Menu 579 Stereo-Lithography ASCII (\*.sla) 69. 109 Stereo-Lithography Binary (\*.stl) Exercise #8: Using Construction Planes 593 69, 109 Align to C-Plane to DXF Format 69, 109 609 Align View to C-Plane 600 Extend Align Viewport to C-Plane 593 Curves 253 Circle on Point 593 Extrude Mesh 325 Construction Planes 593 C-Plane by 3 Points 593, 600, 607, 609 C-Plane by X Axis 607

#### - F -Features Overview 11 Helix Curve 239 File Help Browse ... 65, 105 About VisualCAD® 99 Exit 100 Check for Updates ... 98 Export ... 69, 109 Go To Website Export Selected Menu 96 Home Ribbon Bar Pane 102 Topics ... 98 Import ... 65, 105 Hidden Lines 147 New 63, 102 Hide Open ... 63, 103 Grid 148 Print ... 73, 113 Non-Selected 173 Print Preview 73, 111 Objects 173 Print Setup ... WCS 148 75 Recovery 20, 77, 118 Hole, Delete on Surface 289 Save 68. 108 Home Ribbon Bar Save As ... 68, 108 File Pane 102 Save as Template 69. 109 Options Pane 18, 76, 116 Types supported 63, 65, 103, 105 Plugins Pane 114 Fillet Horizontal Dimension 334 2 Curves 249 Curves, Auto 263 138 Fit View Fit All 138 Import ... Fit Selected 138 3D Studio Files (\*.3ds) 65, 105 Flat Area Curves 241 Adobe Illustrator Files (\*.ai) 65, 105 Front View AutoCAD (\*.dxf;\*.dwg) 65. 105 Set C-Plane to 175 IGES Files (\*.igs;\*.iges) 65, 105 LightWave Files (\*.lwo) 65. 105 - G -MecSoft Region Files (\*.mrg) 65, 105 OBJ Files (\*.obj) 65, 105 Parasolid Files (\*.x\_t;\*.x\_b) Geometry Ribbon Bar 101 65, 105 Point Cloud Files (\*.cvs;\*.txt;\*.asc) **Ghosted Display** RAW Triangle Files (\*.raw) 65, 105 **Graphical Manipulator** 397 RHINO 3DM Files (\*.3dm) Graphical Scale 65, 105 376 Grid 148 SAT Files (\*.sat) 65. 105 # Divisions between 30, 88, 128 SLC Files (\*.slc) 65, 105 On Curve STEP Files (\*.stp;\*.step) 198 65, 105 Options 30, 88, 128 Stereo-lithography files (\*.sla;\*.stl) 65, 105 Point on 195 Universal 3D Files (\*.u3d) 65, 105 Poloar Point on 197 VisualMILL Part Files (\*.vmp) 65, 105 Set XY Extents VisualTurn Part Files (\*.vct) 30, 88, 128 65, 105 Snap 407 VRML Files (\*.wrl) 65, 105 Spacing between 30, 88, 128 Intersect Mesh 332 Intersection Point Snap 410

lso View 141	Dimensions Ribbon Bar Pane 334
	Load
- K -	C-Plane 180
- IX -	File 63, 103
Keyboard	Lock 173
<shift> to Select Chain 167</shift>	
Customize 53	- M -
Preset <alt> Keys 46</alt>	- 141 -
Shortcuts 16	Mask
Chortoute 10	Selection 165
	Measure
- L -	Analyze Ribbon Bar Pane 360
	Angle 364
Layer	Arc Diameter 364
Delete 421	Co-ordinates 361
Duplicate 421	Distance 361
Duplicate with Objects 421	Vertex Diameter 362
Lock 420	Menu
Manager 418	Select 157
Move Up/Down 421	Merge Curves 253
New 420	Mesh
Select by 164	Bounding Box 327
Set Color of New 29, 87, 127	Box 316
Visibility 419	Circular Tube 324
Leader Line 354	Cone 319
Left View 140	Cylinder 318
Set C-Plane to 176	Extract Curve from Edge 247
Lighting	Extrade 325
Options 33, 91, 131	Intersect 332
Set Ambient, Diffuse, Specular 33, 91, 131	Rectangular Tube 321
Set Position of 33, 91, 131	Revolve 326
Line	Sphere 317
2 Points 199	Subtract 330
at Angle 212	Torus 320
From Mid-Point 213	Unite 329
Normal 214	
Normal & Tangent 217	Mesh Edges Display Style 24, 82, 122  Mesh Modeling Ribbon Bar
Normal to 2 215	Edit Meshes Pane 329
Polyline 208	Meshes Pane 316
Rectangle, 2 Points 200, 203	Meshes
Rectangle, 2 Points, Length 205	Mesh Modeling Ribbon Bar Pane 316
Rectangle, Center 202	Select 160
Rectangle, Vertical 206	Mid Point Snap 409
Rounded Rect. 210	
Select 157	•
Tangent 218	Modeling Aids 20, 77, 118  Modeling Aids Ribbon Bar
Tangent to 2 219	Clipboard Pane 154
Linear Dimensions	Commands Pane 169

Modeling Aids Ribbon Bar	Grid 30, 88, 128
C-Plane Pane 174	Home Ribbon Bar Pane 18, 76, 116
Objects Pane 172	Lighting 33, 91, 131
Selections Pane 155	Tolerance and Units 37, 95, 135
Modes	Orient
Display Ribbon Bar Pane 143	by 3 Points 386
Mouse	Display Ribbon Bar Pane 139
3Dconnexion® 41	Part 386
Settings 20, 77, 118	Origin Point Snap 408
Move 372	Ortho Snap 408
by Mouse dialog box 381	Offilo Shap 400
Layer 421	<b>D</b>
Orient by 3 Points 386	- P -
•	_
Orient Part 384	Pan 137
	Parallel View 144
- N -	Part
	Center 369
Name	Orient 384
Select by 163	Orient by 3 Points 386
Near Point Snap 409	Units 406
New	Parting Plane 285
File 63, 102	Paste
Layer 420	Objects 155
NURBS	Perspective View 144
Create Curve 232	Plugins
Nurbs Curves	Home Ribbon Bar Pane 114
Select 159	Plug-ins
30,000	Applications 114
	Translator 115
- 0 -	Point
	Center 194
Object	Grid 195
Selection Filter dialog box 163	Mid 193
Snap Control 407	
Objects	Pick 192
Modeling Aids Ribbon Bar Pane 172	Polar Grid 197
Oblique Dimension 339	Select 157
Offset Curves 251	Snap near 409
Online Help 98	Snap to End 408
Open	Snap to Midpoint 409
File Dialog Box 63, 103	Point Clouds 159
Options	Polar Array 392
AutoSave 20, 77, 118	PolyCurves
Color 29, 87, 127	Select 159
Command Recall 20, 77, 118	Polyline 208
Dimension 36, 94, 134	Polylines
Display 24, 82, 122	Select 157
File Recovery 20, 77, 118	Print 73, 113
1.10 1.00 toly 20, 11, 110	Menu 71

Print 73, 113 Preview 73, 111 Preview Ribbon Bar 403 Setup 75  Project Curves onto Surface 290 Curves to CPlane 266  Project to C-Plane Snap 410  Properties 413 Edit Mode 413	Dimensions 333 Display 136 Home 101 Mesh Modeling 315 Minimize 42, 46 Modeling Aids 153 Solid Modeling 294 Surface Modeling 276 Transform 370 Right View 141
Line Width 413	Set C-Plane to 176
Properties Dialog Box 412  - Q -  Quad Point Snap 409	Rotate  2D Objects 373  3D Objects 375  C-Plane 177  Dynamically 138  Selected Objects dialog box 383  using Graphical Manipulator 397
- R -	- S -
Radial Dimensions    Arc/Circle Diameter 341    Arc/Circle Radius 342    Dimensions Ribbon Bar Pane 341    Pt Arc Diameter 347    Pt Arc Radius 348    Pt Circle Dia 343    Pt Circle Rad 345  Rectangle    2 Points 200, 203    2 Points. length 205    Center 202    Rounded 210    Scale by 379    Tube Mesh 321    Vertical 206	Save as Template 69, 109 C-Plane 179 File 68, 108 File As 68, 108 Scale Objects dialog box 387 Objects Graphically 376 Rectangular 379 Using Graphical Manipulator 397 Screen Layout 14 Section Curves 246 Select All 161 All Dimensions 160
Redo	Arcs/Circles 158
Multiple 171 Once 170	Arcs/Circles 158 by Color 163 by Layer 164
Reduce Curves 272	by Name 163
Rename Viewport 152	by Type 163
Rendering Options 24, 82, 122 Reverse Curves 263	Chain using <shift> key 167</shift>
Revolve Mesh 326	Duplicates 162
Ribbon Bar 101	Invert 162
Analyze 360	Last Created 162
Curve Modeling 190	Lines/Polylines 157 Mask 165

Select	Cone 300
Menu 157	Cylinder 299
Meshes 160	Explode 312
Multi-Selection Dialog 168	Extract Curve from Edge 247
None 162	Extruded 304
Nurbs Curves 159	Rectangular Tube 306
Open Curves 160	Revolved 305
Point Clouds 159	Sphere 297
Points 157	Stitch 313
PolyCurves 159	Torus 302
Pre-Selection Highlights 167	Unify Normals of 311
Previous 162	Solid Modeling
Set Seleection Color 29, 87, 127	Solid Modeling Ribbon Bar Pane 295
Shells 159	Solid Modeling Ribbon Bar
Surface from Solid 169	Edit Solids Pane 311
Selections	Solid Modeling Pane 295
Modeling Aids Ribbon Bar Pane 155	Specular Lighting 33, 91, 131
Shading	Sphere Mesh 317
Display 145	Spiral Curve 238
Style 24, 82, 122	Split
Toggle + Edges 145	Curves 269
Shells	Viewport 151
Select 159	Split by Curve 258
Shortcut Keys 16	Status Toolbar
Show	Visual Aids 411
All Objects 174	Stitch Surfaces 313
Grid 148	Subtract Mesh 330
Surface Normals 369	Surface
WCS 148	Bilinear from 4 Points 284
Silhouette Curves 243	Boundary Curves 244
Smooth Curves 265	by 2 Curves 280
Snap	by 4 Curves 279
Center Point 409	Delete Holes on 289
Controls 407	Explode 312
End Point 408	Extract Curve from Edge 247
Grid 407	from Curves 278
Intersection Point 410	of Extrusion 281
Mid Point 409	of Revolution 282
Near Point 409	Parting Plane 285
Origin Point 408	Project Curves onto 290
Ortho 408	Rectangular Plane 277
Project to C-Plane 410	Reverse Normals of 291
Quad Point 409	Show Normals 369
Vertex Point 410	Stitch 313
Solid	Trim 287
Bounding Box 309	Unify Normals of 311
Box 296	Wrap 292
Circular Tube 308	Surface Modeling Ribbon Bar

Surface Modeling Ribbon Bar Edit Surfaces Pane 287 Surfaces Pane 276 Surfaces	Translator Plug-ins 115 Trim Curves 252 Surface 287
Surface Modeling Ribbon Bar Pane 276	Tube
System Options 20, 77, 118	Circular 324
20, 11, 110	Rectangular 321
<b>T</b>	g
-   -	11
<b>-</b>	- U -
Tangent Line 218	
Template, save as 69, 109	Undo
Text	Multiple 170
at Point 357	Once 170
Curves from 233	Unite Mesh 329
Dot 359	Units
Edit Font Height 357	Display 406
on Curve 235	Set default 37, 95, 135
Themes, Set Display of 55	Unlock 173
Tolerances	User Interface
Curve Hookup 37, 95, 135	Geometry Ribbon Bar 101
Part Facing 37, 95, 135	Help & Info Menu 96
Toolbar	Status Toolbar 404
Status 404	Viewport Menu 150
View Commands 38	VisualCAD® Screen Layout 14
Toolbars	
Customize 42	- V -
Quick Access Toolbar 42	•
Tools	Vertex Point Snap 410
Application Plug-ins 114	Vertical Dimension 337
Translator Plug-ins 115	View
Top View 139, 175	Change Animation 24, 82, 122
Torus Mesh 320	Display Next 38
Transform	Display Previous 38
Along Path 394	Dynamic Pan 137
Array 391	Dynamic Rotate 138
Graphical Manipulator 397	Fit 138
Graphical Scale 376	Ghosted Display 147
Mirror 389	Hide/Show Grid 148
Move 372	Hide/Show WCS 148
Move 381	Perspective/Parallel 144
Orient by 3 Points 386	Set C-Plane to 175
Part Orient 384	Set to Back 140
Polar Array 392	Set to Bottom 140
Rectangular Scale 379	Set to Front 140
Rotate 383	Set to Iso 141
Rotate 2D 373	Set to Left 140
Rotate 3D 375	Set to Right 141
Scale 387	

```
View
    Set to Top
                139
   Shade
            145
   Toggle Hidden Lines
                         147
   Toolbar Commands
                        38
   Wireframe Display
                       146
View Modify
   Display Ribbon Bar Pane
                             137
Viewport
   Delete
            152
    Display Ribbon Bar Pane
                             149
   Layouts
              149
   Rename
              152
   Split
          151
Visibility
    Display Ribbon Bar Pane
                             148
Visual Aids
             411
VisualCAD® Menu
WCS
   Hide/Show
                148
Welcome to VisualCAD
                        11
Wireframe
            146
Wrap
   Curves
            273
   Surface
             292
- Z -
Zoom
   Box
          139
    Dynamic
              138
```

ln

Out

139

138