

Table of Contents

| Welcome | e e e e e e e e e e e e e e e e e e e | 3 |
|--------------------|---------------------------------------|----|
| Quick St | art | 4 |
| Resourc | e Guide | 7 |
| To Acce | ss the On-Line Help | 8 |
| Requirer | ments | 9 |
| Installati | on | 10 |
| Running | RhinoCAM | 13 |
| RhinoCA | AM Menu Item | 14 |
| RhinoCAM Licensing | | 16 |
| 1 | License Dialog | 16 |
| 2 | Demo Mode | 16 |
| 3 | Activation | 19 |
| 4 | License Status | 22 |
| 5 | Release Node Locked License | 24 |
| 6 | Re-register Node Locked License | 25 |
| 7 | | |
| 8 | License Preferences | 29 |
| Installati | on | 33 |
| 1 | Troubleshooting the Installation | 33 |
| 2 | Network Installation | 34 |
| More Re | sources | 35 |
| | Index | 36 |

Welcome



CAM Module 2025

Prefer Printed Documentation? Check Here!

What's New | Quick Start Play List

Welcome to RhinoCAM and thank you for choosing one of most powerful, easy to use and complete CAM packages on the market today. RhinoCAM is the CAM plug-in that runs inside of Rhino. Plug-ins can be considered as independent applications that can be loaded and unloaded on demand from the host CAD program, which in this case is Rhino.

This fully integrated RhinoCAM plug-in seamlessly integrates Rhino's CAD functionality with downstream application modules such as MILL and TURN, that target Milling and Turning CNC machines. Other modules include NEST, Profile-NEST, ART and G-CODE Editor. NEST is used for parts nesting, Profile-NEST is used for nesting profiling toolpaths, ART is used to create 3D and 2D geometry using bitmap files. G-CODE Editor is RhinoCAM's very own g-code editing module.

For purposes of brevity, Rhino refers to both Rhinoceros 6 or Rhino 7.



More about RhinoCAM

You can work with native Rhino data as well as use any of the data types that can be imported into Rhino. Then you can use RhinoCAM with its wide selection of tools and toolpath strategies to create machining operations and associated toolpaths. These toolpaths can then be simulated and verified, and finally post-processed to the controller of your choice.

Quick Start



CAM Module 2025

Prefer Printed Documentation? Check Here!

What's New | Quick Start Play List

Quick Start Guides for each RhinoCAM module are available in both PDF and Video format. Refer to the following information to access these guides:

How to Access the Quick Start Guide Documents


To help you quickly get started in working with each module, select one of the Help buttons located on the RhinoCAM Learning Resources dialog.

You will find:

- Quick Start Guides
- What's New documents
- Online Help links


The Quick Start Guides will help you step through an example tutorial which will illustrate how to use the module. To access the Learning Resources dialog:

1. From the Rhino Main Menu, drop down the Main menu and select Learn ...

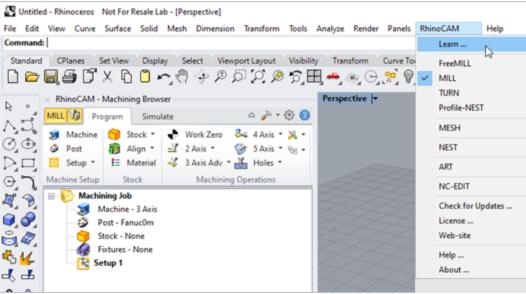

To access the Learning Resources dilog in RhinoCAM

- 2. Select a document from the Learning Resources dialog to get started using the module of your choice.
 - You can also select the Open Quick Start Files Folder button located at the bottom of the dialog to open the Quick Start folder where the source files (start and completed versions) are located.

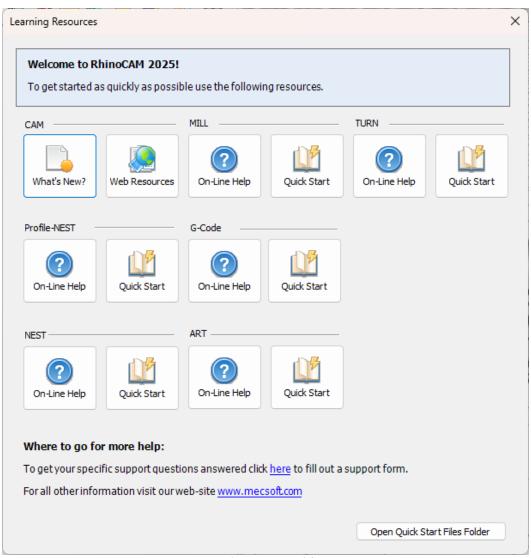


Learning Resources Dialog

Resource Guide

Download this PDF Guide for a list of the available RhinoCAM Resources.

2025 RhinoCAM Resource Guide

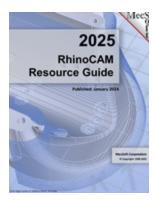

The 2025 RhinoCAM Resource Guide!

18 Pages

Lists PDF downloads and Online resources including Quick Start Guides, Reference Guides, Exercise Guides, Tutorials and More.

<u>Prefer Printed Documentation? Check Here!</u>


<u>What's New | Quick Start Play List</u>

To Access the On-Line Help

! Note: The help file you are reading right now is <u>ONLY</u> for installing and launching RhinoCAM. It <u>IS NOT</u> the help system for each RhinoCAM module. Locate the Help icon (shown below) to load the help system for each module.

Locate the RhinoCAM Browser Help Icon

Each RhinoCAM module (i.e., MILL, TURN, etc.) has its own context sensitive online Help system that can be accessed by pressing the Help button from any dialog or by selecting the Help icon located within the Browser of each module. Please use the Table of Contents as a starting point to browse through the various topics of interest. You can also use the keyword search to locate topics of interest to you. Click here to find out where to go for more help and resources.

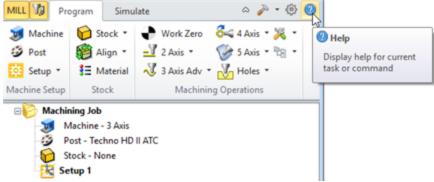

Locate the RhinoCAM Browser Help Icon

Requirements

The following hardware and software are required to run RhinoCAM:

Hardware

RhinoCAM requires the following computer system requirements for proper functioning.

- CAD System: Rhinoceros 7, or Rhinoceros 8
- CPU: 64 bit Intel® or AMD®, Recommend: multi-core
- RAM: Minimum 4GB, Recommend: 8GB or higher
- Disk: 700 MB of free disk space
- OS: Microsoft Windows 8.1, 10 or 11
- Graphics: Requires OpenGL, Recommend: OpenGL 2

Please keep in mind that if you are working with large models these minimum requirements might not be sufficient for adequate performance. You will have to upgrade either your computer's memory (RAM) capacity and/or your computer's main processor speed.

Prerequisites

RhinoCAM requires the following pre-requisites for proper functioning:

- 1. RhinoCAM is NOT a stand-alone program and requires Rhinoceros 7.0 or Rhinoceros 8.0 as the host CAD system.
- 2. RhinoCAM is a licensed product and will require an Activation Code to fully function. Please see the section <u>Activation</u> for more information.

Installation

To install the RhinoCAM software, simply download the product directly to your computer. Then locate the install program on your computer and double click on the program icon to execute the program. The setup program will launch automatically.

Upon successful installation, you can run any RhinoCAM module in Demo mode without requesting an Activation Code. RhinoCAM needs to be registered with MecSoft Corporation and a valid Activation Code obtained before it can become fully operable.



If you are upgrading from a previous version, RhinoCAM will start in demo mode on launching the program.

RhinoCAM's Installation Directory Structure

The RhinoCAM installation program creates a main installation folder, whose name and location can be specified during the installation process. The default RhinoCAM installation would be found under the MecSoft Corporation folder in Program Files. (C:\Program Files\Rhinoceros x.x\Plug-ins\RhinoCAM 2025 for R7/8).



\Program Files\Rhinoceros x.x\Plug-ins\RhinoCAM 20xx for R7 (or R8)

This folder contains the RhinoCAM executable and library files.



3DPrinting

Contains 3D Printer information for the MESH module.



🚞 Help

Contains the on-line help files used with RhinoCAM. You can open these files directly from this folder, or access them within RhinoCAM.



SDK

Contains RhinoCAM API documentation and examples.



Styles

Contains ribbon bar style files.



\ProgramData\MecSoft Corporation\RhinoCAM 20xx for Rhino x.x

The RhinoCAM installation also includes several sub-folders and these can be found under the ProgramData folder: C:\ProgramData\MecSoft Corporation\RhinoCAM 2025 for Rhino x.x.



3DPrinting

Contains 3D Printer information for the MESH module.



This folder contains a bitmap image of the RhinoCAM splash screen that can be customized.



Contains tool library files - DefaultEnglishTools.csv and DefaultMetricTools.csv. These files can be used as they are, or you can use them as templates and customize them with your own data.

Defaults

Contains the default knowledge base files.

FeatureBasedMachiningKBs

Feature Based Machining Knowledge Base files (*.vkb) that you save will be located in this folder.

Machines

This folder contains a library of machine tools that is used for machine tool simulation.

Materials

Contains list of materials that can be used to apply texture for cut material simulation. This folder also includes the Feeds and Speeds data for various material types both in English and Metric units.

Posts





Contains Programmable Post default spm and script.



Contains the standard set of MESH post-processor (*.spm) files. Additional post-processor files can be obtained from MecSoft Corporation. If you receive additional *.spm files, be sure to place them in this folder, so that RhinoCAM will recognize them.





Contains Programmable Post default spm and script.



Contains the standard set of MILL post-processor (*.spm) files. Additional post-processor files can be obtained from MecSoft Corporation. If you receive additional *.spm files, be sure to place them in this folder, so that RhinoCAM will recognize them.

TURN



Contains Programmable Post default spm and script.



SPM

Contains the standard set of TURN post-processor (*.spm) files. Additional post-processor files can be obtained from MecSoft Corporation. If you receive additional *.spm files, be sure to place them in this folder, so that RhinoCAM will recognize them.



QuickStart

Contains source part files for the Quick Start tutorials supplied with the program.



ShopDocs

Contains all the necessary files used for generating the shop documentation output files.

Running RhinoCAM

Locate the Rhinoceros 7 or Rhinoceros 8 shortcut on your desktop and double click to launch the application.

Alternatively you can also click on the Windows Start button and select All Programs. Go to the program group containing Rhinoceros. (The name of this program group will usually be called Rhinoceros 7 (or Rhino 8), unless you specified otherwise during setup.)

Once you locate the program group, select it and then select Rhinoceros 7 (or Rhino 8) to launch the application.

If the installation was successful, upon launching of Rhino you should observe a menu entry called RhinoCAM in the main menu bar of Rhino. If you do not see this entry then please see the <u>Troubleshooting the Installation</u> section of this document.

RhinoCAM Menu Item

When RhinoCAM is loaded successfully it will add a menu item, titled RhinoCAM to the main Rhino menu bar. Selecting this menu bar item will create a drop down menu as shown below.

Each of the menu items is described below:

Learning ...


This will display the Learning Resources dialog. Here you will find Data Sheets, Quick Start guides and On-Line Help files and more. The Quick Start guides will help you step through an example tutorial which will illustrate how to use the module.

FreeMILL

This will display the FreeMILL Wizard window. From here you can generate 3 Axis toolpaths from 3D surface models absolutely free of charge!

MILL

This will display the MILL Module and the Machining Operations Browser. If any one of the other modules is currently being displayed, selecting this will switch the display to the MILL Module.

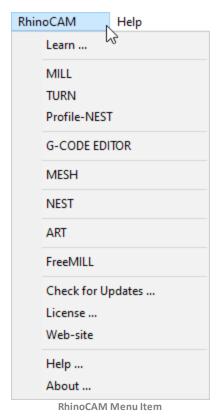

TURN

This will display the TURN Module and the Turn Machining Browser for generating turning toolpath operations compatible with 2½ Axis Lathes.

Profile-NEST

This will display the Profile-NEST Module and the Machining Operations Browser for generating 2½ Axis Profiling operations and nesting them onto sheets for machining on 2½ and 3 Axis flat-bed routers.

G-CODE EDITOR

This will display the G-CODE EDITOR Module and it's related browser. From here you can load any standard ISO g-code file, perform editing functions and then output the g-code to any file or DNC program.

MESH

This will display the MESH Module and the MESH Browser. From here you can model, modify and/or repair 3D mesh data produced by 3D scanners. You can then machine the mesh models using the MILL Module.

NEST

This will display the NEST Module and the Nesting Browser. From here you can nest 2D and 3D geometry onto sheets for machining on 2½ and 3 Axis routers.

ART ART

This will display the ART Module and the Art Browser. From here you can generate 3D mesh objects from bit-map image files along with other modeling functions that can be machined using the MILL Module.

Check for Updates ...

This will checks for product updates to let you know if the current version being run is the latest version. A functioning Internet connection is required to perform this task.

License ...

Selecting this option displays the product License dialog.

Web-site

This takes you to the MecSoft Corporation web-site that has useful links, resources and other information regarding MecSoft products.

Help...

This will display this help file. To load help for each module, select the help icon located on each module browser or select the Help button on any dialog.

About ...

Selecting this option will display a dialog which provides information about the current version of RhinoCAM installed on your computer as well as the licensed modules.

RhinoCAM Licensing

9.1 License Dialog

The License dialog allows you to manage your RhinoCAM software license.

If you have purchased a multi-seat Floating License, <u>DO NOT</u> enter your network license Activate Code in this License dialog! A Floating License must be activated from within the MecSoft Floating License Manager!

Select from one of the following topics:

- Running in Demo Mode
- Activate your Product
- Check your License Status
- Release your License
- Re-register with another Activation Code


9.2 Demo Mode

Upon successful installation, you can run any RhinoCAM module in Demo mode without an Activation Code. Your product needs to be registered with MecSoft Corporation and a valid Activation Code obtained before it can become fully operable. Select from the two options below.



New users can run in Demo mode prior to obtaining an <u>Activation Code</u> or after <u>Releasing</u> your current license:

- 1. Launch the software.
- 2. From the Get Started! dialog, select: Evaluate full product, you cannot save CAM data or create G-code.

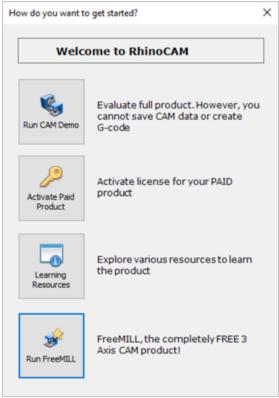

Get Started!

From the Choose Demo Module & Configuration dialog, first select the
configuration from the drop-down list (Express, Standard, Expert, Professional or
Premium) and then choose the Module to run. The module and configuration
with launch automatically. In Demo mode you cannot post G-code or save any
CAM data.




Choose Demo Module & Configuration

Existing Users (with an activated license code)

Existing users can run any RhinoCAM module and/or configuration in Demo mode without an Activation Code. The only requirement is that the computer is NOT connected to the internet.

- 1. Exit the existing MecSoft product.
- 2. Unplug the internet cable from your PC.
- 1. Launch the software.
- 2. From the Get Started! dialog, select Run CAM Demo.

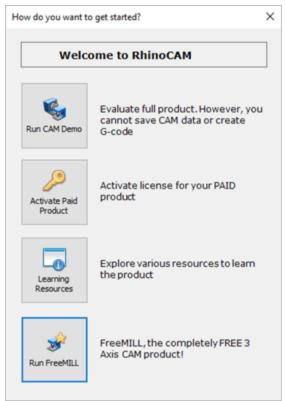

Get Started!

3. From the Choose Demo Module & Configuration dialog, first select the configuration from the drop-down list (Express, Standard, Expert, Professional or Premium) and then choose the Module to run. The module and configuration with launch automatically. In Demo mode you cannot post G-code or save any CAM data.



Choose Demo Module & Configuration

9.3 Activation

To run the software with full functionality you <u>MUST</u> obtain an Activation Code. **An active internet connection is required.** Follow these steps:

- If you have purchased a multi-seat Floating License, <u>DO NOT</u> enter your network license Activate Code in this License dialog! A Floating License must be activated from within the MecSoft Floating License Manager!
- 1. If the software is currently running in <u>Demo mode</u> and you do not have an active license, select <u>License</u> ... from the <u>CAM Main Menu</u>. The <u>License</u> dialog will then display.


If the software is NOT running and you do not have an active license, launch it now. Then select Activate License for your PAID product from the Get Started! dialog shown below:



Get Started! > Activate Paid Product


The License dialog will then display.

Select the Request Activation Code button from the dialog.

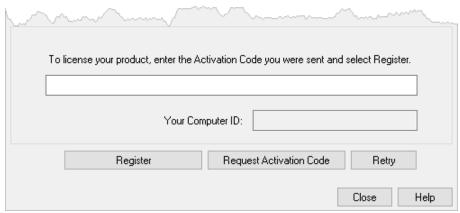


Request an Activation Code

2. You will be taken to the MecSoft Corporation website to complete the Register Products form.

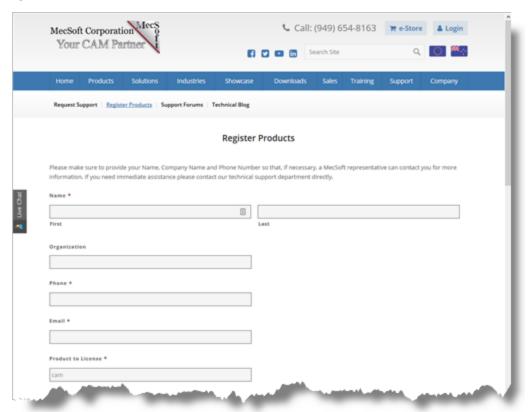


 $Register\ Products\ Form\ at\ MecSoft.com$

3. Complete the Register Products form and then pick the Submit button. **NOTE**: YOU MUST enter a valid email address on this form!

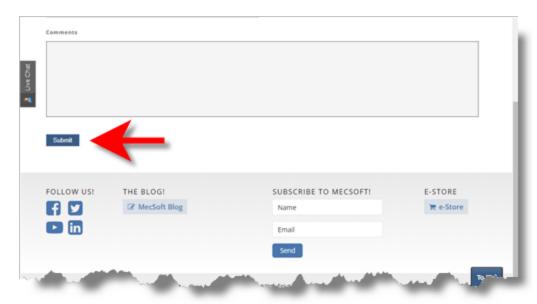


Enter a Valid Email address and Pick the Subnmit button!


- 4. You will receive an email containing your activation code.
- 5. Select License ... from the CAM Main Menu. This will display the License dialog.
- 6. Copy & Paste the **exact** Activation Code you received into the field provided and then pick the Register button. A message will display saying the Registration was successful.
 - Running on Multiple Computers: If you are running the same software license on two or more computers and you check the box next to Automatically release license on product exit from the License dialog, then the product will activated automatically at startup on any computer it is installed on.

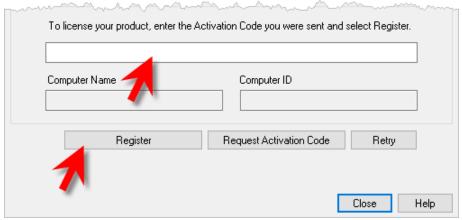

License dialog: Enter your Activation Code and then pick Register

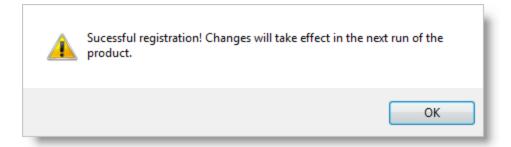


The Product Activation Code section of the License dialog <u>IS ONLY</u> for single user node-locked licenses. If you receive the error message shown below, it means that you are attempting to activate a MecSoft Network License. These activation codes can <u>ONLY</u> be activated from the MecSoft License Server utility.

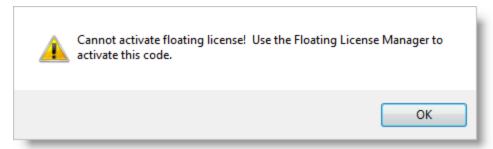

9.4 License Status

Once the product is registered with a valid Activation Code, the following information is displayed in the License dialog:

License Dialog

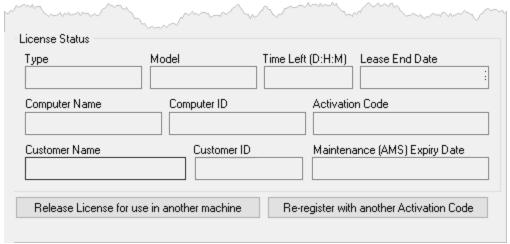

License Dialog (Node Locked License)

Type

This refers to kind of license you have. This could be Demo License, Timed License or Perpetual License. The License Type will appear as Timed License if your license allows you to run the product for a certain number of days as defined by your license grant. If your license grant allows you to run the product in perpetuity the License Type will appear as Perpetual License.

If you have not acquired a license for the product or if you run out of days left on your timed license grant the License Type will appear as Demo License. If this happens, the software will switch to operating in demo mode.

Model

This tells you the license model you are currently running. Please refer to our product activation and licensing guides that we make available to all users.

Cloud

This license has a lease time of 8 hours. If the license has not been in use for 8 hours then it becomes available for use on other machines. This license needs public internet access for activation and periodic renewal of the license lease. This is the default license model all users will be supplied with.

Network Locked

This license is a multiple floating license that is locked to a network. Like the Floating license above it also needs public internet access for activation and periodic renewal of the license lease. The advantage of this license is that clients can be locked to a network thereby preventing inadvertent removal or theft of license(s).

Network

This license uses a LAN Daemon built on top of CentOS 7.0 for serving licenses inside of a host network. This license is used only for completely dark sites such as military and highly sensitive sites. It is not normally available for commercial or educational institutions.

Time Left

This field indicates the number of days you can run the software before it starts operating in demo mode. To register the product you will need to request an Activation Code (see above). The Activation Code is unique to each product and machine.

Lease Left

This field indicates the number of days left in your annual lease, that you can run the software before it starts operating in demo mode. To extend your lease contact sales@mecsoft.com BEFORE your lease runs out.

Computer Name / Computer ID

The Computer Name and Computer ID is generated automatically.

Customer Name / Customer ID

The Customer Name is supplied when you register the product. The Customer ID is generated automatically and is the last set of characters in your activation code.

<u>IMPORTANT:</u> To help expedite any requests for technical support ALWAYS have your Customer ID handy. You will be asked to supply it when leaving voice messages and emails.

Activation Code

The Activation Code will display the code provided to you by MecSoft Licensing.

Annual Maintenance Service (AMS) Expiry Date

This will alert you to when your annual maintenance service (AMS) will expire. Keep your AMS current to enjoy expedited support, bonus CAM modules, CAMJam self training videos and exclusive AMS training publications and webinars!

9.5 Release Node Locked License

You can run your Cloud license on another computer. For example if you have a desktop and a laptop you can run the software on both machines. However, you MUST Release your license from the current machine before activating it on the second machine. **An active internet connection is required.**

Here are the steps:


- 1. Open the software and select License... from the CAM Main Menu. The License dialog will then display.
- 2. To release your license to run on another machine, select one of these options from the License dialog:

Release License transfer to another machine

This immediately contacts our license server and releases the license. The following message will be displayed:

IMPORTANT NOTE:

Your cloud license automatically resets every 8 hours. If you are running the license on more than one computer and forget to release your license, just wait 8 hours and it will release automatically. Likewise, if your computer fails or becomes inoperable, your license will release automatically after 8 hours.

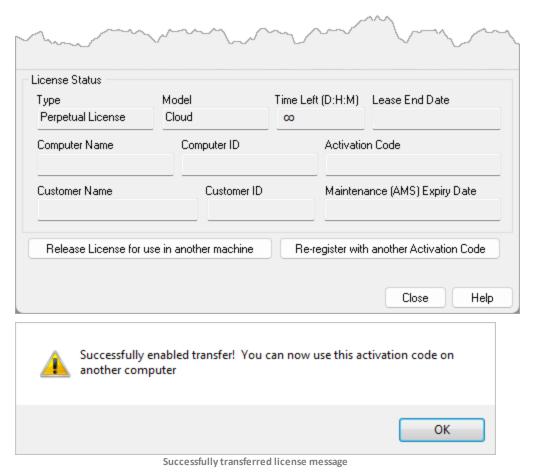


- 3. Now, go to your second machine and display the License dialog.
- 4. Enter your original Activation Code and pick Register.
 - **!** NOTE: If your original Activation Code contained "U-" at the beginning of the code, <u>DO NOT</u> include it here. The Activation Code you enter should <u>ONLY</u> contain a numeric code sequence.
- 5. To move the license back to your desktop machine, follow this same procedure.
- 6. If you plan to switch between two computers regularly, check the box to Automatically release license on product exit (on both computers). Just remember to close the product. (RhinoCAM will remember your activation code after the first time it is activated.


9.6 Re-register Node Locked License

To re-register your Node Locked license with another Activation Code, do the following:


- 1. Run the software and select License... from the Main Menu.
- From the License dialog select the Re-register with another Activation Code button. The Activation Code dialog will then display. An active internet connection is required for this button to display.

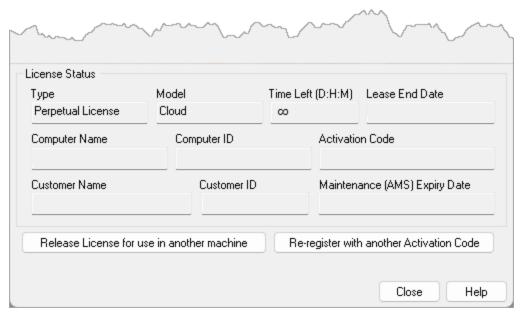

NOTE: <u>DO NOT</u> select this button if you are running a <u>Network License</u> or the following message will be displayed. See <u>Release Network License</u> for more information.

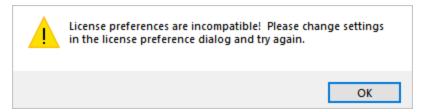

3. Enter your new Activation Code and pick Register.

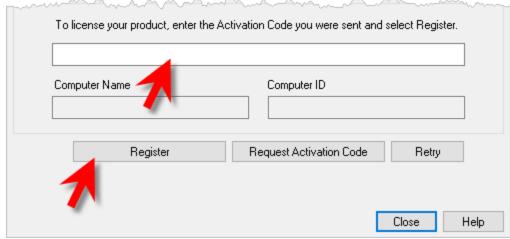

License dialog: Enter your Activation Code and then pick Register


9.7 Release Network License

If you have a Network License it will automatically return the license at exit and also retrieve it on startup. The *Automatically release license on product exit* checkbox option on the <u>License</u> dialog only applies to node locked licenses, not network licenses. Please refer to the <u>Network Installation</u> topic for information about Network Installation and Licensing.

You can release your Network License in one of two ways. Only when your license is released is it returned to the license pool on the MecSoft License Server. You must have an active connection to the license server.


Here are the methods:

- 1. Option 1: Simply close the MecSoft CAM host program and your network license will be returned to the license pool automatically.
- 2. Option 2: To release the license with the MecSoft CAM plugin running, go to the MILL module.
- 3. If the MILL Machining Browser is not displayed, select the CAM main menu and pick MILL to load the MILL module Machining Browser.

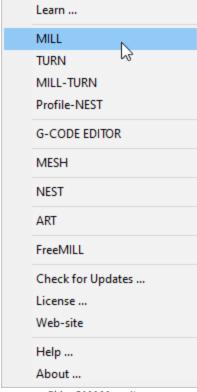


RhinoCAM Menu Item

4. From the Machining Browser select the CAM Preferences icon.

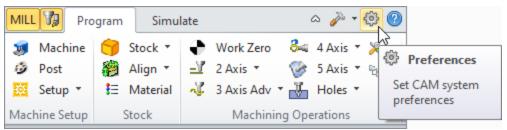


Set CAM System Preferences menu item

5. Select License from the left side of the dialog to display the Licensing Preferences.

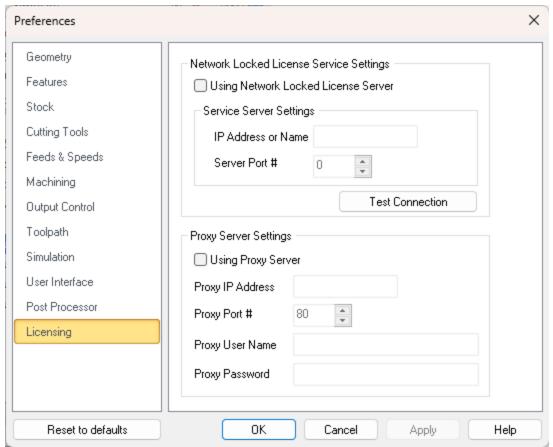


Dialog Box: License Preferences

6. Uncheck the box next to Using LAN Daemon. You will receive a message alerting you that the license was released.

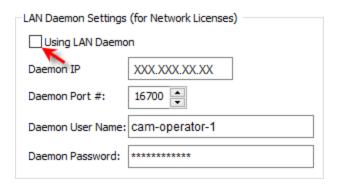

9.8 License Preferences


RhinoCAM allows setting of various CAM user preferences that will be saved even after you exit the program. To access the functions to set CAM preferences, select the Preferences option under the Machining Browser. RhinoCAM allows you to import your CAM Preferences from one version to the next. This is an option during RhinoCAM installation. The License Preferences are shown below. Refer to the Preferences dialog in each CAM module for additional preferences.

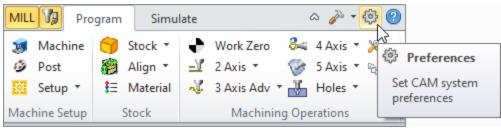

Set CAM System Preferences menu item

This dialog allows you to set Licensing Preferences for using a Proxy Server and/or a LAN Daemon (for Network Licenses). This information would be provided by your network administrator.

Dialog Box: License Preferences

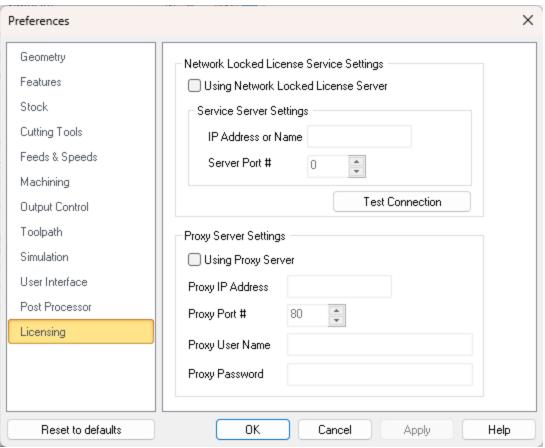

Dialog Box: License Preferences

Proxy Server Settings

Proxy Server Settings need to be set if your computer or network is behind a proxy. A proxy server is a computer that acts as an intermediary between the user's computer and the Internet. It allows client computers to make indirect network connections to other network services.

Using Proxy Server

Check this box to enable Proxy Server Settings and complete ALL of the following fields accurately. This information would be provided by your network administrator.

Proxy IP

This is the IP Address for your Proxy Server. This information would be provided by your network administrator.

Proxy Port #

Enter the Port Number for your Proxy Server. This information would be provided by your network administrator.

Proxy User

Enter the Proxy Server user name. This information would be provided by your network administrator.

Proxv

Enter your Proxy Server password. This information would be provided by your network administrator.

LAN Daemon Settings (for Network Licensing)

LAN Daemon Settings are used for Network licenses. On each client machine you would need to enter the following information in the fields provided.

Using LAN Daemon

Check this box to enable LAN Daemon Settings and complete ALL of the following fields accurately. This information would be provided by your network administrator.

The following message is displayed when this box is unchecked:



Daemon IP

This is the IP Address of the server that hosts the license server. This information would be provided by your network administrator.

Daemon Port

Enter the port # being used by the license server. This information would be provided by vour network administrator.

Daemon User Name

Enter the user name used to set up the account on the license server. This information would be provided by your network administrator.

Daemon

Enter the password used to set up the account on the license server. This information would be provided by your network administrator.



Network Authentication Service Settings

Network authentication is a security process required when a computer on a network tries to connect to the server in order to use its resources. If the user's identity has been stored by the server, entering a valid username and password completes the connection.

Using Network Authentication

Check this box to enable Network Authentication. Then complete the Service Server Settings provided here.

Server IP Address

For Network Authentication, enter the Service Server's IP Address here.

Server Port


For Network Authentication, enter the Service Server's Port # here.




Troubleshooting and Messages

Here are some troubleshooting messages that you may encounter.

If you have node locked license activated and you select Using Lan Daemon, this will display the following message and release your node locked license.

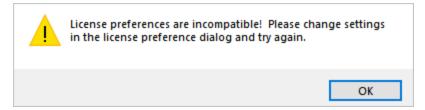

If Using Lan Daemon is checked and you are entering a valid node locked activation code in the license dialog, the following message is displayed. Make sure Using Lan Daemon is unchecked before activating a node-locked license.

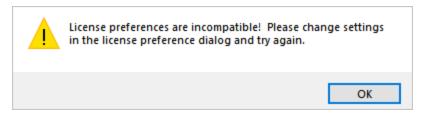


Installation

10.1 Troubleshooting the Installation

After you have installed the software and you find that the RhinoCAM menu does not appear in the main menu of Rhino, please try restarting your computer.

If RhinoCAM does not automatically load there is probably an error in the installation of RhinoCAM. You can try to manually load RhinoCAM by going to the Tools > Options... menu entry in Rhino. This will bring up the dialog shown below:

Dialog Box: Rhino Options

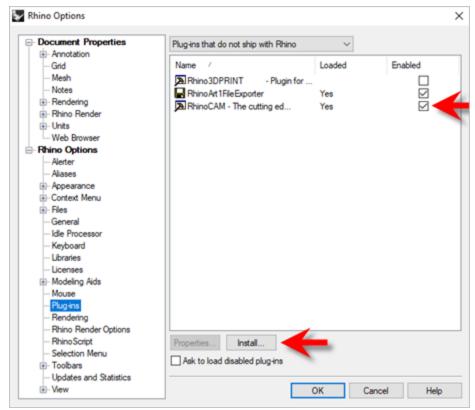

Dialog Box: Rhino Options

Click the Install button. Browse to C:\Program Files\Rhinoceros x.x\Plug-ins\RhinoCAM 2025 for R7 (or R87). Select RhinoCAM 2025 For Rhino7.0.rhp (or RhinoCAM 2025 For Rhino8.0.rhp)

Click OK to close the Rhino Options dialog. Once the plug-in is loaded you will see the RhinoCAM browser windows as well as the RhinoCAM menu bar entry in Rhino. If you exit Rhino normally, RhinoCAM will automatically load the next time you open a new session of Rhino.

Troubleshooting the Software Installation

Make sure that the software was correctly installed. To do this you can browse to the installation folder of RhinoCAM and make sure that the file RhinoCAM 2025 For Rhino7.0.rhp (or RhinoCAM 2025 For Rhino8.0.rhp) is present. Also make sure that all the folders described in the Installation section are correctly installed. If you detect an incorrect installation, uninstall the software completely and reinstall it using the installation program again. This can be done by launching the RhinoCAM install program and selecting the Remove option.

You can uninstall the software from the Control Panel and Add or Remove Program. If you are running Windows 7 or higher, you can uninstall by selecting Uninstall or Change a Program under Control Panel - Programs and Features.

10.2 Network Installation

If you have purchased a multiple seat license of RhinoCAM you will be instructed to follow the steps documented in the MecSoft Network License Installation Guide.

SERVER Installation

Install the MecSoft Network License Server. Please follow the steps documented and provided in the MecSoft Network License Installation Guide.


CLIENT Installation

Install RhinoCAM on the CLIENT machine and then follow the steps documented in the MecSoft Network License Installation Guide for Licensing Client Machines.

More Resources

Download this PDF Guide for a list of the available RhinoCAM Resources.

2025 RhinoCAM Resource Guide

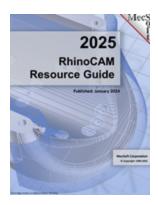

The 2025 RhinoCAM Resource Guide!

18 Pages

Lists PDF downloads and Online resources including Quick Start Guides, Reference Guides, Exercise Guides, Tutorials and More.

<u>Prefer Printed Documentation? Check Here!</u>

<u>What's New | Quick Start Play List</u>

Index

- A -

About RhinoCAM 8
Activating RhinoCAM 19
Activation Code 19

- D -

Demo Mode 16

- | -

Installation 10
Troubleshooting 33

- L -

License

Activation 19
Demo Mode 16
Dialog 16
Release to another machine 24
Re-register with another Activation Code 25
Status 22

- N -

Network Installation 34

- R -

Requirements 9
RhinoCAM Main Menu 14
Running RhinoCAM 13

- W -

Welcome to RhinoCAM 3